

# KYOCERA Milano

## User Guide



© 2013 Kyocera Corporation. All Rights Reserved. Boost, the Logo, Re-Boost and Boost Mobile are trademarks of Boost Worldwide, Inc. Other marks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

# Table of Contents

---

Get Started .....	1
Your Device at a Glance.....	1
Set Up Your Device.....	2
Set Up Voicemail.....	3
Mobile ID .....	4
Installing an ID Pack .....	4
Switching ID Packs .....	5
Getting Help .....	5
Managing Your Account.....	5
Directory Assistance 411 .....	5
Device Basics .....	7
Your Device's Layout.....	8
Key Functions .....	8
Turn Your Device On and Off .....	9
Turn Your Device On .....	10
Turn Your Device Off .....	10
Turn Your Screen On and Off.....	10
Turn the Screen Off When Not in Use.....	10
Turn the Screen On and Unlock It.....	10
Touchscreen Navigation.....	11
Touch.....	11
Touch and Hold.....	11
Drag.....	11
Slide or Flick .....	11
Pinch and Spread .....	11
Rotate .....	11
Your Home Screen.....	12
Customize the Home Screen .....	13
Extended Screens.....	14
Status Bar .....	15

Status Icons .....	15
Notification Icons.....	16
Enter Text.....	16
Slide-Out QWERTY Keyboard .....	16
Onscreen Keyboards .....	18
Entering Text Using Swype.....	18
Entering Text Using the Android Keyboard .....	22
Tips for Editing Text .....	25
Google Account.....	27
Create a Google Account.....	28
Sign In to Your Google Account .....	29
Add Account .....	29
General Sync Settings .....	29
Phone .....	31
Make Phone Calls .....	31
Call Using the Phone Dialpad .....	31
Call From Recent Calls .....	32
Call From Contacts .....	32
Call a Number in a Text Message .....	33
Call Emergency Numbers .....	33
Call Numbers with Pauses .....	34
Call Using Plus (+) Code Dialing.....	34
Call Using the Internet Calling.....	34
Receive Phone Calls .....	35
Answer an Incoming Call .....	35
Mute the Ringtone.....	36
Reject an Incoming Call .....	36
Reject a Call and Send a Text Message .....	36
Visual Voicemail .....	36
Set Up Visual Voicemail.....	36
Review Visual Voicemail .....	37
Listen to Multiple Voicemail Messages.....	38
Compose a Message .....	38

Configure Visual Voicemail Settings.....	39
Change Your Main Greeting via the Voicemail Menu .....	39
Edit the Display Name via the Voicemail Menu .....	40
Voicemail (Traditional).....	40
Set Up Voicemail .....	40
Voicemail Notification.....	40
Retrieve Your Voicemail Messages.....	41
Phone Call Options.....	41
Caller ID.....	42
Call Waiting.....	42
3-Way Calling .....	42
Call Forwarding.....	43
In-Call Options .....	43
Call Log .....	45
View Recent Calls.....	45
Call Log Options .....	45
Clear Call Logs .....	45
Device Settings.....	47
Wireless & Network Settings .....	47
Airplane Mode.....	48
Wi-Fi Settings .....	48
Bluetooth Settings.....	48
Mobile Networks .....	48
Call Settings .....	48
Voicemail .....	48
Other Call Settings.....	49
Internet Call Settings.....	50
Sound Settings .....	50
General.....	50
Incoming Calls .....	51
Notifications .....	51
Feedback.....	51
Display Settings.....	52

Brightness.....	52
Auto-rotate Screen.....	52
Animation.....	53
Screen Timeout.....	53
Keyboard Timeout.....	53
Notification Blink .....	53
Location & Security Settings.....	53
My Location .....	54
Screen Lock.....	54
Passwords .....	56
Device Administration .....	57
Credential Storage .....	57
PC Connection .....	58
Applications.....	58
Application Settings .....	58
Accounts & Sync .....	60
Privacy .....	60
Backup and Restore .....	60
Personal Data .....	61
Storage.....	61
Language & Keyboard.....	61
Voice Input & Output .....	62
Accessibility.....	62
Accessibility .....	62
Power Button Ends Call .....	62
Date & Time .....	62
Activate This Device .....	62
About Phone.....	63
Update Your Device.....	63
Contacts.....	65
Get Started with Contacts.....	65
Access Contacts .....	65
The Contacts List.....	65

Add a Contact.....	66
Save a Phone Number .....	67
Edit a Contact.....	68
Add or Edit Information for a Contact .....	68
Assign a Stored Picture to a Contact.....	68
Assign a New Picture to a Contact.....	69
Assign a Ringtone to a Contact.....	69
Add a Contact to Favorites.....	69
Delete a Contact .....	70
Synchronize Contacts.....	70
Display Options.....	70
Display or Hide Contacts .....	71
Share a Contact .....	71
Messaging .....	72
Gmail.....	72
Access Gmail.....	72
Send a Gmail Message.....	73
Read and Reply to Gmail Messages .....	73
Email .....	74
Add an Email Account (POP3 or IMAP) .....	74
Add a Corporate Account.....	75
Create Another Email Account.....	76
Compose and Send Email .....	76
View and Reply to Email .....	77
Manage Your Email Inbox.....	77
Email Account Settings .....	78
Delete an Email Account.....	79
Text Messaging and MMS .....	79
Compose Text Messages .....	79
Send a Multimedia Message (MMS) .....	80
Save and Resume a Draft Message.....	81
New Messages Notification.....	81
Managing Message Conversations .....	82

Text and MMS Options .....	83
Social Networking Accounts .....	85
YouTube .....	85
Google+ .....	86
Facebook .....	86
Google Talk .....	86
Signing In and Chatting .....	87
Managing Your Friends .....	88
Mobile Indicators .....	89
Signing Out .....	89
Google Talk Settings .....	89
Applications and Entertainment .....	91
Google Play .....	91
Find and Install an App .....	91
Create a Google Wallet Account .....	93
Request a Refund for a Paid App .....	93
Open an Installed App .....	93
Uninstall an App .....	94
Get Help with Google Play .....	94
Navigation .....	94
Google Maps .....	95
Google Navigation .....	97
Google Latitude .....	97
Google Play Music App .....	100
Opening the Play Music Library .....	100
Playing Music .....	100
Search for Music in the Play Music Library .....	103
Using Playlists .....	103
Boost Zone .....	104
Web and Data .....	105
Wi-Fi .....	105
Turn Wi-Fi On and Connect to a Wireless Network .....	105
Check the Wireless Network Status .....	106

Connect to a Different Wi-Fi Network .....	106
Data Services .....	107
Launch a Web Connection .....	107
Data Connection Status and Indicators .....	107
Browser .....	108
Learn to Navigate the Browser .....	108
Browser Menu .....	109
Select Text on a Web Page .....	111
Go to a Specific Website .....	111
Adjust Browser Page Settings .....	111
Adjust Browser Privacy Settings .....	112
Adjust Browser Security Settings .....	113
Set Search Engine .....	113
Create Website Settings .....	113
Reset the Browser to Default .....	114
Set the Browser Home Page .....	114
Create Bookmarks .....	114
Create a New Home Page .....	115
Add Bookmarks to Your Home Screen .....	115
Camera and Video .....	116
Take Pictures .....	116
Open the Camera .....	116
Camera Viewfinder Screen .....	117
Review Screen .....	118
Take a Picture .....	119
Close the Camera .....	120
Record Videos .....	120
Video Viewfinder Screen .....	120
Record a Video .....	121
Camera/Video Settings .....	121
View Pictures and Videos Using Gallery .....	122
Open Gallery .....	122
View Photos and Videos .....	124



Zoom In or Out on a Photo.....	124
Watch a Video .....	125
Close Gallery .....	125
Working with Photos.....	125
Rotate and Save a Photo .....	125
Crop a Photo.....	125
Share Photos and Videos .....	126
Send Photos or Videos by Email/Gmail.....	126
Send Photos or Videos by Multimedia Message .....	127
Send Photos or Videos Using Bluetooth .....	127
Share Photos on Picasa.....	127
Share Videos on YouTube .....	128
Tools and Calendar.....	129
Calendar.....	129
Add an Event to the Calendar .....	129
Invite Guests to Your Event.....	130
Event Alerts .....	131
View Events.....	131
Erase Events .....	133
Show or Hide Calendars .....	134
Synchronize Calendars with Your Device.....	134
Clock & Alarm.....	134
Opening Clock .....	135
Setting an Alarm .....	135
Changing Alarm Settings .....	137
Calculator .....	137
Voice Service .....	137
Automatic Speech Recognition (ASR).....	137
Google Voice Recognition Settings.....	138
Text-to-speech Settings .....	139
Voice Search .....	139
Eco Mode .....	139
Bluetooth.....	141

Turn Bluetooth On or Off .....	141
The Bluetooth Settings Menu .....	141
Change the Device Name.....	142
Connect a Bluetooth Headset or Car Kit.....	142
Reconnect a Headset or Car Kit .....	143
Disconnect or Unpair From a Bluetooth Device .....	143
Send and Receive Information Using Bluetooth.....	144
Send Information From Your Device to Another Device .....	144
Receive Information From Another Device.....	145
microSD Card .....	147
Remove the microSD Card.....	147
Install a microSD Card.....	148
View the microSD Card Memory.....	149
Unmount the microSD Card.....	149
Format the microSD Card.....	150
Use the Device’s microSD Card as a USB Drive .....	150
Important Safety Information .....	151
General Precautions.....	151
Maintaining Safe Use of and Access to Your Phone.....	151
Do Not Rely on Your Phone for Emergency Calls .....	151
Using Your Phone While Driving .....	151
Following Safety Guidelines .....	152
Using Your Phone Near Other Electronic Devices .....	152
Personal Implantable Medical Devices.....	152
Turning Off Your Phone Before Flying .....	152
Turning Off Your Phone in Dangerous Areas .....	152
Restricting Children’s Access to Your Phone .....	153
Using Your Phone With a Hearing Aid Device .....	153
Getting the Best Hearing Device Experience With Your Phone.....	154
Caring for the Battery .....	154
Protecting Your Battery .....	154
Charging .....	155
Storing .....	155

Disposal of Lithium Ion (Li-Ion) Batteries.....	155
Radio Frequency (RF) Energy .....	156
Specific Absorption Rates (SAR) for Wireless Phones .....	156
FCC Notice .....	157
Owner’s Record.....	158
Manufacturer’s Warranty.....	159
Manufacturer’s Warranty .....	159
End Users License Agreement.....	161
Kyocera Communications, Inc. (“Kyocera”) End User License Agreement .....	161
Notes .....	164
Copyrights.....	165
Index.....	166

# Get Started

---

This section gives you all the information you need to set up your device and the Boost Mobile service the first time.

[Your Device at a Glance](#)

[Set Up Your Device](#)

[Set Up Voicemail](#)

[Mobile ID](#)

[Getting Help](#)

## Your Device at a Glance



# Set Up Your Device

You must first install and charge the battery to begin setting up your device.

## 1. Install the battery.

- Hook your thumb- or fingernail into the slot at the bottom of the battery compartment cover and lift the cover off gently (Figure 1).

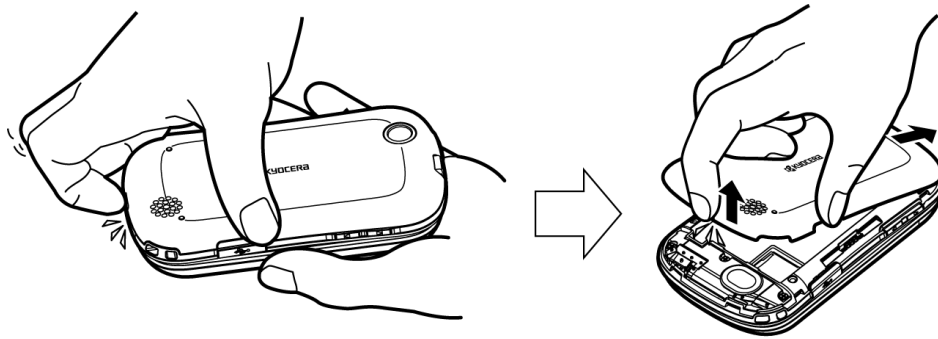


Figure 1

- Insert the battery, contacts end first, and gently press into place (Figure 2).

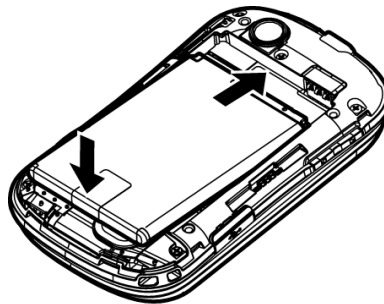


Figure 2

- Replace the cover, making sure all tabs have seated and there are no gaps (Figure 3).


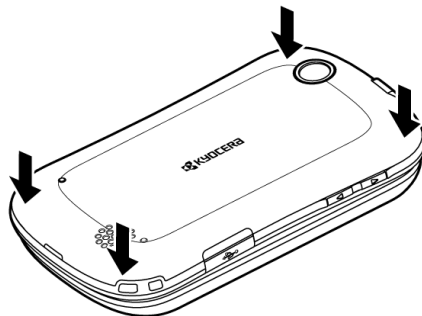


Figure 3

2. Charge your battery.

- Plug the smaller end of the micro-USB cable into the device's charger/accessory jack.

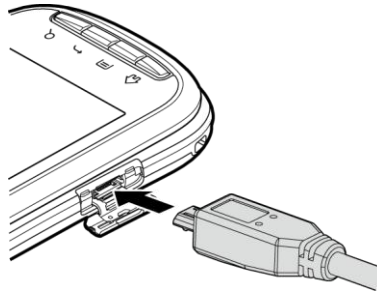

- Plug the other end of the USB cable into the charger, and then plug the charger into an electrical outlet.

**Note:** Your device's battery should have enough charge for the device to turn on and find a signal, set up voicemail, and make a call. You should fully charge the battery as soon as possible.



3. Press and hold the **Power** button to turn your device on.

- If your device is activated, it will turn on, search for the service.
- If your device is not yet activated, see the "Activation" section of your "Get Started Guide" for more information.

## Set Up Voicemail




You should set up your voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access. Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. See [Visual Voicemail](#) and [Voicemail \(Traditional\)](#) for details.

To set up visual voicemail:

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.
3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.
4. Once you have completed the setup process, return to the voicemail page (see step 1).

5. Touch the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

To set up traditional voicemail:

1. Press **Home** , and touch .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important:** **Voicemail Password** – Boost Mobile strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## Mobile ID

Once your device is activated, you will be prompted to install the Mobile ID pack. ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Mobile ID.




You can install as many as five ID Packs at any one time in addition to the default My ID Pack. You can easily switch from one ID Pack to another without losing any applications already installed.

[Installing an ID Pack](#)

[Switching ID Packs](#)



### Installing an ID Pack

**Note:** Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. Press **Home** , and touch . (If your screen is locked, press the **Power** button to turn on the display, and then touch  and flick it to unlock the screen.).
2. Touch **Get New ID Packs** on the Choose your ID screen.
3. Touch the desired ID Pack.

4. Read the information screen for a description of the ID Pack and touch **Install**.
5. Read the Terms & Conditions and touch **Agree**.
  - If a **Downloading** message appears, read the message and touch **Continue**.
6. Once your pack has completed downloading, it will automatically install and appear as your current ID pack.

## Switching ID Packs

1. Press **Home** , and touch **iD** .
2. Touch an ID Pack to replace your current pack.



- or -

Touch **Get New ID Packs** to install a new ID Pack and follow steps 3–6 of [Installing an ID Pack](#).

**Note:** Certain features of Mobile ID are subject to change. For the most up-to-date information about using Mobile ID, please visit [boostmobile.com/id](http://boostmobile.com/id).

## Getting Help

### Managing Your Account

You can go to 'My Account' on [boostmobile.com](http://boostmobile.com) to view your account information, recharge your account, or to make account changes. To log into 'My Account', you will need your 10-digit phone number and the Account PIN number you set up at activation. Or from your phone, simply press **Home**  > , and touch **Boost Zone** to access various self-service tools.

### From Your Boost Phone

- Dial **#225 (#BAL)** to check account balance.
- Dial **#233 (#ADD)** to make a payment.
- Dial **#611** to launch Boost Zone or call Boost Customer Care (depending on your Settings) to get answers to other questions.

### From Any Other Phone







- Boost Customer Care: **1-888-BOOST-4U (1-888-266-7848)**.

### Directory Assistance 411

Directory Assistance 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions,



restaurant reservations and major local event information. A per-call charge and standard airtime fee may apply depending on your plan.

▶ Press **Home** , and then touch  >    .

# *Device Basics*

---

Your device is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The topics in this section will introduce the basic functions and features of your phone.

[Your Device's Layout](#)

[Turn Your Device On and Off](#)

[Turn Your Screen On and Off](#)

[Touchscreen Navigation](#)

[Your Home Screen](#)

[Status Bar](#)

[Enter Text](#)

[Google Account](#)

# Your Device's Layout

The illustrations below outline your phone's basic layout.



## Key Functions

- **Proximity Sensor/Light Sensor** automatically deactivate the touchscreen when you hold the device near your face. This prevents you from unintentionally activating device functions during a call. It also automatically turns off the keyboard backlight and brightens the display when you are in sunlight or a bright room, and turns on the keyboard backlight and dims the display in darker places.
- **Home Key** (🏠) returns you to the Home screen. Touch and hold to show the recently used applications.
- **Menu Key** (☰) lets you open the menus of the current screen or application.
- **Back Key** (↶) returns you to the previous screen or closes the dialog box.

- **Search Key** (🔍) allows you to activate the Search function to search information on your device and the Internet.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **Display Screen** displays all the information needed to operate your device. Use finger gestures to navigate and interact with items on the screen.
- **LED Indicator** shows your device's battery status. It also flashes for incoming calls or pending notifications.
- **Earpiece** lets you hear the caller and automated prompts.
- **Camera Button** lets you activate the camera and camcorder and take pictures and videos.
- **Power Button** lets you turn the device on or off, or turn the screen backlight on or off. This button can be configured to end a call. (See [Power Button Ends Call.](#))
- **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
- **Internal Antenna** facilitates reception and transmission. To maximize performance, do not obstruct while using the device.
- **Speaker** lets you hear the different ringtones and sounds. It also lets you hear the caller's voice in speakerphone mode.
- **microSD Card Slot** (internal) allows you to insert a microSD card to support external memory.

**Note:** Your device comes with the microSD card preinstalled.

- **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the device.
- **Volume Button** allows you to adjust the ringtone and media volumes when you are not on a call, or the voice volume during a call.
- **Charger/Accessory Jack** allows you to connect the micro-USB cable (included) to charge the battery or to transfer files to and from a computer.

**CAUTION!** Inserting an accessory into the incorrect jack may damage the device.


## *Turn Your Device On and Off*

[Turn Your Device On](#)

[Turn Your Device Off](#)

## Turn Your Device On

- ▶ Press and hold the **Power** button.

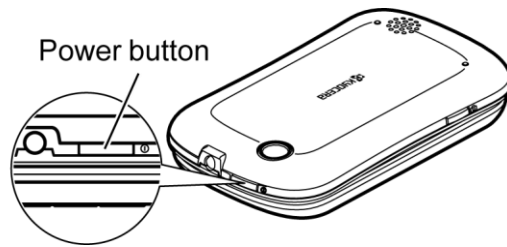

## Turn Your Device Off

- ▶ Press and hold the **Power** button to open the phone options menu. Touch **Power off** to turn the device off.

Your screen remains blank while your device is off.

## Turn Your Screen On and Off

Turn the Screen Off When Not in Use

Turn the Screen On and Unlock It



### Turn the Screen Off When Not in Use

- ▶ To quickly turn the screen off, press the **Power** button. Pressing the **Power** button again will turn on your device screen and show the lock screen.

To save battery power, the device automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the device's screen is off.

**Note:** For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

### Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power** button.
2. Flick  until it turns to  (with a green frame) to unlock the screen.

- or -

Open the Slide-Out QWERTY keyboard.

- If you have set up a screen unlock security, you will be prompted to draw the pattern or enter the password or PIN. See [Screen Lock](#).

# *Touchscreen Navigation*

Your device's touchscreen lets you control actions through a variety of touch gestures.

Touch

Touch and Hold

Drag

Slide or Flick

Pinch and Spread

Rotate

## *Touch*

Touch once with your finger to select or launch a menu, option, or application. A light touch works best.

## *Touch and Hold*

To open the available options for an item (for example, a link in a Web page), simply touch and hold the item.

## *Drag*

Touch and hold your finger before you start to move it. Do not release your finger until you have reached the target position.

## *Slide or Flick*



To slide, quickly move your finger vertically or horizontally across the screen. To flick, move your finger in lighter, quicker strokes than sliding. This finger gesture is always used in a vertical motion, such as when scrolling through contacts or a message list.

## *Pinch and Spread*

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

## *Rotate*

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the device sideways.


**Note:** The Auto-rotate screen check box in **Home**  > **Menu**  > **Settings** > **Display** needs to be selected for the screen orientation to automatically change.


# Your Home Screen

The Home screen is the starting point for your device's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

## Customize the Home Screen

### Extended Screens

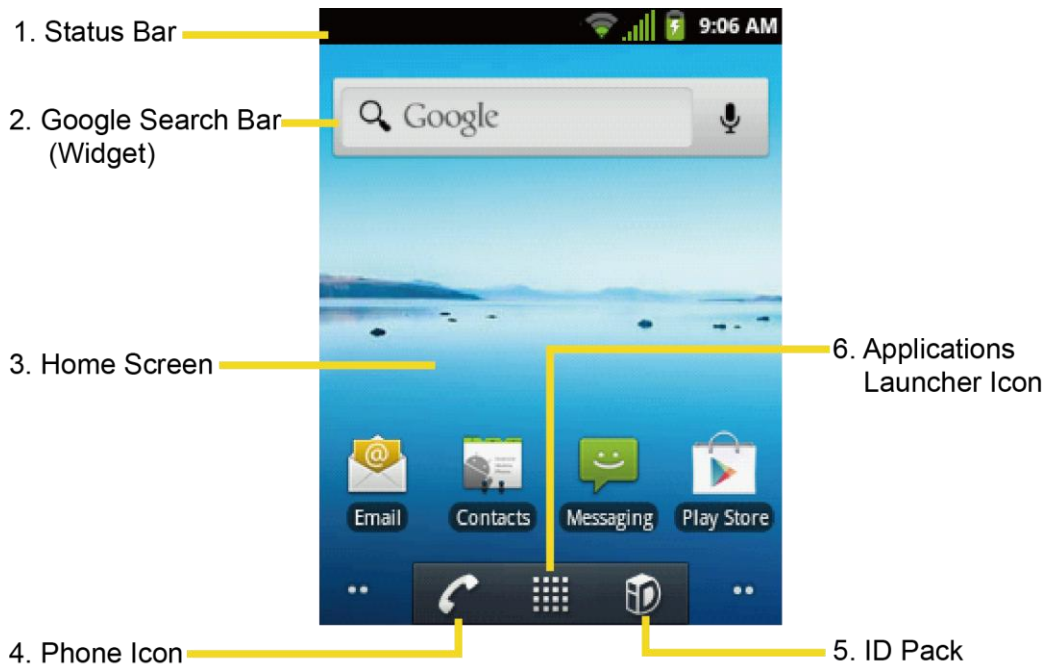

1. **Status Bar:** Displays the time, notification, and device status icons. Slide down to display the Notifications panel.
2. **Google Search Bar:** Allows users to enter text or spoken keywords for a quick search on the device or on the Internet. Touch to enter text or touch  to speak your keyword.
3. **Home Screen:** Displays shortcut icons, widgets, wallpapers, and folders.
4. **Phone Icon:** Touch to open the phone-related screen functions (Phone, Call log, Contacts, and Favorites).
5. **ID Pack:** Allows users to switch the ID Pack or get a new pack.
6. **Applications Launcher Icon:** Touch to display available applications on the device.

## *Customize the Home Screen*

### *Add Items to the Home Screen or an Extended Screen*


1. Touch and hold an empty area on a screen. (If the current screen doesn't have room, swipe the screen left or right to display an extended screen.)
2. On the **Add to Home screen** menu, touch the type of item you want to add and then select the item.
  - **Shortcuts:** Add shortcuts to applications, bookmarks, contacts, settings, and more. Touch a category and then touch the item you want to add.
  - **Widgets:** Add widgets to a screen such as an analog clock, calendar, Eco Mode, and more.
  - **Folders:** Add a folder where you can organize screen items. Add a shortcut to all your contacts, contacts with phone numbers, or starred contacts. Contact details are automatically updated when there are changes in the source.
  - **Wallpapers:** Select a wallpaper source from Gallery, ID wallpapers, live wallpapers, or other preloaded options.


### *Move or Remove Items on the Home Screen or an Extended Screen*

- ▶ Touch and hold the item you want to move or remove from the screen.
  - To move the item, drag it to a new area and release it.
  - To remove the item, touch and hold the item until a trash can appears at the bottom of the screen, and then drag the item until it turns red, and release your finger.



## Extended Screens

In addition to the Home screen, your phone has four extended screens to provide more space for adding icons, widgets, and more. Press **Home**  and then drag across the screen to move from the screen to an extended screen.

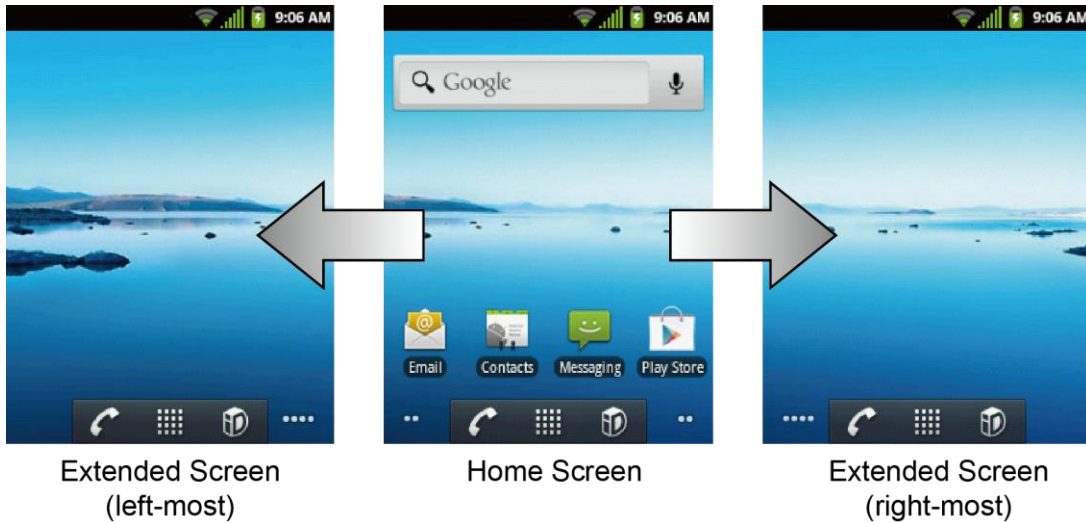

- You cannot add more screens.
- While on an extended screen, press **Home**  to return to the Home screen.

To go directly to a particular screen:

1. Touch and hold the small dots you see on the lower left and right corner of the screen. They indicate the number of available screens to either side.
2. Touch a thumbnail to open the associated screen.

# Status Bar
















The status bar at the top of the screen provides device and service status information on the right side and notification alerts on the left. To view notification alerts, slide the status bar down.

## Status Icons

## Notification Icons








 

# Status Icons



Icon	Description
	Bluetooth® enabled
	When animating, GPS is active
	Wi-Fi® active (full signal)
	Vibrate
	Silent
	Speakerphone active
	Network (full signal)
	Network (no signal)
	3G (data service)
	Airplane mode
	Sync active
	Alarm set
	Battery (charging)
	Battery (full charge)
	Battery(discharged)

## Notification Icons



Icon	Description
	Missed call
	New email
	New Gmail
	New message
	Event
	Music playing
	USB connection
	Alarm
	Downloading

## Enter Text

You can type on your device using either the Slide-Out QWERTY keyboard or one of the available touchscreen keyboards.

[Slide-Out QWERTY Keyboard](#)

[Onscreen Keyboards](#)

[Entering Text Using Swype](#)

[Entering Text Using the Android Keyboard](#)

[Tips for Editing Text](#)

### *Slide-Out QWERTY Keyboard*

Open the Slide-Out QWERTY keyboard to type faster and more conveniently with your fingers. The Slide-Out keyboard also comes with special keys that let you quickly access menus and search your phone.

1. Hold the phone sideways, with the front panel buttons to your right
2. Push the screen panel up with your thumbs to reveal the Slide-Out keyboard.







**Note:** When the Slide-Out keyboard is opened, the display stays in landscape mode and you will not be able to use the onscreen keyboard.



3. Start an app or select a field that requires text or number entry.
4. Press the letter keys to enter text. Press the following keys to enter uppercase letters, numbers, special characters, or symbols:
  - **Shift key** (⇧)
    - Press once to capitalize the next letter you select.
    - Press twice to lock the shift key and type a series of uppercase letters. (This works just like the Caps Lock key on your computer keyboard.) The cursor changes when you lock the shift key.
    - To unlock, press the shift key once again.
  - **Function key** (fn)
    - Press to enter the number or symbol located at the upper right corner of the key (for example #, \*, &, +, !). Press this key first and then any corresponding key.
    - Press twice to lock the function key. The cursor changes when you lock the function key.
    - To unlock, press the function key once again.

**Note:** Do not confuse with the four keys at the bottom of your device when closed and in portrait orientation. These keys can also be referred to as “function keys.”

- **Symbol key** (sym)



- Press to open the Symbols window. Touch the symbol you want to insert into your text.
5. Press these keys to perform other actions:
- **Navigation keys** (   )
    - Press to scroll through the phone's menu options. On the text input screen, press to move the cursor.
  - **Enter key** ()
    - Press to insert a line feed in text input mode, or access the phone's menus and select the highlighted choice when navigating through a menu.
  - **Backspace key** ()
    - Press to delete characters from the display in text input mode.

## Onscreen Keyboards

Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text. To manually display the onscreen keyboard, simply touch a text field where you want to enter text. There are two ways of entering text on your device: **Swype** and **Android keyboard**.

**Note:** Swype is selected as a default keyboard.

To disable the onscreen keyboard:

1. Press **Home**  > **Menu** , and touch **Settings** > **Language & keyboard**.
2. Uncheck **Swype** or **Android keyboard**.
  - If you uncheck both, you disable both onscreen keyboards and can use the QWERTY keyboard only. See [Slide-Out QWERTY Keyboard](#).

To switch the onscreen keyboard:

1. From a screen where you can enter text, touch and hold a text entry field, and then touch **Input method**.
2. Choose **Swype** or **Android keyboard**.

## Entering Text Using Swype

Swype allows you to enter text by sliding your finger from letter to letter rather than touching each key individually. To enter text, slide your finger from one letter to the next.

## Swype Keyboard Overview



**Note:** Key appearance may vary depending on the selected application.



Example: dog  
Place your finger on the key with the first letter of the word and glide to the following letters. Lift your finger after the last letter.











 
Example: cool  
For double letters, circle the letter.




Example: You  
To capitalize the letter, slide  
up over the keyboard.





**Tip:** For tips on using Swype, touch the Swype key  and follow the onscreen information.


You can do the following with the Swype keyboard:

	<b>Text mode:</b> Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	
	<b>Swype Key:</b> Touch to access the tips, tutorial, and settings of Swype.
	<b>Voice input mode:</b> Touch to enter text using your voice.
	<b>Backspace:</b> Touch to delete a character. Touch and hold to delete multiple characters.
	<b>Smiley:</b> Touch to insert a smiley. Touch and hold to view and select other smileys.
	<b>Space:</b> Touch to insert a space.
	<b>Enter:</b> Touch to confirm your entry.
	<b>Shift:</b> Touch to toggle between the uppercase and lowercase text input. To turn on Caps lock, double touch this key. Touch it again to turn Caps lock off.



### ABC Mode

In ABC mode, you can enter only letters from the onscreen keyboard. While in this mode, the text mode key displays .


- Select the ABC mode by touching .
  - Capitalization in ABC mode can be altered by touching .
    -  (Unshifted) to make all letters in a word lowercase.
    -  (One-character-shifted) to capitalize only the first letter of a word.

 (Caps Lock) to make all letters in a word uppercase.



2. Enter text using the keyboard.

- If you make a mistake, touch  to erase a single character. Touch and hold  to erase an entire word.

### *Numbers & Symbol Mode*

In Number & Symbol mode, you can enter only numbers and symbols from the onscreen keyboard. While in this mode, the text mode key displays .

To enter numbers and symbols in Swype mode:

1. Select the Number & Symbol mode by touching .
2. Touch the key for the number or symbol you want to enter. To select from additional symbol characters, touch .

### *Swype Settings*

1. From the Numbers & Symbol mode, touch , and then touch .

- or -

Press **Home**  > **Menu** , and touch **Settings > Language & keyboard > Swype**.

2. Choose from the following options:
  - **Language:** Touch to select Swype language.
  - **Word prediction:** Touch to activate word prediction when typing in Swype.
  - **Audio feedback:** Touch to turn on sounds from Swype.
  - **Vibrate on keypress:** Check to activate vibration when a key is touched.
  - **Enable tip indicator:** Check to turn on a flashing indicator for quick help.
  - **Auto-spacing:** Check to automatically insert spaces between words.
  - **Auto-capitalization:** Check to automatically capitalize the first letter of sentence.
  - **Show complete trace:** Check to display the complete Swype path.
  - **Word choice window:** Touch to display the word choice window.



- **Speed vs. accuracy:** Touch to set how quickly Swype responds to input.
- **Swype help:** Touch to open the user manual for Swype.
- **Tutorial:** Touch to learn Swype in quick steps.
- **Version:** Displays the current Swype version.

## Entering Text Using the Android Keyboard


 

 
 

 
When entering text, you can choose to use the Android keyboard. To switch from the Swype keyboard to Android keyboard, touch and hold a text entry field, and then touch **Input method > Android keyboard**.

### Android Keyboard Overview

 







You can do the following with the Android keyboard:

	<p><b>Shift:</b> Touch to toggle between lower case, upper case, and Caps lock.</p>
--	---


 	<b>Text mode:</b> Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	<b>Input options:</b> Touch to access the input options menu.
	<b>Smiley:</b> Touch to insert a smiley. Touch and hold to view and select other smileys.
	<b>Next:</b> Touch to go to the next text entry field.
	<b>Alternate:</b> Touch to display more symbols. Touch again to return to Number & Symbol keyboard.
	<b>Go:</b> Touch to go to a Web address.

### *ABC Mode*


In ABC mode, you can enter letters and numbers from the onscreen keyboard. To enter numbers, touch and hold the key with the number you want to insert. While in this mode, the text mode key displays .

- Select the ABC mode by touching .
  - You can switch the capitalization style in ABC mode by touching the shift key .
    -  (Unshifted) to make all letters in a word lowercase.
    -  (One-character-shifted) to capitalize only the first letter of a word.
    -  (Caps Lock) to make all letters in a word uppercase.
- Touch the corresponding alphabet keys to enter the word.

 
### *Numbers and Symbols Mode*

In Number & Symbol mode, you can enter numbers and symbols only from the onscreen keyboard. While in this mode, the text mode key displays .


To enter numbers:

- Select the Number & Symbol mode by touching .
- Touch the appropriate numeric key.

To enter symbols:

1. Select the Number & Symbol mode by touching .
2. Touch the appropriate symbol key.



- or -

Touch  to select from additional symbol characters. (A yellow light will appear in the key when the additional character set is active.)

### *Android Keyboard Settings*

1. Touch  on the Android keyboard, and then touch **Android keyboard settings**.

- or -

Press **Home**  > **Menu** , and touch **Settings > Language & keyboard > Android keyboard**.

2. Choose from the following options:
  - **Vibrate on keypress:** Check to activate vibration when a key is touched.
  - **Sound on keypress:** Check to activate a clicking sound when a key is touched.
  - **Popup on keypress:** Check to display a larger image of the key above it when you touch it.
  - **Touch to correct words:** Check to turn on the feature that underlines a word in a text field if you touch the word and the keyboard has suggestions for other words you may have intended.
  - **Auto-capitalization:** Check to automatically set the first letter of a sentence to upper case.
  - **Show settings key:** Touch to select if the keyboard settings key is displayed on the keyboard or not from **Automatic**, **Always show**, or **Always hide**.
  - **Voice input:** Touch to select where the Voice Input key is displayed from **On main keyboard**, **On symbols keyboard**, or **Off**.
  - **Input languages:** Touch to set the input language to **English (United States)** or **Español (Estados Unidos)**. The dictionary for the selected language will be enabled. If you select both, you can switch languages by flicking the space key.

## Word Suggestion Settings

- **Quick fixes:** Check to correct common typing errors when you press the space key.
- **Show suggestions:** Check to display suggested words as you type.
- **Auto-complete:** Check to enter a highlighted word automatically if a space or a punctuation symbol is just after the word.


## Tips for Editing Text

### Entering Text by Speaking


You can use voice input to enter text by speaking anywhere that you can enter text with the onscreen keyboard. Voice input is an experimental feature that uses Google's speech-recognition service, so you must have a data or Wi-Fi connection to use it.

If the onscreen keyboard does not display , voice input is not turned on.

To turn on voice input:




1. Touch  > **Android keyboard settings** > **Voice input**.
2. Touch **On main keyboard** or **On symbols keyboard**.

To enter text by speaking:

1. Touch a text field.
2. Touch  on the keyboard.
3. When prompted to "**Speak now**," say the text you wish to enter into the microphone.

### Adding a Word to the User Dictionary

You can use the user dictionary option to add new words into the dictionary.


1. Press **Home**  > **Menu** , and touch **Settings** > **Language & keyboard** > **User dictionary**.
2. Press **Menu** , and touch **Add** to add a word.
3. Type the word you want to add, and touch **OK**. (A list of words you have added to the dictionary is displayed.)
  - Touch a word to edit or delete it.

## Copying and Pasting Text

In applications that require text entry, such as Messaging, use the copy and paste functions to copy and paste text from one application to another.

To copy and paste the text in the Messaging menu:

1. Open the application or received message that you want to copy text from.
2. Touch and hold the text body to display the options menu.
3. Touch **Select word** or **Select all**.
4. If you touch **Select word**, selection tabs appear, and currently selected words or characters are highlighted. Drag tabs to expand or reduce the range of selected text.

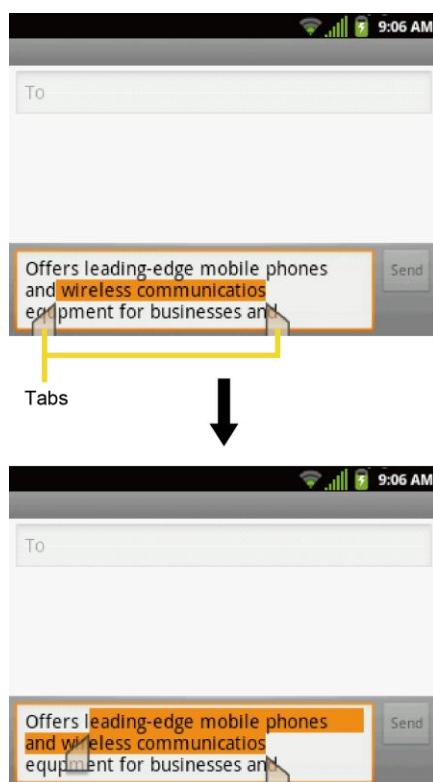


5. Touch the text field and then touch **Copy**.
6. Open the application that you want to paste the text to.
7. Touch and hold the text box where you want to paste the text.
8. If you want to add the selected text to the current text, drag a selection tab to the position where you want to insert selected words or characters.
9. Touch and hold the text box, and touch **Paste**.

To copy and paste the text in email or Gmail:

1. Open the application or received message that you want to copy text from.
2. Touch and hold the text body to display the tabs.
3. Drag tabs to expand or reduce the range of selected text.
4. Touch the selected text.
5. Follow steps 6-9 above.

To copy text from a Web page:

1. When viewing a Web page, press **Menu** , and touch **More > Select text**.
2. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text.
3. Touch the highlighted text.
4. Open the application that you want to paste into.
5. Touch and hold the text box where you want to paste the text, and touch **Paste**.

To copy a URL:

1. To copy a URL, touch and hold the URL to display the options menu.
2. Touch **Copy link URL** or **Copy page url**.
3. Open the application that you want to paste into.
4. Touch and hold the text box where you want to paste the URL, and touch **Paste**.

## *Google Account*

You will need a Google account to access several device features such as Gmail™, Google Maps™, Google Talk™, and Google Play™ applications. Before you can access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

[Create a Google Account](#)

[Sign In to Your Google Account](#)

[Add Account](#)

[General Sync Settings](#)

## Create a Google Account



If you do not already have a Google account, you can create one online or by using your device.

**Note:** Although you need a Gmail account to use certain features of your device, such as Google Play, you do not need to use Gmail as the default account for your device.

### Create a Google Account Online

1. From a computer, launch a Web browser and navigate to [google.com](https://google.com).
2. On the main page, click the **SIGN UP** button at the top right of the screen.
3. Follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

### Create a Google Account Using Your Device



1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch **Add account**, and then touch **Google**.
3. Touch **Next**, and then touch **Create**.
4. Enter your **First name**, **Last name**, and desired **Username**, and then touch **Next**.
5. When prompted, enter and reenter a password and touch **Next**.
6. Create a security question and answer, enter a secondary email address to help you recover your password if you ever lose it, and then touch **Create**.

**Note:** When setting up a new Google account, either on your device or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your device.



7. Read and accept the Google Terms of Service, and then touch **I agree, Next**.
8. Enter the characters shown, and then click **Next**.
9. After your device connects with the Google servers, select if you want to backup your settings or not, and then touch **Next**.
10. Touch **Finish setup** and your device will synchronize the selected items.

## Sign In to Your Google Account

If you already have a Google account, sign in with the account.

1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch **Add account**, and then touch **Google**.
3. Touch **Next**, and then touch **Sign in**.
4. Enter your Gmail username and password, and then touch **Sign in**.
5. After your device connects with the Google servers, select if you backup and restore your settings or data and then touch **Next**.
6. Touch **Finish setup** and your device will synchronize with the selected items.



## Add Account

1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch **Add account**.
3. Touch an account type.
  - Corporate, Google, etc.
4. Enter your account information and touch **Next**.
  - Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Corporate accounts, contact your server administrator to determine what information you will need.
5. Touch **Done** when you are finished.

## General Sync Settings

### Background Data

Check to let applications synchronize data in the background, whether or not you are actively working in them.



- ▶ Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**, and then touch **Background data** to check it.

You need to enable this to use the [Auto-sync](#) feature.

### Auto-sync

Check to permit applications to synchronize data automatically.




1. Press **Home**  > **Menu** , and touch **Settings** > **Accounts & sync**, and then touch **Auto-sync** to select it.

**Note:** You need to enable **Background data** in advance.





2. Touch the account with data you want to sync.
3. Touch the types of data you wish to synchronize automatically. (A check mark indicates the feature is enabled.)

### *Manual Sync*

If you disable **Auto-sync**:

1. Touch the account with data you want to sync.
2. Press **Menu** , and touch **Sync now**.

### *Manage Accounts*

1. Press **Home**  > **Menu** , and touch **Settings** > **Accounts & sync**.
  -  - Indicates that some or all of an account's information is configured to sync automatically with your device.
  -  - Indicates that an account's information is not configured to sync automatically with your device.
2. Touch an account to edit its settings.
  - Touch **Sync Contacts** to synchronize your Contacts between your device and the online account.
  - Touch **Sync Calendar** to synchronize your Calendar between your device and the online account.
  - Touch **Remove account** to delete the account from your device.

# Phone

---

With the Nationwide Sprint Network and your device's phone, you can enjoy clear calling across the country.

[Make Phone Calls](#)

[Receive Phone Calls](#)

[Visual Voicemail](#)

[Voicemail \(Traditional\)](#)

[Phone Call Options](#)

[Call Log](#)

## *Make Phone Calls*

There are several convenient ways to place calls from your device.

[Call Using the Phone Dialpad](#)

[Call From Recent Calls](#)

[Call From Contacts](#)

[Call a Number in a Text Message](#)

[Call Emergency Numbers](#)



[Call Numbers with Pauses](#)


[Call Using Plus \(+\) Code Dialing](#)

[Call Using the Internet Calling](#)


## *Call Using the Phone Dialpad*

The most “traditional” way to place a call is by using the phone's dialpad.

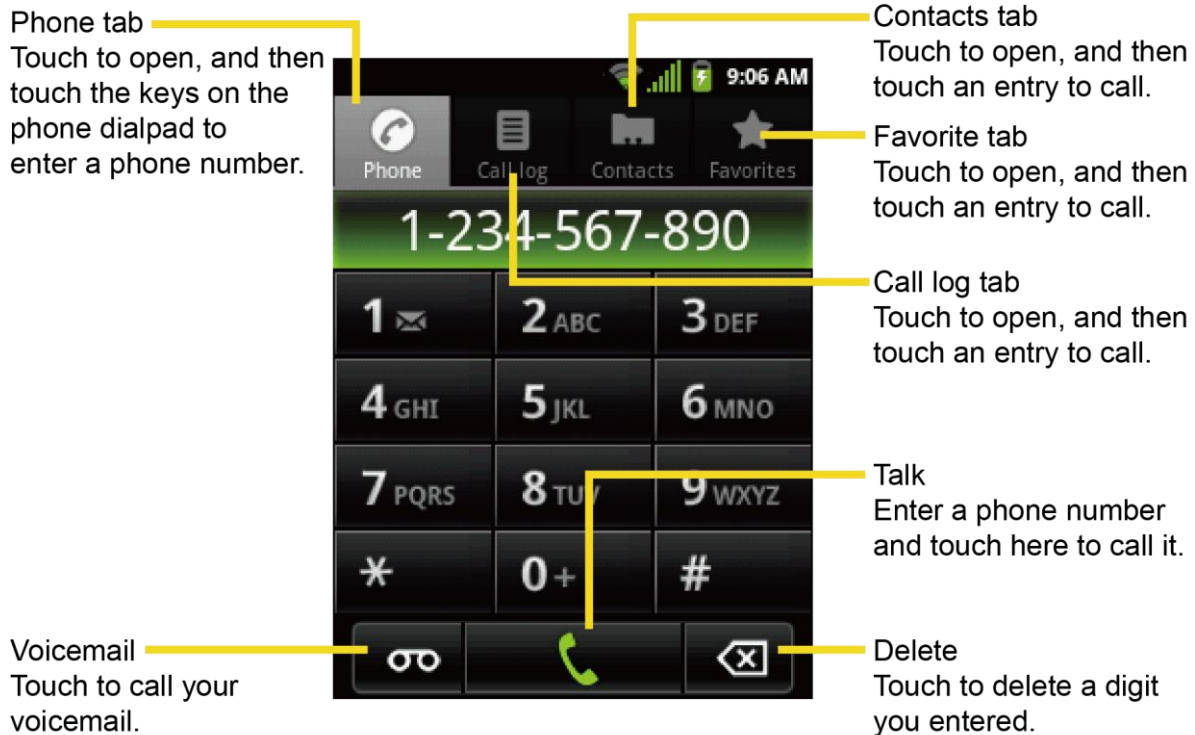


1. Press **Home** , and touch  to display the phone screen.
2. Touch the number keys on the dialpad to enter the phone number.





3. Touch  to call the number.

4. To end the call, touch .

## Call From Recent Calls




1. Press **Home** , and touch  to display the phone screen.
2. Touch **Call log** to display the Call log list.
3. Touch the phone icon  next to a number or contact to place a call.
  - For additional options, touch the name or number.

## Call From Contacts

1. Press **Home** , and touch  to display the phone screen.
2. Touch **Contacts** to display the Contacts list.
3. Touch the contact you want to call and then touch **Call [number type]** to place a call.
  - For additional information on Contacts, see [Contacts](#).

## Call a Number in a Text Message






While viewing a text message, you can place a call to a number that is in the body of the message.

1. Press **Home** , and touch  > **Messaging**.
2. Touch the message with the phone number, and then touch the phone number.
3. The Phone screen then opens, with the phone number automatically filled in and ready to be dialed. To place the call, touch .





## Call Emergency Numbers

You can place calls to 911 even if the device's screen is locked or your account is restricted.

To call the 911 emergency number:

1. Unlock the screen. For more information, see [Turn Your Screen On and Off](#).
2. Touch  on the Home screen.
3. Touch    .

To call the 911 emergency number when the device's screen is locked with a screen lock security:

1. Unlock the screen.
2. Touch **Emergency call** on the screen.
3. Touch    .

### Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your device.





## Call Numbers with Pauses

You can dial phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your device:





**Add 2-sec pause:** Automatically sends the next set of numbers after two seconds.

**Add wait:** Sends the next set of numbers when you touch **Yes** in the pop-up window.

1. Press **Home** , and touch  and enter all or part of a number.
2. Press **Menu** , and touch **Add 2-sec pause** or **Add wait**.
3. Enter additional numbers.
4. Touch  to dial the number.

## Call Using Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.).




1. Press **Home** , and touch  to display the phone screen.
2. Touch and hold  until you see a “+” on the display screen.
3. Enter the country code and phone number, and then touch . The device automatically prepends the access code for international dialing, followed by the country code and phone number.

## Call Using the Internet Calling

When Wi-Fi network is available, you can make and receive calls through an Internet calling account.

**Important:** Calling a phone number using Internet calling may incur additional charges.



### Adding an Internet Calling Account

1. Press **Home**  > **Menu** , and touch **Settings** > **Call settings** > **Accounts**.
2. Touch **Add account**.
3. Enter your account details.
4. Press **Menu** , and touch **Save** to save your account.



5. To set your phone to receive Internet calls on your added account, touch the **Receive incoming calls** check box.

**Note:** This requires the phone to maintain a connection with a Wi-Fi data network, which reduces the life of your phone's battery.

### *Making an Internet Calling*

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact, and then touch **Internet call**.

### *Making an Internet Calling Setting*

1. Press **Home**  > **Menu** , and touch **Settings** > **Call settings** > **Use Internet calling**.
2. Select an option from the following:
  - **For all calls** to use Internet calling for all calls when Wi-Fi network is available.
  - **Only for Internet calls** to use Internet calling only for calls to Internet calling addresses.
  - **Ask for each call** to ask each time you make a call.

## *Receive Phone Calls*

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming call screen.

[Answer an Incoming Call](#)

[Mute the Ringtone](#)

[Reject an Incoming Call](#)

[Reject a Call and Send a Text Message](#)

**Note:** If your device is turned off, all calls automatically go to voicemail.

### *Answer an Incoming Call*


- ▶ On the incoming call screen, flick the Answer icon .

## *Mute the Ringtone*

To mute the ringtone without rejecting the call:

- ▶ Press the volume button up or down.

## *Reject an Incoming Call*

- ▶ Flick the Ignore icon  to send the call to your voicemail inbox.

## *Reject a Call and Send a Text Message*

You can automatically send a text message to a caller and reject the incoming voice call.

- ▶ Flick the Ignore & Text icon  to ignore the call and send a message to the caller.

## *Visual Voicemail*

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

[Set Up Visual Voicemail](#)

[Review Visual Voicemail](#)

[Listen to Multiple Voicemail Messages](#)

[Compose a Message](#)

[Configure Visual Voicemail Settings](#)


[Change Your Main Greeting via the Voicemail Menu](#)

[Edit the Display Name via the Voicemail Menu](#)

## *Set Up Visual Voicemail*

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your device is activated. Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off.

**Note:** To set up your traditional voicemail box, see [Voicemail \(Traditional\)](#).

1. Press **Home** , and touch  > **Voicemail**.



2. Touch **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.
3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.


**Important:** **Voicemail Password** – Boost Mobile strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Touch the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.






 
 
 

## *Review Visual Voicemail*

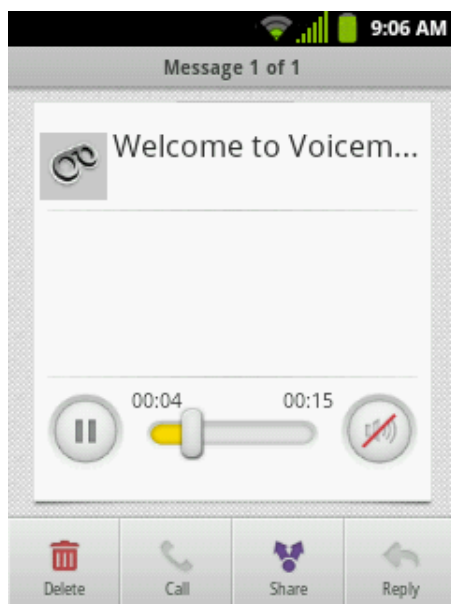Visual Voicemail lets you easily access and select which messages you want to review.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch a message to play it. The following features are available while reviewing a voicemail message:





-  provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
- Touch  to pause the playback. Touch  to resume.
- Touch  or  to turn the speakerphone on or off during playback.
- Touch  to delete the current voicemail message. The message will be moved to the trash folder.
- Touch  to call the person who left the voicemail message.
- Touch  to share the message. Select an available method and follow the onscreen instructions.
- Touch  to reply to the message.

## *Listen to Multiple Voicemail Messages*







When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.



1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message. (It will begin playing automatically.)

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

## *Compose a Message*




Record a voice message and share it.

1. Press **Home** , and touch  > **Voicemail** > .
2. Touch  to start recording.
3. Touch  to stop recording.
4. Touch  to review the recorded message.

- Touch  > **Re-record** to discard the current message and start a new recording.
5. Touch  to select a method to share the recorded message and follow the onscreen instructions.
- You will be asked to set a display name if it is not set.




## Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Press **Home** , and touch  **Voicemail**.
2. Press **Menu** , and touch **Settings**. From this menu, you can:
  - Touch **Personalize voicemail** to change your voicemail greeting for incoming calls and update password. See [Change Your Main Greeting via the Voicemail Menu](#).
  - Touch **Notifications** to determine how you are notified of new voicemails.
  - Touch **Delete messages** to set the timing to permanently delete the messages in the trash folder.
  - Touch **Display name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string. See [Edit the Display Name via the Voicemail Menu](#).
  - Touch **View quick tips tutorial** to display some quick tips for using Visual Voicemail.
  - Touch **Help** to go to the help page of the Visual Voicemail.
  - Touch **Send feedback** to send your feedback on the Visual Voicemail.
  - Touch **Check for update** to search for an update to your Visual Voicemail software.
  - Touch **About Voicemail** to view build information about the current Visual Voicemail application.

## Change Your Main Greeting via the Voicemail Menu




Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Press **Home** , and touch  > **Voicemail**.
2. Press **Menu** , and touch **Settings** > **Personalize voicemail**.

3. Touch **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

## *Edit the Display Name via the Voicemail Menu*

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. Press **Home** , and touch  > **Voicemail**.
2. Press **Menu** , and touch **Settings** > **Display name**.
3. Touch the field and enter an identifying name or number (used to identify you to recipients of your voice messages).
4. Touch **OK** to save your information.

## *Voicemail (Traditional)*




In addition to Visual Voicemail, your device and Boost service always offer traditional voicemail service accessed through the Phone application.

### Set Up Voicemail

#### Voicemail Notification

#### Retrieve Your Voicemail Messages


## *Set Up Voicemail*

1. Press **Home** , and touch .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important:** **Voicemail Password** – Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

## *Voicemail Notification*

There are several ways your device alerts you to a new message:




- By sounding the assigned ringtone type.
- By displaying  in the notifications area of the status bar when new unheard voicemail message (s) is received. The figure is the number of new messages. This icon means you have 10 unheard new messages.

**Note:** Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in a Boost service area.

## Retrieve Your Voicemail Messages



You can review your messages directly from your wireless device or from any other touch-tone phone.

### Use Traditional Voicemail to Access Your Messages

1. Press **Home** , and touch .
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your wireless device.

### Use Visual Voicemail to Access Your Messages

1. Press **Home** , and touch  > **Voicemail**.
2. Touch an entry to listen to the message.

**Note:** Depending on your plan, you may be charged when you are accessing your voicemail from your wireless device.

### Use Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk key (\*) on the phone.
3. Enter your password.

## Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

[Caller ID](#)

[Call Waiting](#)







## 3-Way Calling

## Call Forwarding

## In-Call Options

### Caller ID

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press **Home** , and touch .
2. Touch   .
3. Enter a phone number.
4. Touch .

To permanently block your number, call Boost Customer Service.

### Call Waiting




When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Flick .


To switch back to the first caller:

- ▶ Touch **Switch calls**.

**Note:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

### 3-Way Calling

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the Phone screen, enter a number and touch .
2. Once you have established the connection, touch **Add call**, and dial the second number. (This puts the first caller on hold and dials the second number.)

3. When you're connected to the second party, touch **Merge calls**.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.







- To end the 3-way call, touch .

## Call Forwarding






 

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your device when you have activated Call Forwarding.

**Note:** You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:


1. Press **Home** , and touch .
2. Touch   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Touch . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **Home** , and touch .
2. Touch    .
3. Touch . (You will see a message and hear a tone to confirm the deactivation.)


## In-Call Options

While you're on a call, you will see a number of onscreen options. Touch an option to select it.

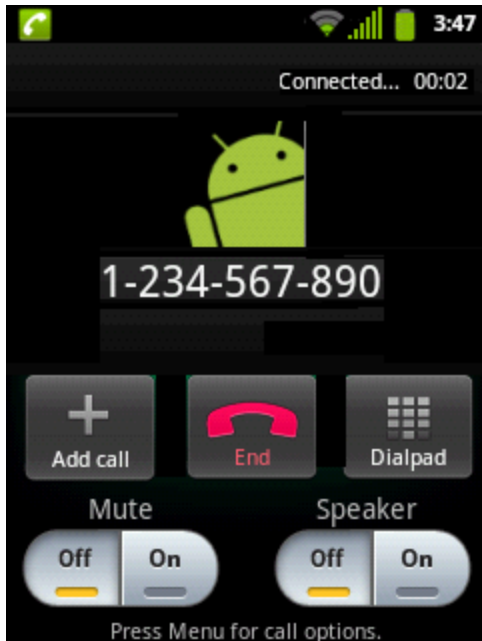

- **Add call:** Touch to initiate a 3-way call.
- **End:** End the current call.
- **Dialpad/Hide:** Toggle the appearance of the onscreen dialpad to enter additional numbers, for example, an extension or access code.
  - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Mute:** Mute the microphone ( **On** ) during an active call, or unmute the microphone ( **Off** ).
- **Speaker:** Route the device's audio through the speaker ( **On** ) or through the earpiece ( **Off** ).

**Warning:** Because of higher volume levels, do not place the device near your ear during speakerphone use.

Press **Menu**  during a call to display a list of additional in-call features. Touch an option to select it.

- **Contacts:** Display your contacts list.
- **Bluetooth:** Route the device's audio through a connected Bluetooth headset (On) or through the speaker (Off).

# Call Log



The Call log tab of the Phone application lists max. 500 recent incoming, outgoing, and missed calls.

[View Recent Calls](#)

[Call Log Options](#)

[Clear Call Logs](#)

## View Recent Calls

1. Press **Home** , and touch  to display the phone screen.
2. Touch **Call log** to display the Call log list.
  - You can determine if an entry was an incoming, outgoing, or a missed call from the icons shown below.

 = Incoming Call



 = Outgoing Call

 = Missed Call

## Call Log Options

- To make a call from Call log, see [Call From Recent Calls](#).




For additional options:

1. Press **Home** , and touch  to display the phone screen.
2. Touch **Call log** to display the Call log list.
3. Touch and hold a listing to display the options list.
  - View contact/Add to contacts
  - Call [number]
  - Edit number before call
  - Send text message
  - Remove from call log

## Clear Call Logs

To clear the Call log list:



1. Press **Home** , and touch  to display the phone screen.
2. Touch **Call log** to display the Call log list.
3. Press **Menu** , and touch **Clear call log > OK**.

# *Device Settings*

---

This section provides an overview of items you can change using your device's **Settings** menus.

[Wireless & Network Settings](#)

[Call Settings](#)

[Sound Settings](#)

[Display Settings](#)

[Location & Security Settings](#)

[PC Connection](#)

[Applications](#)

[Accounts & Sync](#)

[Privacy](#)

[Storage](#)

[Language & Keyboard](#)

[Voice Input & Output](#)

[Accessibility](#)

[Date & Time](#)

[Activate This Device](#)

[About Phone](#)

## *Wireless & Network Settings*

This group of settings lets you control your device's wireless network settings, Wi-Fi settings, Bluetooth, and more.

[Airplane Mode](#)

[Wi-Fi Settings](#)


[Bluetooth Settings](#)

[Mobile Networks](#)





## Airplane Mode

Airplane mode allows you to use many of your device's features, such as Gallery, Camera, and Music, when you are on an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane mode, it cannot send or receive any calls or access online information.

To quickly turn Airplane mode on or off:

- ▶ Press and hold the **Power** button, and then touch **Airplane mode** under Phone options. While in Airplane mode, the status bar will display .

To turn Airplane mode on or off in Settings:

1. Press **Home**  > **Menu** , and touch **Settings** > **Wireless & networks**.
2. Select the **Airplane mode** check box and press **Back** . While in Airplane Mode, the status bar will display .

## Wi-Fi Settings

Your device lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your device's Wi-Fi features and settings, see [Wi-Fi](#).

## Bluetooth Settings

Your device's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your device's Bluetooth settings, see [Bluetooth](#).

## Mobile Networks

Mobile networks menu lets you enjoy the data connection.

## Call Settings

Your device's Call settings menu lets you configure your voicemail options and a number of other settings for the phone application.

[Voicemail](#)

[Other Call Settings](#)

[Internet Call Settings](#)

### Voicemail

Use this option if you need to change the voicemail settings. For details, see [Configure Visual Voicemail Settings](#).

## Other Call Settings

### North American Dialing

Check this option when placing international calls while in the United States or Canada. See [Call Using Plus \(+\) Code Dialing](#).





### International Dialing

Use this option when placing international calls from outside the United States or Canada. See [Call Using Plus \(+\) Code Dialing](#).



### TTY Mode

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your device and TTY device will connect using a special cable that plugs into your device's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Boost service, please call Boost Customer Service using the state Telecommunications Relay Service (TRS) by first dialing    . Then provide the state TRS with this number: **866-727-4889**.

To turn TTY mode on or off:

1. Press **Home**  > **Menu** , and touch **Settings** > **Call settings** > **TTY mode**.
2. Touch **TTY Full**, **TTY HCO**, or **TTY VCO** to turn TTY mode on.

- or -

Touch **TTY Off** to turn TTY mode off.

**Note:** When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.

**Warning:** **911 Emergency Calling**

Boost recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the

attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

## Internet Call Settings

Make and receive calls through an Internet calling account while data network is available. See [Call Using the Internet Calling](#) for more details.

## Sound Settings

The Sound menu lets you control your device's audio, from ringtones and alerts to touch tones and notifications.

[General](#)

[Incoming Calls](#)



[Notifications](#)

[Feedback](#)



### General

#### Silent Mode

The Silent mode option allows you to mute all sounds (except for media and alarm sounds).



- ▶ Press **Home**  > **Menu** , and touch **Settings** > **Sound** > **Silent mode**. (A check mark indicates this feature is enabled.)

- or -

Press the volume button down in standby mode until you see  or  on the screen.



**Note:** Status icon is different depending on the Vibrate settings. See [Vibrate](#).

#### Vibrate

1. Press **Home**  > **Menu** , and touch **Settings** > **Sound** > **Vibrate**.
2. Select an option from the following:
  - **Always:** Select to always vibrate.
  - **Never:** Select to never vibrate.
  - **Only in Silent mode:** Select to vibrate only in Silent mode.
  - **Only when not in Silent mode:** Select to vibrate only when not in Silent mode.

## Volume

Adjust your device's volume settings to suit your needs and your environment.



1. Press **Home**  > **Menu** , and touch **Settings** > **Sound** > **Volume**.
2. Drag the onscreen slider to adjust the volume level of **Ringtone**, **Media**, or **Alarm**.
3. Touch **OK**.

**Note:** If you clear the “Use incoming call volume for notifications,” you can select the notification volume separately.

**Tip:** You can adjust the ringtone volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

## Incoming Calls



### Phone Ringtone

1. Press **Home**  > **Menu** , and touch **Settings** > **Sound** > **Phone ringtone**.
2. Touch a ringtone from the available list. The ringtone briefly plays when selected.
3. Touch **OK** to assign a ringtone.

**Tip:** You can assign individual ringtones to your Contacts. See [Assign a Ringtone to a Contact](#).

## Notifications

### Notification Ringtone

1. Press **Home**  > **Menu** , and touch **Settings** > **Sound** > **Notification ringtone**.
2. Touch a ringtone from the available list. The ringtone briefly plays when selected.
3. Touch **OK** to assign a ringtone.

## Feedback

The Feedback settings menu lets you select whether you hear tones when touching numbers on the dialpad, selecting onscreen options, and more.

- **Audible touch tones:** Check to play tones when using the dialpad.
- **Audible selection:** Check to play sounds when making an onscreen selection.
- **Screen lock sounds:** Check to play sounds when locking or unlocking the screen.

- **Haptic feedback:** Check to vibrate when touching softkeys and during certain other instances.
- **Hearing aid:** Check to use your hearing aid device effectively.

## *Display Settings*

Adjusting your device's display settings not only helps you see what you want, it can also help increase battery life.

Brightness

Auto-rotate Screen

Animation



Screen Timeout

Keyboard Timeout

Notification Blink

### *Brightness*

Adjust your screen's brightness to suit your surroundings.

1. Press **Home**  > **Menu** , and touch **Settings > Display > Brightness**.
2. Drag the **Brightness** slider left or right to adjust the screen brightness.

- or -



Check **Automatic brightness** to set the brightness automatically.

3. Touch **OK**.

### *Auto-rotate Screen*

Your device is capable of automatically changing the orientation of some onscreen content. With this feature, you can view the screen in either portrait or landscape orientation by turning the device sideways. By default, the screen orientation automatically changes when the device is rotated.



To deactivate the Auto-rotate feature:

1. Press **Home**  > **Menu** , and touch **Settings > Display**.
2. Touch **Auto-rotate screen** check box to uncheck it.

If you open the device and access the keyboard, the screen automatically changes to the landscape orientation. See [Slide-Out QWERTY Keyboard](#).



## *Animation*

This feature lets you set the amount of animation used in onscreen transitions.

1. Press **Home**  > **Menu** , and touch **Settings > Display > Animation**.
2. Touch **No animations**, **Some animations**, or **All animations**.



## *Screen Timeout*

Select the delay time before the screen automatically turns off.

1. Press **Home**  > **Menu** , and touch **Settings > Display > Screen timeout**.
2. Touch a delay time to select it.

## *Keyboard Timeout*

Select the delay time before the keyboard backlight automatically turns off.

1. Press **Home**  > **Menu** , and touch **Settings > Display > Keyboard timeout**.
2. Touch a time delay to select it.

## *Notification Blink*

Select to blink the LED indicator for notifications while the screen is turned off.

- ▶ Press **Home**  > **Menu** , and touch **Settings > Display**, and check **Notification blink**.

## *Location & Security Settings*

Your Location settings menu lets you select how your device determines its location (using the wireless network, GPS satellites, both, or neither). The Security settings menus let you set device security, lock codes, passwords, administrator settings, and more.

[My Location](#)

[Screen Lock](#)

[Passwords](#)

[Device Administration](#)

[Credential Storage](#)





## *My Location*

Your device is equipped with a Location feature for use in connection with location-based services. The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except **911**.



### *Use Wireless Networks*

This service uses Wi-Fi and/or mobile networks to detect your location.

1. Press **Home**  > **Menu** , and touch **Settings > Location & security**.
2. Touch **Use wireless networks**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and touch **Agree**.

### *Use GPS satellites*

This service uses available GPS to pinpoint your location within certain applications such as Google Maps.

1. Press **Home**  > **Menu** , and touch **Settings > Location & security**.
2. Touch **Use GPS satellites**. (A check mark indicates this feature is enabled.)



## *Screen Lock*

You can increase the security of your device by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the device's control keys, buttons, and touchscreen.


### *Set Up Screen Lock*

You can select a **Pattern**, **PIN** or **Password** unlock mode.

Use a Screen Unlock Pattern:

1. Press **Home**  > **Menu** , and touch **Settings > Location & security > Set up screen lock**.
2. Touch **Pattern**.
3. Read the information on the screen and touch **Next**.

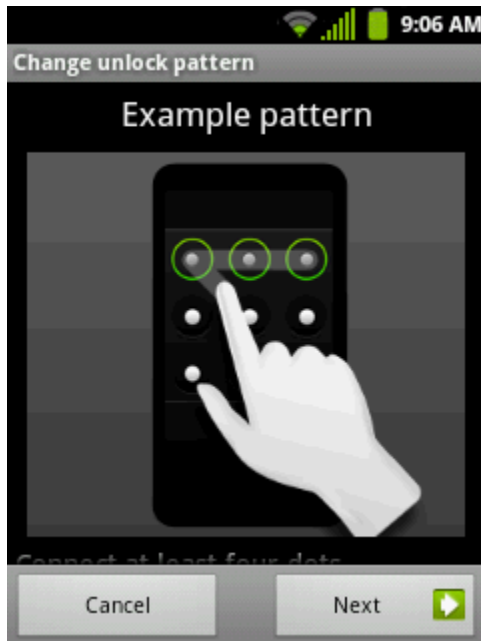

4. Study the example pattern on the screen, and then touch **Next**.



5. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
6. The device records the pattern. Touch **Continue**.
7. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.



**Note:** Clear the **Use visible pattern** check box if you do not want the unlock pattern to display on the screen when you unlock it.

**Note:** Check the **Use tactile feedback** check box if you do want the tactile feedback when you draw the pattern.

**Note:** To change your unlock screen pattern, press **Home**  > **Menu** , and then touch **Settings** > **Location & security** > **Change screen lock**.

If you fail to draw the correct unlock pattern on the screen after five attempts, you will have to wait for 30 seconds before you can try again.



Use a Screen Unlock PIN:

1. Press **Home**  > **Menu** , and touch **Settings** > **Location & security** > **Set up screen lock**.
2. Touch **PIN**.
3. Enter a PIN, touch **Continue (OK)**, and then enter your PIN again and touch **OK** to confirm it.

**Note:** Clear the **Visible passwords** check box if you do not want the PIN to be displayed on the screen when you enter it.

If you fail to enter the correct PIN after five attempts, you will have to wait for 30 seconds before you can try again.



Use a Screen Unlock Password:

1. Press **Home**  > **Menu** , and touch **Settings** > **Location & security** > **Set up screen lock**.
2. Touch **Password**.
3. Enter a password, touch **Continue (OK)**, and then enter your password again and touch **OK** to confirm it.

**Note:** Clear the **Visible passwords** check box if you do not want the password to be displayed on the screen when you enter it.

If you fail to enter the correct password after five attempts, you will have to wait for 30 seconds before you can try again.

### *Change or Disable the Screen Lock*



1. Press **Home**  > **Menu** , and touch **Settings** > **Location & security** > **Change screen lock**.
2. Draw your unlock screen pattern, or enter your PIN or password and touch **Continue (OK)**.
3. Touch **None** to disable the screen lock or change the unlock mode.

If you fail to enter the correct password after five attempts, you will have to wait for 30 seconds before you can try again.

## *Passwords*

### *Visible Passwords*



You can hide your password or PIN number as you type it:

1. Press **Home**  > **Menu** , and touch **Settings** > **Location & security**.
2. Clear the **Visible passwords** check box.

## *Device Administration*

### *Select Device Administrators*

You can disable the authority to be a device administrator of certain applications. If disabled, you will typically lose some functionality in those applications, such as the ability to sync new email or calendar events to your device.

1. Press **Home**  > **Menu** , and touch **Settings > Location & security > Select device administrators**.
2. Touch an application you want to disable the authority to be a device administrator.

## *Credential Storage*



### *Use Secure Credentials*

You can let applications to access your phone's encrypted store of secure certificates and related passwords and other credentials.

1. Set the password in [Set Password](#) menu to enable the Credential storage.
2. Confirm the **Use secure credentials** check box is selected.



### *Install From SD Card*

This menu installs encrypted certificates from the SD card

1. Press **Home**  > **Menu** , and touch **Settings > Location & security > Install from SD card**.
2. Touch an available certificate.
3. Follow the onscreen instructions.

### *Set Password*

This menu sets the password for the secure credential storage. See [Use Secure Credentials](#).

1. Press **Home**  > **Menu** , and touch **Settings > Location & security > Set password**.
2. Enter and confirm your password and touch **OK**.



### *Clear Storage*

The menu cancels credential storage.

- ▶ Touch **Clear storage > OK**.

## PC Connection

Set your device's default connection mode when connected to the USB port of a computer.

1. Press **Home**  > **Menu** , and touch **Settings** > **PC connection**.
2. Touch **Default connection type** and select one of the following options:
  - **Charging only:** Let your PC charge your device only.
  - **Mass Storage:** Let your device function as a removable disk when connected to the USB port of a computer.
3. Check **Ask me** if you want to display the selection screen whenever you connect your device to a computer.

If **Ask me** is selected, the selection screen is displayed whenever you connect your device to a computer. If you want this selection set as default, check **Remember this choice** > **Done**.



## Applications

### Application Settings

Application settings allows you to manage applications installed on the device.



#### Unknown Sources

To install non-Market applications:

1. Press **Home**  > **Menu** , and touch **Settings** > **Applications**.
2. Touch **Unknown sources** > **OK**. (A check mark indicates this feature is enabled.)

#### Quick Launch



To activate built-in keyboard shortcuts to open applications:



1. Press **Home**  > **Menu** , and touch **Settings** > **Applications**.
2. Touch **Quick launch**.
3. Select a key you want to assign an application to open.
4. Select an application from the list.

To use this shortcut, press and hold , and then press the key you have assigned.



#### Manage Applications

To open the Manage applications screen:



1. Press **Home**  > **Menu** , and touch **Settings > Applications > Manage applications**.
2. Touch one of the following tabs to select the applications to be displayed.
  - **Downloaded:** Select to display downloaded application.
  - **All:** Select to display all applications.
  - **On SD card:** Select to display applications stored on the microSD card.
  - **Running:** Select to display currently running applications.

**Tip:** Pressing **Home**  > **Menu**  and touching **Settings > Applications > Running services** opens the **Running** tab directly.

To clear an application's cache or data:

1. Press **Home**  > **Menu** , and touch **Settings > Applications > Manage applications**.
2. Touch an application > **Clear data** or **Clear cache**.
3. If required, touch **OK** to confirm.



To uninstall downloaded applications:

1. Press **Home**  > **Menu** , and touch **Settings > Applications > Manage applications**.
2. On the Manage applications screen, touch the application you want to uninstall.
3. On the Application info screen, touch **Uninstall > OK**.

**Important:** Only applications that you have installed yourself can be uninstalled. Preinstalled applications cannot be removed.

## *Running Services*

To see the running application list:

- ▶ Press **Home**  > **Menu** , and touch **Settings > Applications > Running services**.

## *Storage Use*



To see which applications are using your storage:

1. Press **Home**  > **Menu** , and touch **Settings > Applications > Storage use**.

2. Touch an item to see more detailed information.



### *Battery Use*

To see which applications have been using the battery:

1. Press **Home**  > **Menu** , and touch **Settings > Applications > Battery use**.
2. Touch an item to see more detailed information.

### *Development*

To set options for application development:

1. Press **Home**  > **Menu** , and touch **Settings > Applications > Development**.
2. The following options are available:
  - **USB debugging:** Select to enable debug mode when USB is connected. Read the disclaimer and touch **OK** to confirm.
  - **Stay awake:** Select to prevent the screen from going into sleep mode while charging.
  - **Allow mock locations:** Select to allow mock locations.

**Note:** Unless you have a specific reason for changing these settings, you should leave them at the default settings.

## *Accounts & Sync*

The Accounts & sync settings menu lets you add and manage your accounts and synchronizes the calendar or contacts on your device. See [General Sync Settings](#).

## *Privacy*

[Backup and Restore](#)



[Personal Data](#)

### *Backup and Restore*

This menu helps you to back up and restore you data.



#### *Back Up My Data*

You can back up your settings to a Google server.

1. Press **Home**  > **Menu** , and touch **Settings > Privacy**.
2. Touch **Back up my data**. (A check mark indicates this feature is enabled.)

## Automatic Restore

Check this option to restore your settings and other data when you install an application.

1. Press **Home**  > **Menu** , and touch **Settings > Privacy**.
2. Touch **Automatic restore**. (A check mark indicates this feature is enabled.)



## Personal Data

### Factory Data Reset

Your device's Privacy menu includes the **Factory data reset** option. This option lets you reset your device to the original factory settings, which erases all data from the device's application storage, including:

- Your Google account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

To reset your device:

1. Press **Home**  > **Menu** , and touch **Settings > Privacy > Factory data reset**. Read the Factory data reset information.
2. Touch **Reset phone**.
3. Touch **Erase everything**. Your device will power down and reset itself, which may take up to 10 minutes.

## Storage

The Storage settings menu lets you see the available space of the internal storage and the SD card on your device and provides options for your microSD card. For SD card options, see [microSD Card](#).

## Language & Keyboard

Your device's Language settings let you select a language for the devices screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more. For details, see [Enter Text](#).



## Voice Input & Output

Your device's Voice input & output settings let you configure the voice services on your device. See [Google Voice Recognition Settings](#) for voice input, or [Text-to-speech Settings](#) for voice output services.

## Accessibility

Accessibility



Power Button Ends Call

### Accessibility

You can download and manage accessibility-related applications. Touch to select.



### Power Button Ends Call

To use the **Power** button to end a call:

1. Press **Home**  > **Menu** , and touch **Settings** > **Accessibility**.
2. Check the **Power button ends call** check box. (Clear the check box to disable this feature.)



## Date & Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be changed manually.

1. Press **Home**  > **Menu** , and touch **Settings** > **Date & time**.
2. Clear the **Automatic** check box if necessary.
3. Touch **Set date**. Adjust the date, month, and year by touching **+** or **-**. Touch **Set** when finished.
4. Touch **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
5. Touch **Set time**. Adjust the hour and minute by touching **+** or **-**. Touch the **AM** or **PM** icon to change the value. Touch **Set** when finished.
6. Touch **Use 24-hour format** to toggle between 12-hour or 24-hour format.
7. Touch **Select date format** to select how the date information is displayed on your device.

## Activate This Device

You may need to activate your device.

1. Press **Home**  > **Menu** , and touch **Settings > Activate this device**.
2. Follow the onscreen instructions.

## About Phone


The About phone menu lets you access important phone information including your phone number, and view legal information. You can also update your phone using this menu.

### Update Your Device

From time to time, updates may become available for your device. You can download and apply updates through the **Settings > About phone > System update** menu.


#### Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press **Home**  > **Menu** , and touch **Settings > About phone > System update > Update PRL**.
2. Follow the onscreen instructions.

#### Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press **Home**  > **Menu** , and touch **Settings > About phone > System update > Update profile**.
2. Follow the onscreen instructions.

**Note:** If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

#### Update Your Device Firmware


This option allows you to update the Android Operating System (OS) and the device software on your device via an over-the-air connection.

Before Updating Your Firmware:

Updating your device firmware may erase all user data from your device. You must back up all critical information before updating your device firmware.



To back up your account information:

1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.



2. Touch the account containing data you want to back up now.
3. Press **Menu** , and touch **Sync now**.

As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process

Update Your Device Firmware:




1. Press **Home**  > **Menu** , and touch **Settings > About phone > System update**.
2. Touch **Update firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)

Confirm Your Current Device Firmware:

1. Press **Home**  > **Menu** , and touch **Settings > About phone**.
2. Scroll to the bottom of the page for the version number.



Reinstall Your Google Application:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied.

1. Log into your Google account via the device.
2. Press **Home** , and touch  > **Play Store**.
3. Press **Menu** , and touch **My Apps**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

### *Update Kyocera Software*

This option provides you the latest Android Operating System (OS) and the device firmware on your device via an over-the-air connection.

1. Press **Home**  > **Menu** , and touch **Settings > About phone > System update > Update Kyocera software**.
2. Follow the onscreen instructions.

# Contacts

---

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your device as well as contacts synchronized with your Google account or compatible email programs.

[Get Started with Contacts](#)

[Add a Contact](#)

[Save a Phone Number](#)

[Edit a Contact](#)

[Synchronize Contacts](#)

[Display or Hide Contacts](#)

[Share a Contact](#)

## *Get Started with Contacts*



Before using Contacts, it's best to learn a few basics.

[Access Contacts](#)



[The Contacts List](#)

### *Access Contacts*

There are a few ways to display Contacts.

▶ Press **Home** , and touch  > **Contacts**.

- or -

Press **Home** , and touch  > **Contacts**.

### *The Contacts List*

▶ Press **Home** , and touch  > **Contacts**. You will see the Contacts list.

Scroll through the list to view all your contacts. To see a specific entry, scroll to it and touch it.

**Tip:** If you have a lot of contacts stored, you'll see a slider on the right when you're flicking up or down the list. To go directly to a letter, touch and hold the slider and drag it to a letter.





## Contacts List Options

From the Contacts list, press **Menu**  to display the main contacts list options.

- **Search:** Searches a contact in your Contacts.
- **Search GAL (Global Address List):** Searches a contact in the Global Address List (corporate account only).
- **New contact:** Adds new contacts.
- **Display options:** Opens the Display options page. You can select how your contacts are displayed.
- **Accounts:** Opens the Accounts&sync settings screen.
- **Import/Export:** Imports/Exports contacts from/to the microSD card.

## Add a Contact

You can add contacts from your device's Phone application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.


1. Press **Home** , and touch  > **Contacts**.
2. Press **Menu** , and touch **New contact**.
  - You may be prompted to select a type of the contact.
    - Select Google if you want to save contacts to your Google account.
    - Select Corporate if you want your contacts on your corporate account.
    - They will be synced automatically with your Google account online.
3. Use the keyboard to enter as much information as you want.
  -  (Contact icon): Touch to assign a photo to the contact. See [Assign a Stored Picture to a Contact](#).
  - First name
  - Last name
  - Phone
  - Email
  - Postal address

- Organization
- More: Touch **More** to include additional information such as IM(address), Notes, Nickname, Website, etc.

**Note:** To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type to the left of the field.




**Note:** To add more phone numbers, email addresses, etc., touch  on the right side of the entry field.

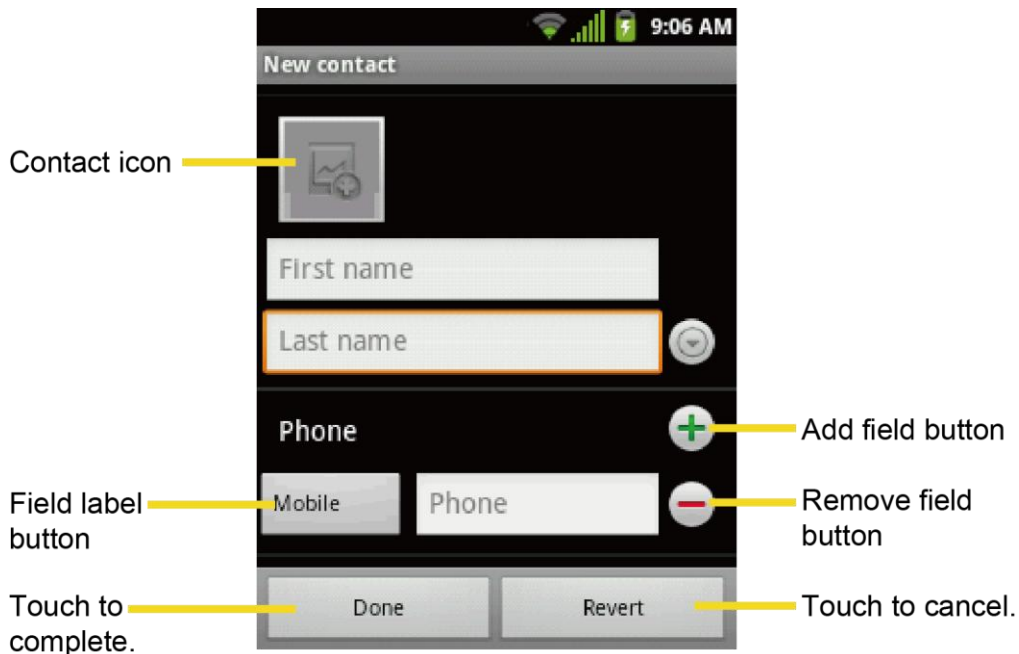4. When you have finished adding information, touch **Done**.



## Save a Phone Number

You can save a phone number to Contacts directly from the phone dialpad.

1. Press **Home** , and touch  > **Phone**.
2. Enter a phone number and press **Menu** , and touch **Add to contacts**.
3. To add the number to an existing contact, scroll through the list and touch the contact. To add a new contact, touch **Create new contact**.
  - For an existing contact, touch the contact name, select a number type for the new number, and then touch **Done**.

- For a new contact, enter the first and last name and any additional information, and then touch **Done**. See [Add a Contact](#).

## *Edit a Contact*

Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize it with a unique ringtone, and more.

[Add or Edit Information for a Contact](#)

[Assign a Stored Picture to a Contact](#)




[Assign a New Picture to a Contact](#)

[Assign a Ringtone to a Contact](#)

[Add a Contact to Favorites](#)

[Delete a Contact](#)

## *Add or Edit Information for a Contact*

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Edit contact**.




**Tip:** You can also touch and hold the contact and then touch **Edit contact**.

3. Touch any field you want to change or add. See [Add a Contact](#).
4. Add or edit the information, and then touch **Done**.

**Note:** To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type to the left of the field.

**Note:** To add more phone numbers, email addresses, etc., touch  on the right side of the entry field.

## *Assign a Stored Picture to a Contact*




1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Edit contact**.

**Tip:** You can also touch and hold the contact and then touch **Edit contact**.


3. Touch the Contact icon at the top of the entry.
4. Touch **Select photo from Gallery** and select a location.

5. Touch a picture to select it.
  - You may be prompted to size the picture for use with contacts. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square.
6. Touch **Save** to assign the picture. Touch **Done** to save the contact.




## *Assign a New Picture to a Contact*

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Edit contact**.

**Tip:** You can also touch and hold the contact and then touch **Edit contact**.



3. Touch the Contact icon at the top of the entry.
4. Touch **Take photo**.
5. Touch  to take a picture. If you're satisfied with the picture, touch **OK** to continue.
  - You may be prompted to size the picture for use with contacts. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square.
6. Touch **Save** to assign the picture. Touch **Done** to save the contact.

## *Assign a Ringtone to a Contact*

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Options**.
3. Touch **Ringtone** and touch an available ringtone.
  - When you touch a ringtone, you will hear a sample.
4. Touch **OK** to assign the ringtone.

## *Add a Contact to Favorites*




The Favorites tab of the Phone menu is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact.
3. Touch the star to the right of the contact's name. The star turns to orange.



## Delete a Contact

You can delete a contact from the contacts details page.

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Delete contact**.

**Tip:** You can also touch and hold the contact and then touch **Delete contact**.



3. Touch **OK**.

## Synchronize Contacts

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

For more information about syncing existing managed accounts, see [General Sync Settings](#).

1. Press **Home** , > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch the account you want to sync your Contacts with.
3. Touch the **Sync Contacts** check box to select the feature. (A check mark indicates this feature is enabled.)




**Note:** The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat steps 2 and 3.

Your **Contacts** tab then reflects any updated Contact information.

- This update process works both ways. For example, any changes on the device are updated to your Gmail Contacts list after sync. To enable the auto-sync feature, see [Auto-sync](#).




## Display Options

Select how your contacts to be displayed.

1. Press **Home** , and touch  > **Contacts**.
2. Press **Menu** , and touch **Display options**.
3. Choose how you want to display your contacts.





## Display or Hide Contacts

You can choose your Contacts to be displayed or not.

1. Press **Home** , and touch  > **Contacts**.
2. Press **Menu** , and touch **Display options**.
3. Touch an account and select the types of contacts to be displayed by checking them, or uncheck those types you don't wish to display.

## Share a Contact

You can quickly share contacts using Bluetooth, email, or Gmail.

1. Press **Home** , and touch  > **Contacts**.
2. Touch a contact to display it, and then press **Menu** , and touch **Share**.
3. In the **Share contact via** menu, select a method:
  - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
  - **Email** to send the information as an email attachment. If prompted, select an email account. Address the message, add a subject and a message, and then touch **Send**. See [Compose and Send Email](#) for details on sending email.
  - **Gmail** to send the information as a Gmail attachment. Address the message, add a subject and a message, and then touch . See [Send a Gmail Message](#) for details.

# Messaging

---

With Boost service and your device's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

[Gmail](#)

[Email](#)

[Text Messaging and MMS](#)

[Social Networking Accounts](#)

[Google Talk](#)

## Gmail



Gmail is Google's web-based email service. You need to setup your [Google Account](#) in advance.


[Access Gmail](#)



[Send a Gmail Message](#)

[Read and Reply to Gmail Messages](#)



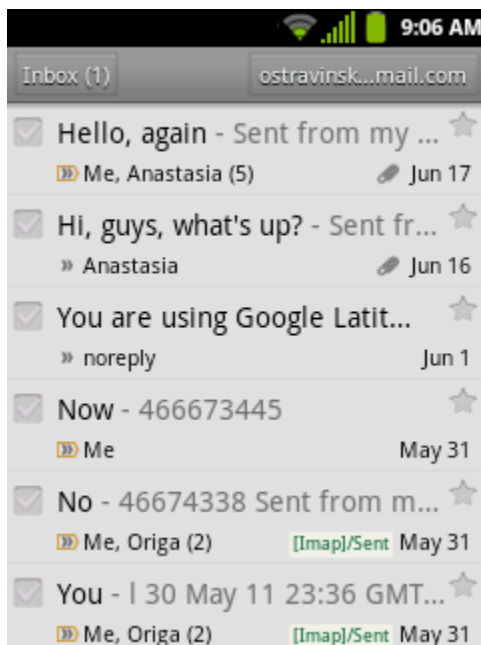

## Access Gmail

1. Press **Home** , and touch  > **Gmail**.



2. Do any of the following:
  - View more email messages: If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
  - Read a new email message: Touch the unread message or the conversation with an unread message (just-arrived items display in bold).
  - Select messages and conversations: Touch the box before the email or conversation.
  - View the Inbox of your other Gmail account:
    - Press **Menu** , touch **Accounts**, and then touch the account you want to view.
  - Refresh the Inbox: Press **Menu** , and then touch **Refresh**.


## Send a Gmail Message

1. Press **Home** , and touch  > **Gmail**.
2. In the Inbox, press **Menu** , and then touch **Compose**.
3. Enter the message recipient's email address in the **To** field. If you are sending the email message to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your contacts list are displayed. Touch a match to enter that address directly.
4. If you want to send a carbon copy (Cc) or a blind carbon copy (Bcc) of the email to other recipients, press **Menu** , and then touch **Add Cc/Bcc**.
5. Enter the email subject, and then compose your email.



**Note:** If you want to attach a picture, press **Menu** , and then touch **Attach**. Locate and then touch the picture you want to attach.


6. After composing your message, touch .

**Note:** While composing the message, touch  to save it as a draft. To view your draft email messages, in the Inbox, press **Menu** , and then touch **Go to labels > Drafts**.

**Note:** To view your sent messages in the Inbox, press **Menu** , and then touch **Go to labels > Sent**.

## Read and Reply to Gmail Messages

1. Press **Home** , and touch  > **Gmail**.
2. Touch a message to display it.

**Tip:** You can also access new messages through the status bar. When a new Gmail message arrives, you'll see the  icon in the status bar. Slide the bar down to display notifications. Touch a message to display it.

- To reply to or forward a message:
  - Touch  to reply the message.
  - Touch  to reply to all recipients.
  - Touch  to forward the message.
- After composing your message, touch .

## Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP. You can also access your corporate email and other features on your device.

[Add an Email Account \(POP3 or IMAP\)](#)

[Add a Corporate Account](#)

[Create Another Email Account](#)

[Compose and Send Email](#)



[View and Reply to Email](#)

[Manage Your Email Inbox](#)

[Email Account Settings](#)

[Delete an Email Account](#)

### *Add an Email Account (POP3 or IMAP)*



- Press **Home** , and touch  > **Email**.
- Enter the **Email address** and **Password** for the email account and then touch **Next**.

**Important:** If the account type you want to set up is not in the device database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

- Enter the **Account name** and **Your name** and touch **Done**.

## Add a Corporate Account

If you synchronize your device with your corporate account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch **Add account > Corporate**.
3. Enter your **Email address** and **Password** information, and then touch **Next**. Consult your network administrator for further details.
  - **Email address:** your corporate email address.
  - **Password:** typically your network access password (case-sensitive).
4. Enter a **Domain\Username**, **Password**, and **Server** information and touch **Next**.
  - **Domain\Username:** enter your network domain\login username.
  - **Password:** typically your network access password (case-sensitive).
  - **Server:** your exchange server remote email address. Typically it is in the form mail.XXX.com. Obtain this information from your company's network administrator.
  - If your network requires SSL encryption, touch the **Use secure connection (SSL)** box to place a check mark and activate this additional level of security. If your exchange server requires this feature, leaving this field unchecked can prevent connection.
5. If the onscreen activation disclaimer is displayed, touch **Next**.
6. Configure your **Inbox checking frequency**, **Amount to synchronize** (days to synchronize between your device and server), and activate any other email settings, then touch **Next**.

**Note:** Signal interruptions or incorrect user name or password information can cause completion issues.





7. Identify your new account with a unique name and provide the outgoing name, then touch **Done**.

**Note:** You can have multiple corporate email accounts active on your device.

**Note:** Your corporate Exchange Server must support auto-detect for the device to automatically set up the Exchange ActiveSync account. If your corporate Exchange Server does not support auto-detect, you will need to enter your Exchange Server settings after you touch **Next**. Ask your Exchange Server administrator for details.




## Create Another Email Account

While you are viewing one email account, you can access the tool to create another email account.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu** , and touch **Accounts**.
3. Press **Menu** , and touch **Add account**.
4. Enter the **Email address** and **Password** for the email account and then touch **Next**.
5. Enter the **Account name** and **Your name** and touch **Done**.

## Compose and Send Email


Compose and send email using any account you have set up on your device. Increase your productivity by attaching files such as pictures or videos to your email messages.


1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, press **Menu** , and touch **Compose**.

**Tip:** Touch **From:** field to switch to a different email account.

3. Fill in one or more recipients.
  - Enter email addresses directly in the **To** field. If you're sending the email to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your contacts list are displayed. Touch a match to enter the address directly.



**Tip:** If you want to send a **CC** or a **BCC** of the email to other recipients, press **Menu** , and touch **Add Cc/Bcc**.

4. Enter the subject, and then compose your message.
5. To add an attachment, press **Menu** , and touch **Add attachment**, and choose from the following options:
  - **Pictures:** Select photos from **Gallery**.
  - **Videos:** Select videos from **Gallery**.
  - **Audio:** Select sound files.
6. Touch **Send** to send the message immediately, or touch **Save as draft** if you want to send it later.

**Note:** To open a draft email, in the email account Inbox, press **Menu** , and then touch **Folders > Drafts**.




## *View and Reply to Email*

Reading and replying to email on your device is as simple as it is on your computer.

1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, touch the message you want to view.
3. Touch **Reply** or **Reply all** to reply to the message.

## *Manage Your Email Inbox*

### *View Your Email Inbox*

1. Press **Home** , and touch  > **Email**.
2. Touch the account whose mails you want to view.
3. Press **Menu**  to select from the following options:
  - **Refresh:** Refreshes your email box.
  - **Folders:** Displays folders
  - **Account settings:** Displays the account settings of the selected account.
  - **Compose:** Composes a new email.
  - **Accounts:** Switches to another account.
  - **Search:** Searches an email.

### *Refresh an Email Account*

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

- ▶ While in the account you want to synchronize, press **Menu** , and touch **Refresh**.

### *Delete an Email Message*

1. On the email account Inbox, touch and hold the message you want to delete.
2. On the options menu, touch **Delete**.

### *Delete Multiple Email Messages*




1. On the email account Inbox, touch the check box of the messages you want to delete.



2. Touch **Delete**.

## *Email Account Settings*



You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

1. Press **Home** , and touch  > **Email**.
2. Touch the email account you want to edit.
3. Press **Menu** , and touch **Account settings**, and choose from these options:
  - **Account name:** Displays your uniquely created account display name.
  - **Your name:** Displays the name used in the From field of your outgoing emails.
  - **Signature:** Allows you to create an email signature for your outgoing emails.
  - **Amount to synchronize:** Sets how often to synchronize your account (corporate only).
  - **Inbox check frequency:** Touch to select the time interval used by your device to check your new emails from **Automatic (Push)** (corporate only) **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, and **Every hour**.
  - **Default account:** Assign this account as the default email used for outgoing messages.
  - **Email notifications:** Activates the email notification icon to appear within the Notifications area of the status bar when a new mail is received.
  - **Select ringtone:** Plays a selected ringtone once a new email message is received.
  - **Vibrate:** Activates a vibration once a new email message is received.
  - **Incoming settings:** Adjusts the incoming email parameters, such as username, password, and other incoming connection parameters (ex: IMAP server).
  - **Outgoing settings:** Adjusts the outgoing parameters, such as username, password, and other incoming connection parameters (ex: SMTP server, not for a corporate account).
  - **Out of office settings:** Sets your message to reply automatically when you leave your office (corporate account only.)
  - **Sync contacts:** Check to synchronize your contacts (corporate account only.)
  - **Sync calendar:** Check to synchronize your calendar (corporate account only.)

4. Press **Back**  to save your changes.

## *Delete an Email Account*

If you no longer want an email account on your device, you can delete it through the mail settings menu.

1. Press **Home** , and touch  > **Email**.
2. Touch and hold the email account you want to delete.
3. Touch **Remove account** > **OK**.

## *Text Messaging and MMS*

With Text Messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, or picture slideshows.

See your service plan for applicable charges for messaging.

[Compose Text Messages](#)

[Send a Multimedia Message \(MMS\)](#)

[Save and Resume a Draft Message](#)



[New Messages Notification](#)


[Managing Message Conversations](#)

[Text and MMS Options](#)

## *Compose Text Messages*

Quickly compose and send text messages on your device.

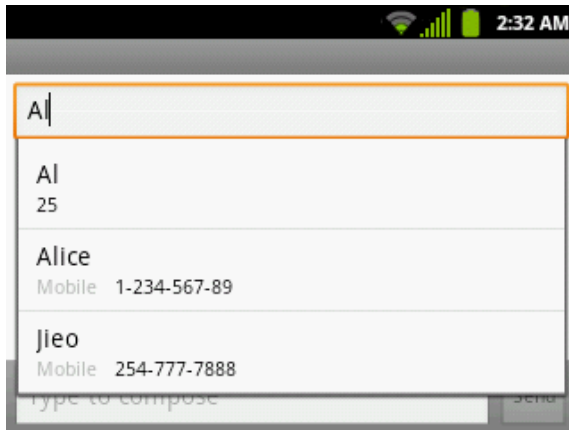

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch **New message**. The compose screen opens.
3. Fill in one or more recipients.
  - Enter phone numbers directly in the **To** field. If you're sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your contacts list are displayed. Touch a match to enter that number or address directly.




4. Touch the “Type to compose” box and then start composing your message.
5. When done, touch **Send** to send the text message.

## *Send a Multimedia Message (MMS)*

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, recorded voices, or audio or video files, or slideshows.

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch **New message**. The Compose screen opens.
3. Fill in one or more recipients.
  - Enter phone numbers or email addresses in the **To** field. If you’re sending the message to several recipients, separate the phone numbers or email addresses with commas. As you enter information, any matching phone numbers or addresses from your contacts list are displayed. Touch a match to enter that number or address.



**Note:** You can add a subject line by pressing **Menu** , and then touching **Add subject**.

4. Touch the “Type to compose” box, and then start composing your message.
5. Press **Menu** , and then touch **Attach**.
6. In the Attach window, select from the following file attachments:
  - **Pictures:** Open **Gallery** to attach a photo from your storage card.
  - **Capture picture:** Run the camera application to take a photo and attach it.
  - **Videos:** Open **Gallery** to attach a video from your storage card.
  - **Capture video:** Run the camcorder application to take a video and attach it.
  - **Audio:** Select a ringtone and attach it.


- **Record audio:** Run the voice recorder application to create a recording and attach it.
  - **Slideshow:** See [Create a Slideshow](#) for details.
7. To make changes to your attachment, touch **Remove**.
  8. Touch **Send MMS** to send the MMS message.

### *Create a Slideshow*

In a multimedia message, you can add slides, each containing a photo, video, or audio.

1. In the multimedia message you're composing, press **Menu** , and then touch **Attach > Slideshow**.
2. To compose your slideshow, do any of the following:
  - Touch **Add slide** to create a new slide. (This is a placeholder for new images to be added, similar to a playlist.)
  - Touch the created slide (example, **Slide 1**), touch **Add picture**, and then select the picture you want to add to the slide.
  - Touch the text field below the image to enter a caption for the picture.
  - Touch **Preview** (to preview the slide), **Replace picture** (to delete the currently selected picture), press **Menu** , and touch **Add music**, **Add slide**, or **More > Duration** or **Layout**.
  - When finished, touch **Done** to attach the slideshow to your message.
3. When you have finished composing the multimedia message, touch **Send**.

### *Save and Resume a Draft Message*

While composing a text or multimedia message, press **Back** , and touch **Yes** to save your message as a draft.


To resume composing the message:

1. On the Messaging screen, touch the message to resume editing it. "Draft" in red appears at the right of the message in the list.
2. When you finish editing the message, touch **Send**.

### *New Messages Notification*

Depending on your notification settings, the device will play a ringtone, vibrate, or display the message briefly in the status bar when you receive a new text or multimedia message. To

change the notification for new text and multimedia messages, see [Text and MMS Options](#) for details.

A new message icon  also appears in the notifications area of the status bar to notify you of a new text or multimedia message.

To open the message, slide the status bar down to open the Notifications panel. Touch the new message to open and read it. For information on reading and replying to messages see [Managing Message Conversations](#).

## *Managing Message Conversations*

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. Threaded text or multimedia messages let you see exchanged messages (similar to a chat program) with a contact on the screen.

To read a text message:

- ▶ Do one of the following:
  - On the Messaging screen, touch the text message or message thread to open and read it.
  - If you have a new message notification, slide the status bar down to open the Notifications panel. Touch the new message to open and read it.



To return to the Messaging screen from a text message thread, press **Back** .

**Note:** To view the details of a particular message, in the message thread, press and hold the message to open the options menu, and then touch **View message details**.

**Note:** If a message contains a link to a Web page, touch the message and then touch the link to open it in the Web browser.

**Note:** If a message contains a phone number, touch the message and then touch the phone number to dial the number or add it to your contacts.



To view a multimedia message (MMS):


1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch a multimedia message or message thread to open it.
3. Touch the attachment to open it.
4. To save the attachment to the storage card, press and hold the sender's name or number, and then touch **Save attachment** on the options menu.

**Note:** When **Auto-retrieve** in MMS settings is disabled, only the message header is downloaded. To download the entire message, touch the **Download** button at the right side of the message. For details, see [Text and MMS Options](#).




**Note:** If you are concerned about the size of your data downloads, check the multimedia message size before you download it.

To reply to a text or multimedia message:

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch a text or multimedia message thread to open it.
3. Touch the text box at the bottom of the screen, enter your reply message, and then touch **Send**.

**Note:** To reply to a text message with a multimedia message, open the text message, press **Menu** , and then touch **Attach**. The text message is automatically converted into a multimedia message.

To delete a message thread:

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch the message thread that you want to delete.
3. Press **Menu** , and then touch **Delete thread**.
4. When prompted to confirm, touch **Delete**.



To delete a single message:

1. While viewing a message thread, press and hold the message that you want to delete.
2. Touch **Delete message** on the options menu.
3. When prompted to confirm, touch **Delete**.

When you have received a message from someone in your stored contacts, you can touch the contact's photo or icon in the message thread to open a menu of options. Depending on the stored contact information, you can view the contact details, phone or send an email message to the contact, and more.

## *Text and MMS Options*

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Press **Home** , and touch  > **Messaging**.

2. On the All messages screen, press **Menu** , and then touch **Settings**. You can set the following:

### *Storage Settings*

- **Delete old messages:** Automatically delete older messages, when the set limits are reached.
- **Text message limit:** Choose the maximum number of text messages to store in each conversation thread.
- **Multimedia message limit:** Choose the maximum number of MMS messages to store in each conversation thread.

### *Text message (SMS) settings*

- **Emergency Alerts:** Sets the federally supervised cell phone alert services to send out broadcast SMS messages for public warning.
  - **Presidential:** Receives an emergency presidential alert. (Presidential is always grayed out [not selectable] and cannot be excluded.)
  - **Imminent Threat - Extreme:** Select this option if you want to receive emergency alerts in an extreme emergency situation (an extraordinary threat to life or property).
  - **Imminent Threat - Severe:** Select this option if you want to receive emergency alerts in a severe emergency situation (a significant threat to life or property).
  - **Amber:** Select this option if you want to receive alerts related to missing or endangered children.
  - **Emergency Alerts Test:** Select this option if you want to receive a test message to make sure that the alert messages can be successfully received.
  - **Help:** Displays the help information for Emergency Alerts.

### *Multimedia Message (MMS) Settings*

- **Auto-retrieve:** Select this option to automatically retrieve all your multimedia messages completely. When selected, the multimedia message header plus the message body and attachments will automatically download to your device. If you clear this check box, only the multimedia message header will be retrieved and shown in your Messaging screen.

### *Notification Settings*

- **Notifications:** Select this option if you want to receive a notification in the status bar when a new text or multimedia message arrives.

- **Select ringtone:** Select a ringtone that is specific to new text and multimedia messages. Note that the ringtone briefly plays when selected.
- **Vibrate:** Select when your device to vibrate when a new text or multimedia message arrives.

## Social Networking Accounts

Stay in touch on the go with all your social networking accounts.

YouTube

Google+

Facebook

### YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

#### Opening YouTube



- ▶ Press **Home** , and touch  > **YouTube**. The library screen appears.

**Note:** If **Terms of Service** appears, touch **Accept**.

#### Watching YouTube Videos

1. On the YouTube screen, touch a video.
2. Touch the screen to show the progress bar at the bottom. Touch the screen while the bar is displayed to pause/play the video. Move the slider on the bar to the left or right to rewind or fast-forward the video.




#### Searching for Videos

1. On the YouTube screen, touch  at the upper right of the screen to open the search box.
2. Enter the keyword to search. Search results appear below the status bar.
3. Touch one of the results, or touch .





## Google+

With Google+ you can check your friends' updates, post updates of your own, and chat with friends in your Google+ circles.



1. Sign in to your Google account. See [Create a Google Account](#).
2. Press **Home** , and touch  > **Google+**.
3. If you are signed into more than one Google account, select the account you would like to use with Google+.
4. Follow the onscreen instructions to use Google+.
  - To learn what you can do and get help in Google+, press **Menu**  > **Help**.

## Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

**Note:** Before you use Facebook on your device, you must download and install the app from the Google Play Store app. Press **Home** , and touch  > **Play Store**, search for Facebook, and follow the onscreen prompts to download and install the app. See [Find and Install an App](#) for details.

### Sign in to Your Facebook Account

1. Press **Home**  > **Menu** , and touch **Settings** > **Accounts & sync** > **Add account**.
2. Touch **Facebook**.
3. Enter your Facebook username and password and touch **Log In**.
4. Follow the onscreen instructions to proceed.

With Facebook, you can:

- See your Facebook contacts and their status updates in People.
- See Facebook photos in Gallery.
- Check your friends' Facebook status updates in Friend Stream.

## Google Talk

**Google Talk** is the instant messaging program provided by Google. Google Talk lets you chat with other people that also have a Google account. Your Google Talk account is based on the Google account set on your device.

[Signing In and Chatting](#)

[Managing Your Friends](#)


[Mobile Indicators](#)

[Signing Out](#)

[Google Talk Settings](#)


## *Signing In and Chatting*

- ▶ Press **Home** , and touch  > **Talk** to open Google Talk.

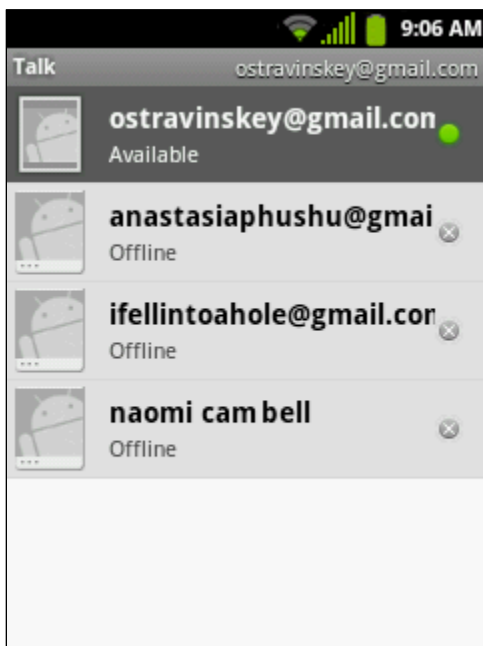


### *Adding New Friends*

You can add only people who have a Google account.

1. On the friends list screen, press **Menu** , and touch **Add friend**.
2. Enter the Google Talk ID or the Gmail address of the person you want to add.
3. Touch **Send invitation**.

### *Viewing Your Invitations*

On the friends list screen, press **Menu** , and touch **More > Invites**. The pending invitations screen lists all chat invitations that you have sent.

**Note:** When a person accepts your invitation, that invitation disappears from the list.

## *Accepting and Canceling Invitations*

On the friends list screen, touch **Chat invitation**. When an invitation pop-up window appears, touch **Accept** or **Cancel**.

## *Changing Your Online Status Message*


1. On the friends list screen, touch the online status icon that appears at the right of your email address.
2. Touch the status and select the status you want from the menu.
3. Touch the text box below the online status icon, and then type your status message.
4. Touch **Done** on the onscreen keyboard.

## *Starting a Chat*

1. Touch a friend on the friends list.
2. Touch the text box, and then type your message.
3. Touch **Send**.

## *Switching Between Active Chats*

You can conduct multiple chats at the same time and switch between active chats.

1. On a chat screen, press **Menu** , and touch **Switch chats**.
2. On the panel, touch the friend you want to chat with.

## *Closing a Chat*

- ▶ On the friends list screen, touch and hold the name of a friend. On the options menu, touch **End chat**.

- or -



On a chat screen, press **Menu** , and touch **End chat**.

## *Managing Your Friends*

Friends on the friends list screen are sorted according to their online status and are listed alphabetically.

## *Viewing the Friends List*

By default, only the friends that you frequently chat with are displayed on the friends list screen.


- ▶ To list all your friends, press **Menu** , and touch **All friends**.
- ▶ To display only the friends that you frequently chat with, press **Menu** , and touch **Most popular**.

### *Blocking Friends*

You can block friends from sending you messages.

1. On the friends list screen, touch and hold the name of the friend you want to block.
2. Touch **Block friend**. That friend is removed from your friends list and is added to the blocked friends list.

### *Unblocking Friends*

1. On the friends list screen, press **Menu** , and touch **More > Blocked**.
2. On the blocked friends list, touch the name of the friend you want to unblock.
3. Touch **OK** to confirm.

## *Mobile Indicators*


### *Checking Friends' Devices*

You can see which devices your friends are using to chat in Google Talk.

- If an Android icon appears to the right of your friend's name, it indicates that your friend is using an Android phone.
- If no icon is displayed, it indicates that your friend is using a computer.

### *Displaying a Mobile Indicator*

You can choose to show a mobile indicator along with your name to let your friends know the type of wireless device you are using.

1. On the friends list screen, press **Menu** , and touch **Settings**.
2. Check **Mobile indicator**.

## *Signing Out*

- ▶ On the friends list screen, press **Menu** , and touch **Sign out** to sign out from Google Talk.

## *Google Talk Settings*


1. On the friends list screen, press **Menu** , and touch **Settings**.

2. Touch any of the following to change the settings:

- **Automatically sign in:** Select to automatically sign in to Google Talk every time you turn on your device.
- **Mobile indicator:** Select to allow your friends to see the type of wireless device you are using. See [Mobile Indicators](#).
- **Automatic away-status:** Select to show your status as away when the screen is turned off.
- **Clear search history:** Select to delete the Google Talk search history.
- **IM notifications:** Select to show a new IM message icon on the status bar when a new instant message is received.
- **Select ringtone:** Select if you want the device to ring when a new instant message is received. On the ringtone menu, touch a ringtone to play the tone briefly, and then touch **OK** to confirm selection. Select **Silent** if you do not want the device to ring when a new instant message is received.
- **Vibrate:** Select if you want the device to vibrate when a new instant message is received.
- **Invitation notifications:** Select to show a notification in the status bar when a someone invites you to become a friend.
- **Terms & privacy:** Select to show the Google legal information.

# Applications and Entertainment

---

All of your device's features are accessible through the Applications list. Touch the applications launcher icon  on the Home screen.

[Google Play](#)

[Navigation](#)

[Google Play Music App](#)

[Boost Zone](#)

## Google Play

Google Play™ is your digital content destination to discover Android apps, books, movies, music and much more on your device and on the web.

To access the Google Play Store app, you must first connect to the Internet using your device's Wi-Fi or data connection and sign in to your Google account. See [Web and Data](#) and [Sign In to Your Google Account](#) for details.

**Important:** Boost's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Boost to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

[Find and Install an App](#)

[Create a Google Wallet Account](#)

[Request a Refund for a Paid App](#)

[Open an Installed App](#)



[Uninstall an App](#)


[Get Help with Google Play](#)

## Find and Install an App

When you install apps from the Google Play Store app and use them on your device, they may require access to your personal information (such as your location, contact data, and more) or

access to certain functions or settings of your device. Download and install only apps that you trust.

1. Press Home , and touch  > **Play Store**.
2. When you open the Google Play Store app for the first time, the **Google Play Terms of Service** window will appear. Touch **Accept** to continue.
3. Find an app you want and touch it to open its details screen.

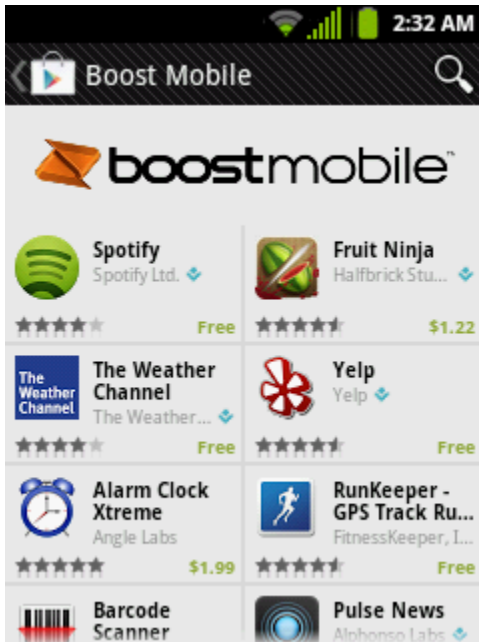

**Note:** The Google Play Store screen shots and options may vary depending on the version installed on your device. Your Google Play Store app will update automatically when available.

4. Touch an app to read a description about the app and user reviews.
5. Touch **Install** (for free applications) or the price icon (for paid applications).

**Note:** You need a [Google Wallet account](#) to purchase items on Google Play. See [Create a Google Wallet Account](#) to set up a Google Wallet account if you do not have one.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your device. If you agree to the conditions, touch **Accept & download** (for free applications) or **Accept & buy** (for paid application) to begin downloading and installing the app.

If you selected a paid app, after touching **Accept & buy**, you're redirected to the Google Checkout screen to pay for the app before it's downloaded to your device.

**Warning:** **Read the notification carefully!** Be especially cautious with apps that have access to many functions or a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your device.

## Create a Google Wallet Account

You must have a Google Wallet account associated with your Google account to purchase items from Google Play.

Do one of the following:




- ▶ On your computer, go to [wallet.google.com](http://wallet.google.com) to create a Google Wallet account.
- or -
- ▶ The first time you use your device to buy an item from Google Play, you're prompted to enter your billing information to set up a Google Wallet account.

**Warning:** When you've used Google Wallet once to purchase an app from the Google Play Store app, the device remembers your password, so you don't need to enter it the next time. For this reason, you should secure your device to prevent others from using it without your permission. (For more information, see [Location & Security Settings](#).)

## Request a Refund for a Paid App



If you are not satisfied with an app, you must ask for a refund within 15 minutes of purchase, unless otherwise stated by the app developer. Your credit card is not charged and the app is uninstalled from your device.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. Touch the app to uninstall for a refund. The details screen for the app opens.
4. Touch **Refund**. Your app is uninstalled and the charge is cancelled.
  - If requested, choose the reason for removing the app, and then touch **OK**.



## Open an Installed App

There are several options for opening an installed app.

- ▶ On the status bar, check if you see the  icon. If you see the  icon, open the Notifications panel, and then touch the app to open it.






- or -



- ▶ Press **Home** , and touch . On the All apps screen, locate the app, and then touch the icon.

## *Uninstall an App*


You can uninstall any app that you have downloaded and installed from Google Play.

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. On the INSTALLED screen, touch the app you want to uninstall, and then touch **Uninstall**.
4. When prompted, touch **OK** to remove the app on your device.
5. Choose the reason for removing the app, and then touch **OK**.

- or -

1. Press **Home**  > **Menu** , and touch **Settings** > **Applications** > **Manage applications**.
2. Touch the **Downloaded** tab and touch the app you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the app on your device.
4. Touch **OK**.

## *Get Help with Google Play*

If you ever need help or have questions about Google Play, press **Menu** , and then touch **Help**. The Web browser will take you to the Google Play Help Web page.

## *Navigation*

Your device offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

[Google Maps](#)



[Google Navigation](#)


[Google Latitude](#)

## Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your device. Determine your current location with or without GPS, get driving and transit directions, get phone numbers and addresses for local businesses.


### Opening Google Maps

► Press **Home** , and touch  > **Maps**.

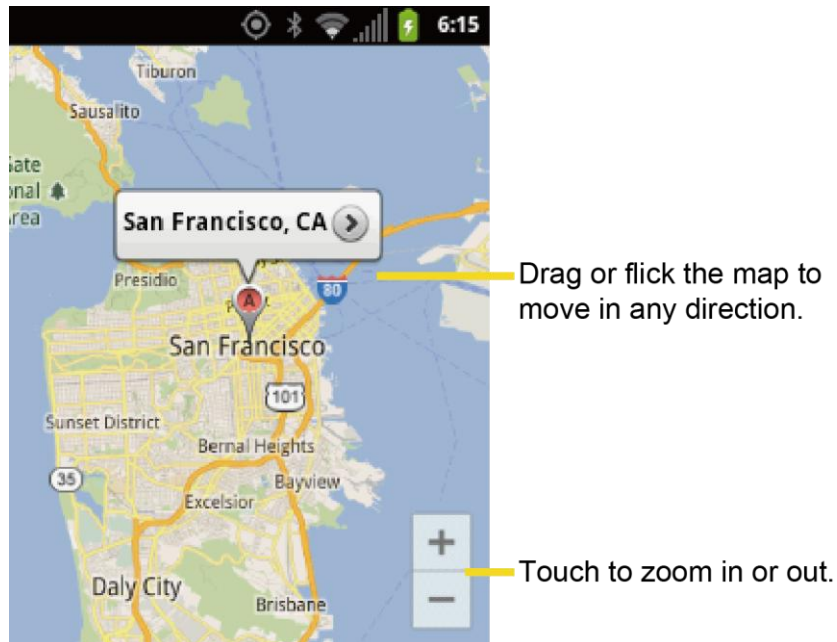



### Finding Your Current Location

**Note:** Don't forget to set your location sources.


On the Google Maps screen, press **Menu** , and touch **My Location**. A blinking blue arrow indicates your current location on the map. This feature is available when **Use GPS satellites** or **Use wireless networks** is enabled. See [My Location](#).

### Searching Maps

1. On the Google Maps screen, press **Search**  key.
2. On the Search Maps box, type the place that you want to search. You can enter an address, a city, or type of establishment.
3. Touch . A callout label appears on the map to indicate the location.
4. Touch the callout to open the menu for the location.


## Adding Map Layers

Layers allow you to view locations and additional info overlaid on the map.


On the Google Maps, press **Menu** , and touch **Layers**, and then touch one or more of the following options:

- **Traffic:** Add this layer to view real-time traffic conditions with roads marked in color-coded lines that indicate the traffic condition. This mode is available in selected areas only.
- **Satellite:** Add this layer to use the same satellite data as Google Earth. The images are not real-time and are approximately one to three years old.
- **Terrain:** Add this layer for a shaded relief view of topographic features.
- **Transit Lines:** Add this layer to provide geographic representations of transit lines. This mode is available in selected areas only.
- **Latitude:** Add this layer to see your friends' locations and share yours with them. You may sign in with your Google account to use this feature.
- **My Maps:** Adds this layer to display the Google My Maps on the Google Maps of your device.
- **Bicycling:** Adds this layer to provide the road map suitable for bicycling.
- **Wikipedia:** Adds this layer to provide a list of Wikipedia articles that are geo-referenced. An extract of the Wikipedia article can be accessed by clicking on the icon, a link to the full version of the Wikipedia article is also available.

## Getting Directions



1. On the Google Maps screen, press **Menu** , and touch **Directions**.
2. Do one of the following:
  - In the first text box, type your starting point place, and then type the destination in the second text box.
  - Touch the location source buttons to open the location source menu and select a starting point and destination.
3. Select the way to get to the destination (by car, by train, or by foot).
4. Touch **Get directions**. The directions to your destination appears in a list or on the map.

## Clearing the Map

When you have reached your destination, press **Menu** , and touch **More > Clear Map** to reset the map.

## Google Navigation

Another Google Maps navigation application is available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press **Home** , and touch  > **Navigation**.
2. Read the onscreen disclaimer and touch **Accept**.
3. Choose from the following onscreen options:
  - **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
  - **Type Destination** to manually enter a destination address.
  - **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
  - **Starred Places** to obtain directions to locations that have been starred within Google maps ([maps.google.com](https://maps.google.com)).



## Google Latitude

Google Latitude™ user location service lets you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.

Your location is not shared automatically. You must join Latitude, and then invite your friends to view your location or accept their invitations.




### Opening Latitude

To join Latitude:

1. Press **Home** , and touch  > **Latitude**.
2. Read the privacy policy. If you agree with it, touch **Agree**.


After you join Latitude, you can start sharing your locations with your friends. Only friends that you have explicitly invited or accepted can see your location.

To open Latitude after joining:

- ▶ Press **Home** , and touch  > **Latitude**.
- Press **Menu**  to utilize Google Latitude features. Choose from: **Map view**, **Location Settings**, **Add friends**, **Check in**, and **Refresh friends**.

### *Inviting Friends*

To share your location with friends and request to see their locations:

1. In Latitude, press **Menu**  and then touch **Add friends**.
2. Choose how to add friends:
  - **Select from Contacts:** Select any number of friends from Contacts.
  - **Add via email address:** Enter an email address and touch **Add friends**.
3. Confirm your friend is checked and touch **Yes**.

If your friends already use Latitude, they receive an email request and a notification on Latitude. If they have not yet joined Latitude, they receive an email request that tells them to sign in to Latitude with their Google account.

### *Accepting an Invitation*

When you get a sharing request from a friend, you can:

- **Accept and share back:** You can see your friends' locations, and they can see yours.
- **Accept, but hide my location:** You can see your friends' locations, but they can't see yours.
- **Don't accept:** No location information is shared between you and your friends.

You can change how your location is shared with each friend at any time. See [Connecting with Your Friends](#) for details.

### *Showing Your Friends*

You can show your friends using the map view or the list view.

**Note:** In order to display your friend's location, you need to have the Latitude layer enabled. On the Google Maps, press **Menu** , and touch **Layers** > **Latitude**.


Map View:

When you open Google Maps™, it shows your friends' locations. Each friend is represented by a photo icon with an arrow pointing at his or her approximate location. If a friend has opted to

enable city-level sharing, his or her icon will not have an arrow and it appears in the middle of the city. See [Connecting with Your Friends](#) for more details.

To see your friend's profile and connect with him or her, touch the photo. This will display your friend's name, and then touch the balloon right above his or her icon.

List View:

To show a list of your friends, touch  on Google Maps.

To see a friend's profile and connect with him or her, select your friend's name from the list.

### *Connecting with Your Friends*



Touch a friend's contact details balloon in map view or touch a friend in list view to open the friend's profile. In the profile screen, you can communicate with your friend and set privacy options.

- **Map:** Find a friend's location on the map.
- **Directions:** Get directions to the friend's location.
- **Ping for check in:** Send this friend a notification asking them to check in.
- **Sharing options:** Select from the following:
  - **Share best available location:** Share your precise location information.
  - **Share only city level location:** Share only the city you are in, not the street-level location. Your friend can see your photo icon in the middle of the city you are in. To share more precise location again, touch **Share best available location**.
  - **Hide from this friend:** Stop sharing your location with this friend, both in list view and in map view.
- **Remove this friend:** Remove the friend from your list and stop sharing locations with him or her altogether.

### *Changing Privacy Settings*

You have control over how and when you can be found by your friends. Only the last location sent to Latitude is stored with your Google account. If you turn off Latitude or are hiding, no location is stored.

To change your public profile:

1. Press **Home** , and touch  > **Latitude**.
2. Touch your own name, and then touch **Edit privacy settings**.

3. Set the following options to your preferences.
  - **Location reporting:** Let Latitude detect and update your location as you move. The update frequency is determined by several factors, such as how recently your location has changed. Choose from: **Detect your location**, **Set your location**, or **Do not update your location**.
  - **Enable location history:** Store your past location and visualize them on the Latitude website.
  - **Manage your friends:** Add or remove friends who can see your location.
  - **Sign out of Latitude:** Disable Latitude and stop sharing your location or status. You can always join Latitude again.
  - **Automatic check-ins:** Check you into places you have designated.
  - **Check-in notifications:** Enable notifications that suggest places to check in.
  - **Manage your places:** View and modify your automatic check-ins and muted places.

## Google Play Music App

**Play Music** plays digital audio files saved on the storage card. You need to copy music files to your storage card first to use the Music application. See [Use the Device's microSD Card as a USB Drive](#) for more details on copying files.

**Note:** If you have signed up for Google Music™, the first time you open the Google Play Music application you will be prompted to select the account whose online music library you want to access from the Google Play Music application. Follow the onscreen instructions to continue.

[Opening the Play Music Library](#)

[Playing Music](#)

[Search for Music in the Play Music Library](#)

[Using Playlists](#)

### Opening the Play Music Library

- ▶ Press **Home** , and touch  > **Play Music**. The Play Music library screen appears.


### Playing Music


1. On the Play Music library screen, touch a category name to view its contents. Available categories are:
  - **RECENT** to show the albums you have listened to recently.

- **ARTISTS** to show your Play Music library sorted by artist.
- **ALBUMS** to show your Play Music library sorted by album.
- **SONGS** to list all of your songs in alphabetical order.
- **PLAYLISTS** to select a customized playlist you've created.
- **GENRES** to show your Play Music library sorted by genre.

2. Touch a song in your library to play it.


- or -



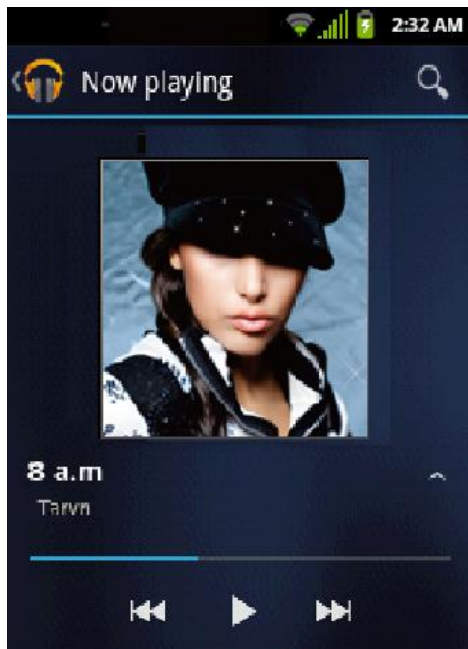



Touch the triangular menu button  next to an item and touch **Play**. The **Now playing** screen opens.

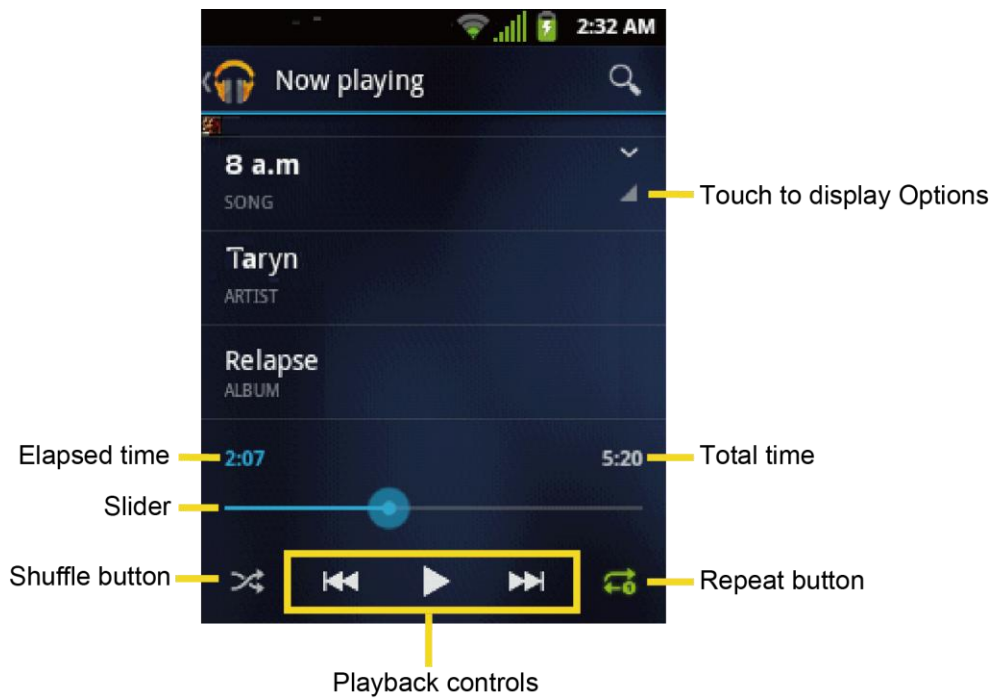


3. Touch  to show options. The following options are available for the control:





- Touch  to pause, or  to play again.
- Touch  to go back to the beginning of the current song, and  to play the next song in an album.
- Touch the Shuffle button  to toggle shuffle on or off.
- Touch the Repeat button  to cycle through the repeat modes: **Repeating all songs**, **Repeating current song**, or **Repeat is off**.

### *Displaying Additional Options*


While using the Play Music application you can touch the triangular menu button  next to any song, album, artist, or playlist to view additional options.

- **Play** to play the song.
- **Add to playlist** to add the song to the playlist.
- **More by artist** to show another album of the selected artist.
- **Shop for artist** to open the browser and find items related to the artist.
- **Search** to conduct a search using the application that you select.
- **Delete** to delete the song.

**Tip:** To change the settings in the Android Play Music application, press **Menu**  from the Play Music library screen, and then touch **Settings**.

## *Search for Music in the Play Music Library*


To find music in your Play Music library:

1. Open the Play Music library and touch the Search button .
2. Start typing the name of the artist, album, song, or playlist you're looking for. As you type, matching information is displayed on the screen.
3. To select a matched item, touch the item.


## *Using Playlists*

Create a playlist to organize your music.


### *Creating Playlists*

1. Open the Play Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song you want to add and touch **Add to playlist**.
3. On the **Add to playlist** window, touch **New playlist**.
4. Type the name of your new playlist and touch **OK**. After you save the playlist, it's added to the Playlists library.

### *Adding Song to Existing Playlists*


1. Open the Play Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song you want to add and touch **Add to playlist**.
3. On the **Add to playlist** window, touch the name of the playlist that you want to add the song to.

### *Removing Song From Playlists*


1. Open the Playlists library.
2. Touch the playlist that contains the music you want to remove.
3. Touch  next to the song you want to remove and touch **Remove from playlist**.

### *Renaming Playlists*


1. Open the Playlists library.

2. Touch  next to the playlist you want to rename and touch **Rename**.
3. Type the new name of the playlist and touch **Rename**.

### *Playing Song in Playlists*

1. Open the Playlists library.
2. Touch  next to the song you want to play and touch **Play**.



### *Deleting Playlists*

1. Open the Playlists library.
2. Touch  next to the playlist you want to delete and touch **Delete**
3. Touch **OK** to confirm.

## *Boost Zone*

**Important Privacy Message** – Boost Mobile’s policies often do not apply to third-party applications. Third-party applications may access your personal information or require Boost Mobile to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider’s policies, which can usually be found on their website. If you aren’t comfortable with the third party application’s policies, don’t use the application.

Boost Zone is a free application that lets you stay connected to all the latest news and information from Boost Mobile. Included here are, news, feedback, featured applications and trips/tricks for your device.

1. Press **Home** , and touch  > **Boost Zone**.

From the Boost Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.

# Web and Data

---

Your device's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

- Wi-Fi
- Data Services

This section addresses your device's data connections and the built-in Web browser. Additional data-related features can be found in [Messaging](#), [Applications and Entertainment](#), and [Tools and Calendar](#).

[Wi-Fi](#)

[Data Services](#)

[Browser](#)

## *Wi-Fi*

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your device's Wi-Fi, you need access to a wireless access point or "hotspot."



The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

[Turn Wi-Fi On and Connect to a Wireless Network](#)


[Check the Wireless Network Status](#)


[Connect to a Different Wi-Fi Network](#)

## *Turn Wi-Fi On and Connect to a Wireless Network*

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on. The device will scan for available wireless networks.
3. Touch **Wi-Fi settings**. The network names and security settings (open network or secured with WEP/WPA/WPA2 PSK) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.
4. Touch a Wi-Fi network to connect. If you selected an open network, read the message and touch **Connect**. If you selected a network that is secured, enter the key, and then touch **Connect**.

Depending on the network type and its security settings, you may also need to enter more information or choose a security certificate.



When your device is connected to a wireless network, the Wi-Fi icon () appears in the status bar and tells you the approximate signal strength. (The above icon indicates maximum signal strength.)

If **Network notification** in Wi-Fi settings is enabled, this icon () appears in the status bar whenever the device detects an available open wireless network within range.

**Note:** The next time your device connects to a previously accessed secured wireless network, you will not be prompted to enter the security key again, unless you reset your device to its factory default settings.




**Note:** Wi-Fi networks are self-discoverable, which means no additional steps are required for your device to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

## *Check the Wireless Network Status*

1. Press **Home**  > **Menu** , and touch **Settings** > **Wireless & networks** > **Wi-Fi settings**.
2. Touch the wireless network that the device is currently connected to. You will see a message box showing the Wi-Fi network name, status, speed, signal strength, and other details.

**Note:** If you want to remove the device's wireless network settings, touch **Forget** on this window. You need to enter the settings again if you want to connect to this wireless network.

## *Connect to a Different Wi-Fi Network*

1. Press **Home**  > **Menu** , and touch **Settings** > **Wireless & networks** > **Wi-Fi settings**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section. To manually scan for available Wi-Fi networks, on the Wi-Fi settings screen, press **Menu** , and touch **Scan**.
2. Touch another Wi-Fi network to connect to it.

**Note:** If the wireless network you want to connect to is not in the list of detected networks, scroll down the screen, and touch **Add Wi-Fi network**. Enter the wireless network settings and touch **Save**.

## Data Services

With your Boost service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including launching a data connection and navigating the Web with your device.



**Important:** Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.

### Launch a Web Connection

#### Data Connection Status and Indicators

### Launch a Web Connection

Launching a Web connection is as simple as opening the browser on your device.

- ▶ Press **Home** , and touch  > **Browser**. (Your data connection starts and you see the home page.)

**Note:** Internet connections can be made either through the Boost service or via Wi-Fi (configured within the **Settings > Wireless & networks** page).



While connecting, you may see an animation. Once complete, you are connected to the default home page.

**Tip:** To change the device's default launch page to your current page, press **Menu** , and touch **More > Settings > Set home page > Use current page > OK**.

**Note:** The Browser automatically launches when a Web link is touched from within either an email or text message.

### Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

	Your device is connected to the 3G Network and signed in to your Google account. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page). When the arrows are gray, your device is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open).
	



Your device is connected to the 3G Network but not signed in to your Google account. When the signal bars are animated, your device is transferring data. When the arrows are gray, your device is connected to the network but is not currently transferring data.

In any state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see [Launch a Web Connection](#).

## *Browser*

Your device's Web browser gives you full access to both mobile and traditional websites on the go, using data service, or Wi-Fi data connections.

[Learn to Navigate the Browser](#)

[Browser Menu](#)

[Select Text on a Web Page](#)

[Go to a Specific Website](#)

[Adjust Browser Page Settings](#)

[Adjust Browser Privacy Settings](#)

[Adjust Browser Security Settings](#)

[Set Search Engine](#)

[Create Website Settings](#)

[Reset the Browser to Default](#)

[Set the Browser Home Page](#)

[Create Bookmarks](#)

[Create a New Home Page](#)

[Add Bookmarks to Your Home Screen](#)

## *Learn to Navigate the Browser*

Navigating through menus and websites during a data session is easy once you have learned a few basics.

**Note:** Before you access the home page, you may be asked to enter your 10-digit wireless phone number and touch **OK**. Entering your phone number is not required for access to other Web pages.

## Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll through a website's page:

- ▶ In a single motion, touch and drag across or up and down a page.

## Selecting


To select onscreen items or links:

- ▶ Drag across a page, and then touch or touch an onscreen link to select the link.


Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

## Go Back

To go back one page:

- ▶ Press **Back**  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

## Go to a Web Page




1. Touch the Address field (top of the browser window) and enter a new Web address.
  - As you enter the address, possible matches are displayed within an onscreen list. Touch an entry to launch the desired website.
2. Touch  to launch the new page.

## Browser Menu


The browser menu offers additional options to expand your use of the Web on your device.

### Open the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** . You will see the browser menu.



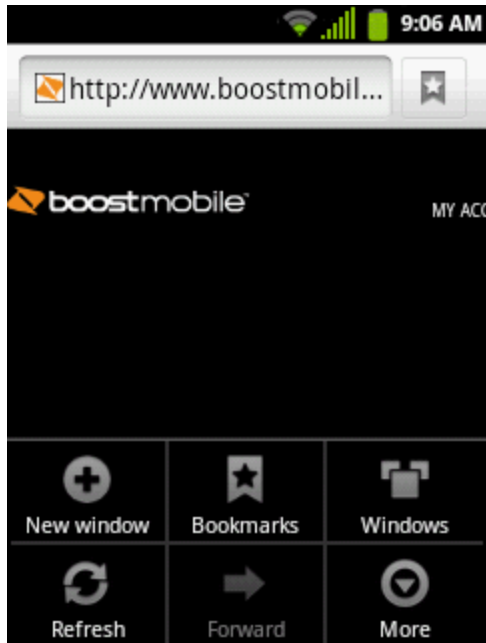


Options available within the browser menu include:

- **New window:** Launches a new Internet window while maintaining the current Web page active.
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Windows:** Displays the currently active browser windows as an onscreen list. Touch a window entry to launch that window.
- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page.
- **More:** Provide additional browser options:
  - **Add bookmark** (Menu+a): Adds the currently viewed page as a bookmark.
  - **Find on page** (Menu+f): Searches the current Web page for a word.
  - **Select text** (Menu+e): Selects text from the current Web page.
  - **Page info** (Menu+g): Displays the Name and URL (website address) of the site you're currently viewing.
  - **Share page** (Menu+s): Allows you to send a URL via Gmail, SMS, or Email, or Bluetooth.
  - **Downloads** (Menu+d): Keeps a list of previously downloaded content.
  - **Settings** (Menu+p): Lets you configure and manage your browser settings.

**Note:** These additional options can also be accessed via the QWERTY keyboard by using a combination of the Menu button (**Menu** ) and the specified key combination.


## Select Text on a Web Page

You can highlight text on a Web page and copy it, search for it, or share it.

1. Scroll to the area of the Web page containing the text you want to select.
2. Press **Menu** , and touch **More > Select text**.
3. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text and touch text. Any selected text will appear highlighted and then be copied to the device's clipboard.

## Go to a Specific Website




To go to a particular website by entering a URL (website address):

1. Touch the URL field and enter a website address.
  - As you type the address, if your desired website appears within the suggested sites list, touch the entry to begin surfing.
2. Touch .

**Note:** Not all websites are viewable on your device.

## Adjust Browser Page Settings




You can change the page settings for your browser, including default zoom level, pop-up blocking, display options, setting your home page, and more.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More > Settings**.
3. Navigate to the Page content settings area and select from one of the following page settings:
  - **Text size:** Adjusts the current onscreen text size. Choose from: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
  - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
  - **Open pages in overview:** Provides an overview of recently opened pages.
  - **Text encoding:** Adjusts the current text encoding.


- **Block pop-up windows:** Prevents pop-up advertisements or windows from appearing onscreen. Clear the check mark to disable this function.
- **Load images:** Allows Web page images to be loaded along with the other text components of a loaded website.
- **Auto-fit pages:** Allows Web pages to be resized to fit as much of the screen as possible.
- **Landscape-only display:** Displays pages only in the wider landscape screen orientation. Uncheck to view the page in portrait mode.
- **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Clear the check mark to disable this function.
- **Enable plug-ins:** Allows you to determine the way your device handles program enhancements. Select **Always on**, **On demand**, or **Off**.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Clear the check mark to disable this function.
- **Set home page:** Sets the current home page for the Web browser.

## *Adjust Browser Privacy Settings*

You can change your browser's privacy settings, including history, cache, and other data settings.





1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More** > **Settings**.
3. Navigate to the Privacy settings area and select from one of the following privacy settings:
  - **Clear cache:** Deletes all currently cached data. Touch **OK** to complete the process.
  - **Clear history:** Clears the browser navigation history. Touch **OK** to complete the process.
  - **Accept cookies:** Allows sites that require cookies to save and read cookies from your device.
  - **Clear all cookie data:** Clears all current browser cookie files.
  - **Remember form data:** Allows the device to store data from any previously filled-out forms. Clear the check mark to disable this function.

- **Clear form data:** Deletes any stored data from previously filled out forms. Touch **OK** to complete the process.
- **Enable location:** Allows sites to request access to your current location (using the built-in GPS function).
- **Clear location access:** Clears location access for all websites.

4. Press **Back**  to return to the browser.




## *Adjust Browser Security Settings*

You can adjust your browser's security settings such as whether or not to save passwords or show security warnings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More** > **Settings**.
3. Navigate to the Security settings area and select from one of the following privacy settings:
  - **Remember passwords:** Stores user names and passwords for visited sites. Clear the check mark to disable this function.
  - **Clear passwords:** Deletes any previously stored user names or passwords. Touch **OK** to complete the process.
  - **Show security warnings:** Notifies you if there is a security issue with the current website. Clear the check mark to disable this function.
4. Press **Back**  to return to the browser.

## *Set Search Engine*


You can select the default search engine.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More** > **Settings** > **Set search engine**.
3. Select a search engine you want to use.

## *Create Website Settings*




You can create settings for individual websites.

1. Press **Home** , and touch  > **Browser**.

2. Press **Menu** , and touch **More > Settings > Website settings**. These advanced settings can be configured for individual sites (for example, **Clear location access**).
3. Touch **Clear location access** to complete the process.




## *Reset the Browser to Default*

You always have the option to restore your browser to its default settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More > Settings > Reset to default**.
3. Touch **OK** to complete the process.

## *Set the Browser Home Page*

Customize your Web experience by setting your browser's home page.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **More > Settings > Set home page**.
3. Delete the current address and enter a new Web address.




- or -

Touch **Use current page** to select the current page as the home page.




4. Touch **OK** to complete the process.

## *Create Bookmarks*

Make browsing easier by setting up and using custom bookmarks.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**. Three tabs are revealed:
  - **Bookmarks:** Displays a list of your current Web bookmarks.
  - **Most visited:** Displays a list of your most frequently visited websites. Touch an entry to launch the selected page.
  - **History:** Displays a record of your browsing history.
3. Touch **Add** or **Add bookmark....** (first entry in the Bookmarks tab).
4. Enter a descriptive name for the new bookmark and touch **OK** to store the new entry to your bookmarks list.




### *Create Bookmarks From Other Tabs*

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch either the **Most visited** or **History** tab.
4. Touch and hold an entry from the list to display an onscreen pop-up menu.
5. Touch **Add bookmark** to add the selected entry to your current list of bookmarks.




- or -

1. Repeat steps 1-3 above.
2. Touch the star icon adjacent to a website address. The star will turn gold, indicating this website has been added to your current bookmarks list.

### *Create a New Home Page*

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch either **Most visited** or **History**.
4. Touch and hold an entry from the list to display an onscreen pop-up menu.
5. Touch **Set as homepage** to assign the selected entry as your new home page.

### *Add Bookmarks to Your Home Screen*

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch and hold an existing entry from the list to display an onscreen pop-up menu.
4. Touch **Add shortcut to Home** to add the selected entry to your Home screen.

# Camera and Video

---

You can use the camera or camcorder to take and share pictures and videos. Your device comes with a 3.2 megapixel camera that lets you capture sharp pictures and videos.

[Take Pictures](#)

[Record Videos](#)

[Camera/Video Settings](#)

[View Pictures and Videos Using Gallery](#)

[Working with Photos](#)

[Share Photos and Videos](#)

## Take Pictures

**Important:** Make sure the microSD card is installed before you use the camera or camcorder. All pictures or videos that you capture using your device are stored on the microSD card. For more information on how to install a microSD card on your device, see [Install a microSD Card](#).

[Open the Camera](#)

[Camera Viewfinder Screen](#)

[Review Screen](#)

[Take a Picture](#)



[Close the Camera](#)

## Open the Camera

To open the camera in photo mode and take photos:


- ▶ Press and hold the camera button at the lower right side of the device.

- or -

Press **Home** , and touch  > **Camera**.

## Camera Viewfinder Screen

You'll find the following controls on the camera viewfinder screen:

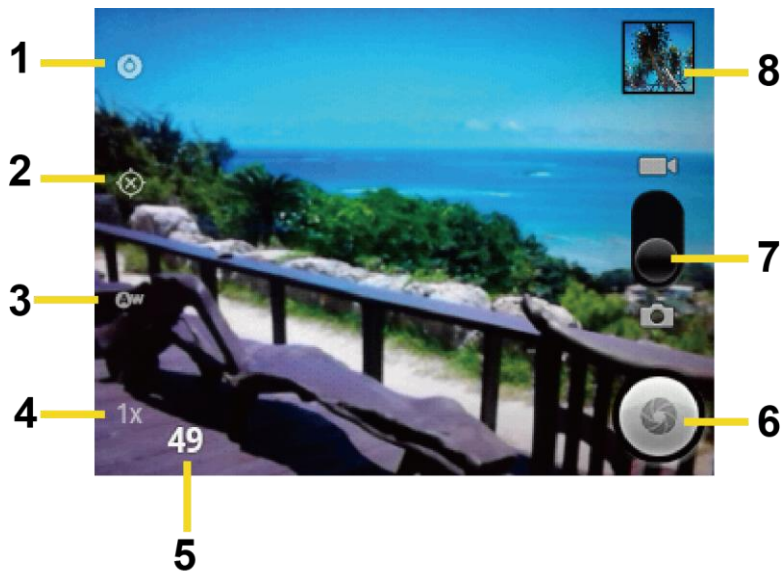


1. **Camera settings button:** Opens the settings menu and lets you change the camera settings. For more information, see [Camera/Video Settings](#).
2. **Location settings button:** Touch this button to activate the built-in GPS application and attach the current location information to the pictures you will take.
3. **White balance button:** Touch this button to change the white balance to enable the camera to capture colors more accurately by adjusting to your current lighting environment. White balance settings include: **Auto**, **Incandescent**, **Daylight**, **Fluorescent**, and **Cloudy**.
4. **Zoom button:** Touch this button to change the zoom settings. You can also change the zoom settings by pressing the volume button up or down.
5. **Available shot:** Displays the number of shot left available (depending on the capacity of the microSD card).
6. **Shutter button:** Touch to take a picture.
7. **Switch slider:** Drag up to change to camcorder.
8. **Thumbnail:** Thumbnail of the latest picture. Touch to view and manage.




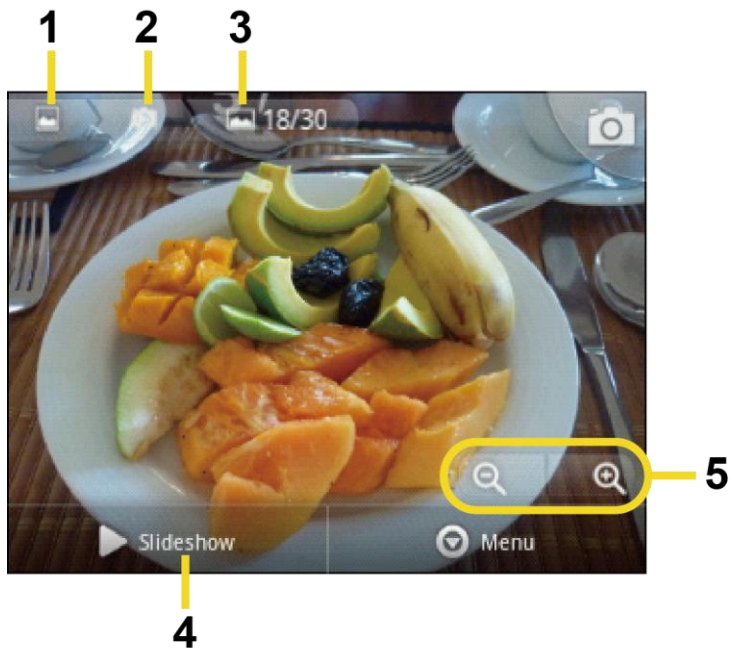
## Review Screen

After capturing a photo or video, the review screen lets you view, send, or delete the picture or video by touching the thumbnail.

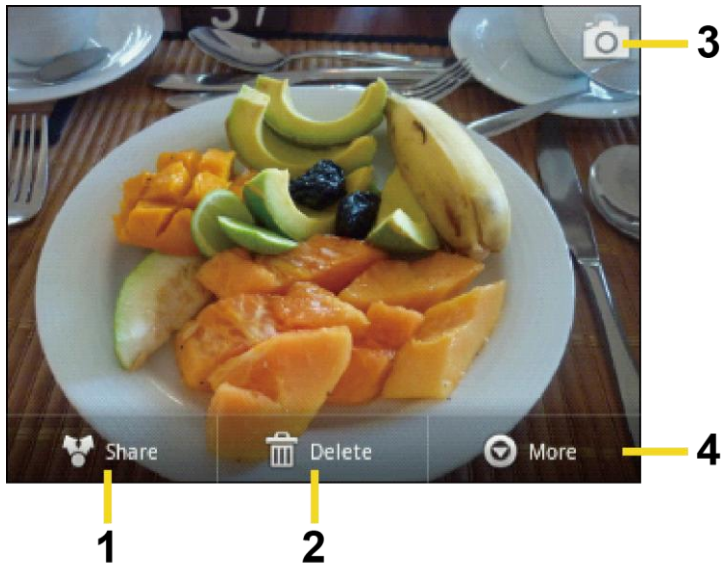

1. **Share:** Shares the captured photo or video to another phone or your computer using Bluetooth, sending it by email or multimedia message, or selecting a social network where you want to upload it.
2. **Delete:** Deletes the captured photo or video.
3. **Camera:** Goes back to the live camera screen.
4. **More:** Shows additional menu.

Press **Menu**  to show these additional options:





1. **Gallery:** Opens Gallery.
2. **Folder:** Opens the folder where the selected picture or video is included.
3. **File name:** Touch to show the file name of the selected picture or video.
4. **Slideshow:** Displays the slide show using the pictures stored in Gallery.
5. **Zoom in/out:** Zooms in/out the selected picture.

## Take a Picture

You can take high-resolution pictures using your device's camera.

1. Press and hold the camera button at the lower right side of the device.

- or -

Press **Home** , and touch  > **Camera**.

2. Change the settings if necessary.
3. Frame your subject on the screen.

**Tip:** Hold the device vertically when taking portrait shots or hold the device horizontally when taking landscape shots. Then you will not need to rotate the photo after capturing it.

4. Touch  to take the photo.

5. Choose what you want to do with the photo you've just taken. See [Review Screen](#) for details.

## Close the Camera

On the camera screen, press **Home**  or **Back** .

## Record Videos


Record high-quality videos (up to 480p resolution) using your device's video camera.

### Video Viewfinder Screen

#### Record a Video

## Video Viewfinder Screen

You'll find the following controls on the video viewfinder screen:

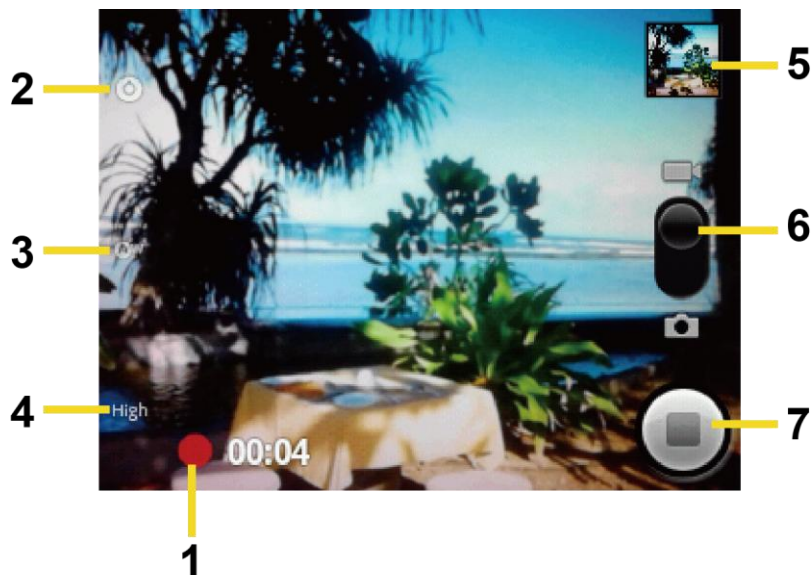



1. **Recording duration:** Displays the video recording duration (**Long video**) or the remaining time (**Video mail**).
2. **Video settings button:** Touch this button to change the video settings. For more information, see [Camera/Video Settings](#).
3. **White Balance button:** Touch this button to change the white balance to enable the camera to capture colors more accurately by adjusting to your current lighting environment. White balance settings include: **Auto**, **Incandescent**, **Daylight**, **Fluorescent**, and **Cloudy**.
4. **Video quality button:** Touch this button to select the video quality from **High (30m)**, **Low (30m)**, or **YouTube (High, 10m)** (**Long video** only.)




5. **Thumbnail:** Thumbnail of the latest video. Touch to view and manage.
6. **Switch slider:** Drag down to change to camera.
7. **Recorder button:** Touch to take a video. Touch again to stop.

## Record a Video


1. Press and hold the camera button at the lower right side of the device.

- or -

Press **Home** , and touch  > **Camera**.

2. Move the camera mode slider to the camcorder position  to activate camcorder mode.
3. Select **Video Mail** or **Long Video**.
  - **Video Mail:** Select this option to attach the captured video to your mail. The quality will be automatically set to QCIF (176x144) and the maximum length of a video is 30 seconds.
  - **Long Video:** Select this option to capture a long video. The quality can be selectable and maximum length of a video is 30 minutes.
4. Frame your subject on the screen.
5. Touch  to start capturing video.
6. Touch  to stop capturing.
7. Choose what you want to do with the video you've just captured. See [Review Screen](#) for details.

## Camera/Video Settings

- ▶ Touch  to show the camera/video settings menu.
  - **Focus mode:** Selects the range in which the lens can focus. Choose from: **Auto**, **Macro**, or **Normal**.
  - **Scene mode:** Selects a scene mode from: **Auto**, **Portrait**, **Scenery**, **Night portrait**, **Night scenery**, or **Action**.

**Note:** If you select items other than **Auto**, you cannot select **Focus Mode**, **Auto Exposure**, and **White Balance**.

- **Picture size:** Selects from: **3.2M Pixels**, **2.0M Pixels**, **0.8M Pixels**, or **VGA**.

- **Picture quality:** Selects the quality of the pictures from: **Super fine**, **Fine**, or **Normal**.

**Note:** Above items are for the camera only.

- **Color effect:** Adds a color effect to the picture. Choose from: **None**, **Mono**, **Sepia**, **Negative**, or **Aqua**.
- **Auto exposure:** Selects the exposure metering range from: **Frame average**, **Center weighted**, or **Spot metering**.
- **Camera settings:** Restores all of the camera's settings to their default values.

## *View Pictures and Videos Using Gallery*

Using the Gallery application, you can view photos and watch videos that you've taken with your device's camera, downloaded, or copied onto your microSD card.

For photos that are on your microSD card, you can do basic editing such as rotating and cropping. You can also easily make a photo as your contact picture or wallpaper and share photos with your friends.

[Open Gallery](#)


[View Photos and Videos](#)

[Zoom In or Out on a Photo](#)

[Watch a Video](#)

[Close Gallery](#)

### *Open Gallery*

- ▶ Press **Home** , and touch  > **Gallery**.

The Gallery application opens in the Albums view where your photos and videos organized by albums for easy viewing.



Photos or videos you took with the internal camera are stored in **Camera** album.

Folders in your storage card that contain photos and videos will also be treated as albums and will be listed below **Camera**. The actual folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **download** album.

When viewing pictures in Gallery, scroll left or right the screen to view more albums. Simply touch an album to view the photos or videos in that album.

**Note:** Depending on the number of pictures stored on the microSD card, it may take some time for Gallery to load all your photos on the screen.

## *View Photos and Videos*

After selecting an album, you can browse through the photos and videos of that album in grid view. Touch a photo or video to view.



1. Touch to go back to the Gallery screen.
2. Name of folder.
3. Touch to change view.
4. Drag left or right to scroll through the thumbnails.

## *Zoom In or Out on a Photo*

There are two ways you can zoom in or out of a photo:

- ▶ Touch the screen twice quickly to zoom in, then touch the screen twice quickly again to zoom out.


- or -

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in.




## Watch a Video

Use the onscreen controls to play, pause, or stop the video.

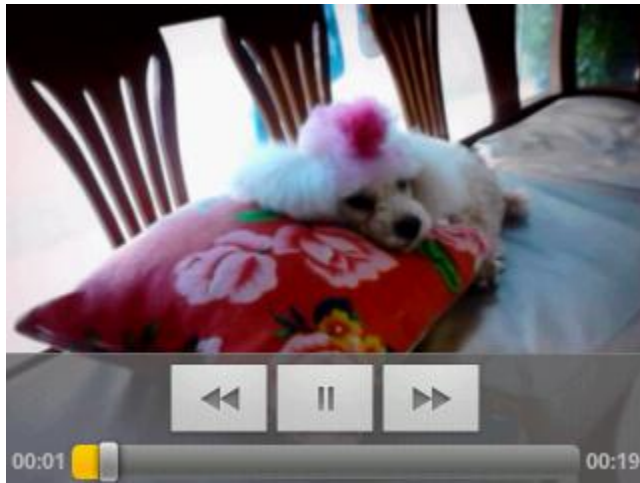

## Close Gallery

- ▶ While in the Gallery screen, press **Home** .




## Working with Photos

You can press and hold on a photo to open a selection menu and choose what to do with it. You can choose to delete the photo, rotate or crop it, and more.




### Rotate and Save a Photo

### Crop a Photo

## Rotate and Save a Photo

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album and then touch a picture.
3. Press **Menu** , and touch **More** > **Rotate Left** or **Rotate Right**.

## Crop a Photo

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album, and then touch a picture.
3. Press **Menu** , and touch **More** > **Crop**. A crop box then appears on the photo.





4. To adjust the crop box size, press and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
5. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
6. Touch **Save** to apply the changes to the picture.

The cropped picture is saved on the storage card as a copy. The original picture remains unedited.

## *Share Photos and Videos*

The Gallery application lets you send photos and videos using email or multimedia messages. You can share photos on your social networks such as Picasa and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

[Send Photos or Videos by Email/Gmail](#)

[Send Photos or Videos by Multimedia Message](#)


[Send Photos or Videos Using Bluetooth](#)


[Share Photos on Picasa](#)

[Share Videos on YouTube](#)

### *Send Photos or Videos by Email/Gmail*

You can send several photos, videos, or both in an email/Gmail message. They are added as file attachments in your email.



1. Press **Home** , and touch  > **Gallery**.

2. Touch the album that contains the photos or videos you want to share and touch and hold the photos or videos. The check mark appears at the upper right corner of the photos and videos. Touch multiple photos and videos to select them.
3. Touch **Share** > **Gmail** or **Email**.
4. Compose your message and then touch  or **Send**.

**Note:** If you selected **Email** and you have multiple email accounts, the default email account will be used.



## *Send Photos or Videos by Multimedia Message*

Although you can send several photos or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share and touch and hold the photos or videos. The check mark appears at the upper right corner of the photos and videos. Touch multiple photos and videos to select them.
3. Touch **Share** > **Messaging**.
4. Compose your message and then touch **Send**.

## *Send Photos or Videos Using Bluetooth*


You can select several photos, videos, or both and send them to another phone or your computer using Bluetooth.


1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share and touch and hold the photos or videos. The check mark appears at the upper right corner of the photos and videos. If you want to select multiple photos and videos, touch them.
3. Touch **Share** > **Bluetooth**.

In the next few steps, you'll be asked to turn on Bluetooth on your device and connect to the receiving Bluetooth device so the files can be sent. For more information, see [Bluetooth](#).

## *Share Photos on Picasa*



You need to be signed in to a Google account to upload pictures to the Picasa™ photo organizing service.

1. Press **Home** , and touch  > **Gallery**.

2. Touch the album that contains the photos you want to share and touch and hold the photos. The check mark appears at the upper right corner of the photos. Touch multiple photos to select them.
3. Touch **Share > Picasa**.
4. Select the online album where you want to upload the pictures, or touch  to create a new album.
5. Touch **Upload**. You can view the photos online at [picasaweb.google.com](http://picasaweb.google.com).

## *Share Videos on YouTube*

You can share your videos by uploading them to YouTube™. Before you do this, you must create a YouTube account and sign in to that account on your device.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the videos you want to share and touch and hold the video. The check mark appears at the upper right corner of the video. If you want to select multiple videos, touch videos.
3. Touch **Share > YouTube**.
4. Enter the prompted information, such as description and tags, and select a privacy option.
5. Touch **Upload**.

# Tools and Calendar

---

Learn how to use many of your device's productivity-enhancing features.

[Calendar](#)

[Clock & Alarm](#)

[Calculator](#)

[Voice Service](#)

[Eco Mode](#)

## Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your device's Calendar stays in sync with your Calendar on the Web, or the corporate calendar.

[Add an Event to the Calendar](#)

[Invite Guests to Your Event](#)

[Event Alerts](#)




[View Events](#)

[Erase Events](#)

[Show or Hide Calendars](#)

[Synchronize Calendars with Your Device](#)

### *Add an Event to the Calendar*

1. Press **Home** , and touch  > **Calendar**.
2. On any Calendar view, press **Menu** , and touch **More** > **New event** to open the Event details screen.
3. Enter a name for the event.
4. To specify the date and time of the event, do one of the following:
  - If there is a time frame for the event, touch the **From** and **To** dates and times to set them.

- Select the default time zone or set a different one for this event.
  - If the event is a special occasion such as a birthday or an all-day event, set the **From** and **To** dates, and then select the **All day** check box.
5. Enter the event location and description.
  6. If you have more than one calendar, select a calendar in which to add the event.

**Note:** You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the Calendar application on your device. For more information about creating and managing multiple Google Calendars, visit the Google website: [calendar.google.com](https://calendar.google.com).

**Note:** If you have synchronized your device with a corporate account, you can also select these calendars.

7. Enter email addresses to invite guests to your event. See [Invite Guests to Your Event](#).
8. If the event occurs on a regular basis, touch the **Repetition** box and then choose how often the event occurs.
9. Set the event reminder time.

**Note:** You can add another reminder time in a Google Calendar event. Touch **Add reminder**  to add another reminder.

10. Scroll to the bottom of the screen and then touch **Done**.

## *Invite Guests to Your Event*

If you want to invite guests to your event, you need to create and add the event in your Google Calendar.


An email invitation will be sent to your guests using your Google or Corporate account.

1. Open Calendar and create a new event. Touch the **Calendar** field and then select your Google account (or one of your other Google Calendars). See [Add an Event to the Calendar](#).
2. Add details about the event, such as date and time, location, and more.
3. In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas.
4. Touch **Done** to add the event to your Google Calendar.


If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.

## Event Alerts

When your device is turned on and you have an event alarm scheduled, your device alerts you and displays the event summary. There are several ways your device alerts you to scheduled events:

- By playing the assigned ringtone type.
- By showing the  icon on the status bar.
- By showing the Alert screen.


## Event Reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you of the upcoming event.


To view, dismiss, or postpone the reminder:

1. Slide the status bar down to open the Notifications panel.
2. Touch the upcoming event name to display the event.

**Note:** If you have other pending event reminders, these events will also appear on the screen.

3. Do one of the following:
  - Touch **Snooze all** to postpone all event reminders for five minutes.
  - Touch **Dismiss all** to dismiss all event reminders.
  - Press **Back**  to keep the reminders pending in the notifications area of the status bar.

To set reminder settings:



- ▶ On any Calendar view, press **Menu** , and touch **More > Settings**, and set the items under **Reminder settings**.


## View Events

You can display the Calendar in daily, weekly, monthly, or agenda view. To change the Calendar view, press **Menu** , and touch **Day**, **Week**, **Month**, or **Agenda**.

### Day and Agenda Views

Day view displays a list of the events of one day. Agenda view shows a list of all your events in chronological order.

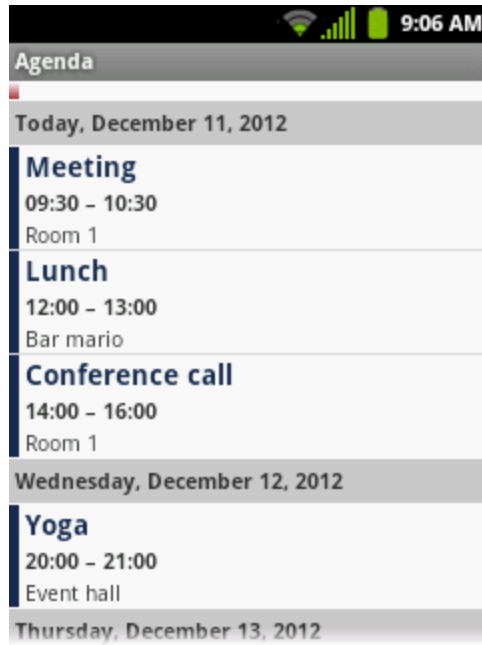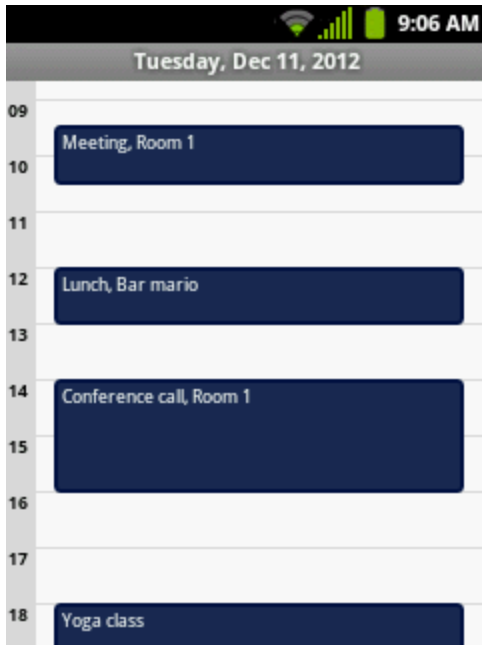


The color bars on the left side of the events indicate the type of calendar that includes the event. To find out what each color represents, press **Menu** , and then touch **More > Calendars**.

When in Day view, slide left or right across the screen to view earlier or later days.

### *Week View*

Week view displays a chart of the events of one week.

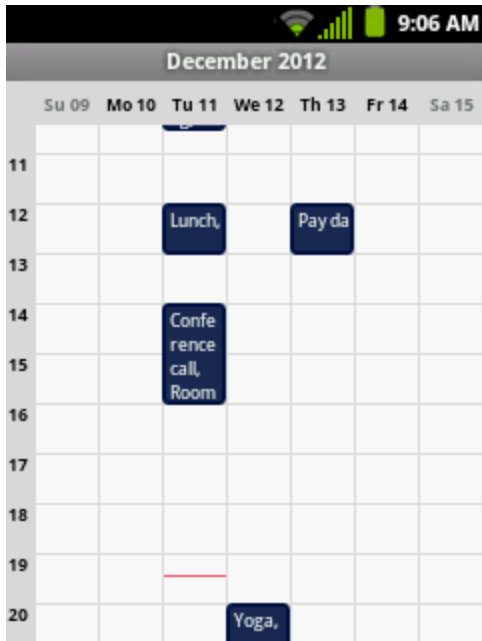

When in Week view:

- You can touch and hold on a time slot to open an options menu from which you can also choose to create an event or switch to either Day or Agenda view.
- Touch an event to view its details.
- Slide left or right across the screen to view earlier or later weeks.

### Month View



In Month view, you'll see markers on days that have events.




When in Month view:

- Touch a day to view the events of that day.
- Press and hold a day to open an options menu from which you can also choose to create an event or switch to either Day or Agenda view.
- Slide up or down the screen to view earlier or later months.

### Erase Events

1. Press **Home** , and touch  > **Calendar**.
2. Open the calendar event details:
  - In Agenda, Day, and Week views, touch the calendar event you want to delete.
  - In Month view, touch the date where the calendar event occurs, and touch the calendar event.




3. Press **Menu** , and touch **Delete event**.
4. In the **Delete** confirmation box, touch **OK**.

- or -

If the calendar event is recurring, select **Only this event**, **This & future events**, or **All events**, and touch **OK**.





## Show or Hide Calendars

- ▶ In any Calendar view, press **Menu** , touch **More > Calendars**, and then touch a calendar to show  or hide it. Touch **OK** to go back to the Calendar.

## Synchronize Calendars with Your Device

You can choose which Google Calendars to keep synchronized on your phone or which ones to stop synchronizing.

### Synchronizing a Google Calendar

1. Press **Home**  > **Menu** , and touch **Settings > Accounts & sync**.
2. Touch the account you want to sync with.
3. Touch **Sync Calendar**.
4. In any Calendar view, press **Menu** , touch **More > Calendars**, and then select or clear a calendar to sync .

### Synchronize a Corporate Calendar

If you have set up a corporate account on your device, you can also synchronize corporate calendar events on your device. Calendar events on your corporate account will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

## Clock & Alarm

The Clock application functions as a desk clock that shows the date, time, and weather information. You can also use it to turn your device into an alarm clock.

[Opening Clock](#)


[Setting an Alarm](#)



[Changing Alarm Settings](#)

## Opening Clock


To open the Clock application:

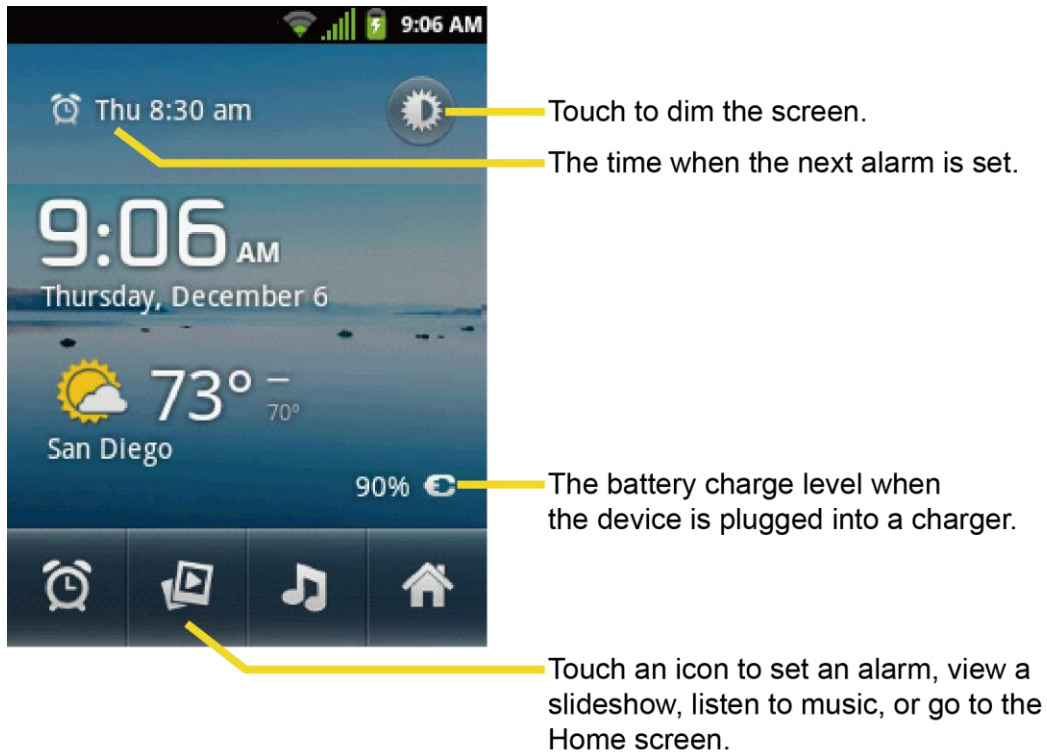- ▶ Press **Home** , and touch  > **Clock**. You will see date, time, and weather information.



 
- Touch the Dimmer icon  to dim the screen.
- To return to the Home screen, touch the Home tab  at the bottom of the Clock screen.



To play a slideshow of the pictures in your Gallery albums:

- ▶ Touch the Slideshow tab  at the bottom of the Clock screen.
  - Press **Back**  to end the slideshow.


To play music while the Clock is displayed:

- ▶ Touch the Music tab  at the bottom of the Clock screen. (The Music application opens. Select desired music to play. For more information, see [Google Play Music App](#).)


## Setting an Alarm

1. Press **Home** , and touch  > **Clock**.

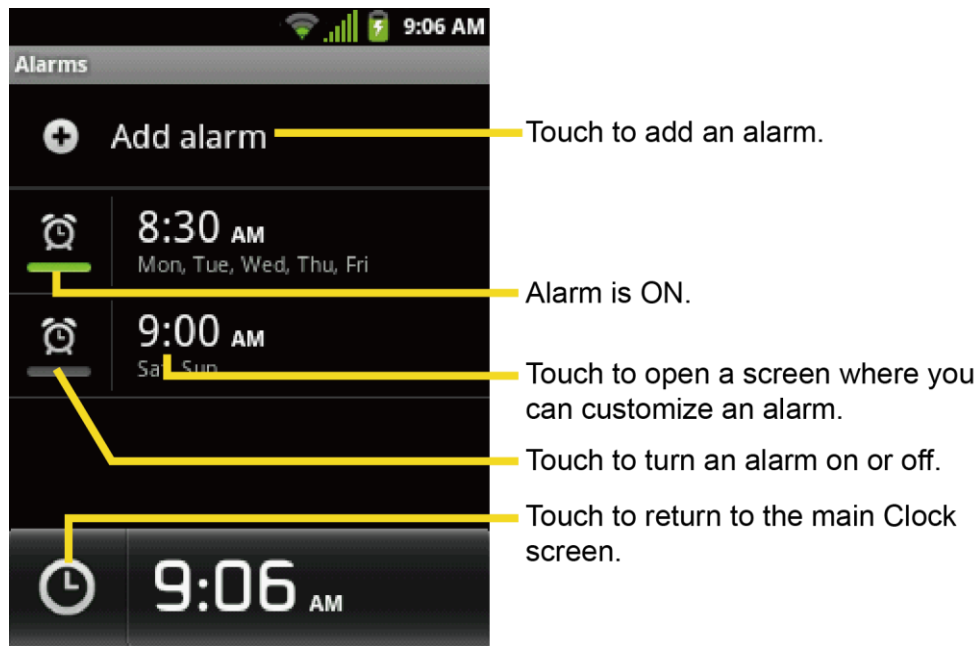


2. Touch the Alarms tab  on the bottom of the screen.







**Note:** When you first open the alarms, two alarms are set up by default and ready for you to customize. These alarms are turned off by default.

3. Touch an existing alarm to change the settings or touch **Add alarm** to add a new one and set the alarm time.
4. Touch **Time** to adjust the hour and minute by touching + or -.
5. Touch **Repeat** to select a repeat status for the alarm.
6. Touch **Ringtone** to select a ringtone that will play as an alarm.
7. Touch **Vibrate** to add a vibration feature to the alarm.
8. Touch **Label** to enter a name for the alarm.
9. When you're finished, touch **Done**. (Alarms that are set are underlined in light green.)
  - Touch the alarm icon  next to an alarm to turn it on or off.

To delete an Alarm:







1. Press **Home** , and touch  > **Clock**, and touch  at the bottom of the Clock screen.
2. From the Alarms screen, touch a desired alarm, and then touch **Delete**.
3. Touch **OK** to confirm the deletion.

## Changing Alarm Settings

1. Press **Home** , and touch  > **Clock**, and touch  at the bottom of the Clock screen.
2. From the Alarms screen, press **Menu** , and touch **Settings**.
3. Configure the following options:
  - **Alarm in silent mode:** Select to sound the alarm even while the device is in silent mode.
  - **Alarm volume:** Select to set the alarm volume.
  - **Snooze duration:** Select to set the snooze duration from 5 to 30 minutes in 5-minute intervals.
  - **Volume and Camera:** Selects the behavior of the volume and camera buttons when pressed while the alarm sounds. Choose from: **None**, **Silence**, **Snooze**, or **Dismiss**.

## Calculator

Your device comes with a built-in calculator.

1. Press **Home** , and touch  > **Calculator**.
2. Enter numbers by touching the onscreen keys.
  - Touch  to clear a number. Touch and hold  to clear an entire number.
  - To access more advanced features, flick the screen left or press **Menu** , and touch **Advanced panel**.
3. Press **Back**  to close the calculator.

## Voice Service

[Automatic Speech Recognition \(ASR\)](#)

[Google Voice Recognition Settings](#)



[Text-to-speech Settings](#)

[Voice Search](#)

## Automatic Speech Recognition (ASR)

You can use your device's built-in automatic speech recognition (ASR) software (Voice Dialer) to dial a phone number in your Contacts or to launch device functions. All you have to do is talk into the device, and ASR will recognize your voice and complete tasks by itself.

## Activating the Voice Dialer



- ▶ Press **Home** , and touch  > **Voice Dialer**.

The device prompts you to say a command from the list displayed on the screen. To complete your task, simply follow the onscreen prompts or touch an onscreen option.



If the application does not recognize the number, name, or application name, it will find the most likely matches and display a list. Touch a selection or touch **Cancel** to exit the Voice Dialer.

**Tip:** Use ASR in a quiet environment so it can accurately recognize your commands.



## Making a Voice Call with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Call** [contact]” or “**Dial** [number].”
  - For example, say “**Call John Smith on mobile**,” to call John Smith’s mobile phone. Your device dials the number stored for the contact “John Smith” with the label “Mobile.”



## Opening an Application with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [application name].”
  - For example, say “**Open Calendar**,” to open the Calendar. The application screen is displayed.

## Opening a Settings Menu with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [settings menu name].”
  - For example, say “**Open sound settings**.” The Sound settings menu screen is displayed.



## Google Voice Recognition Settings

- ▶ Press **Home**  > **Menu** , and touch **Settings** > **Voice input & output** > **Voice recognizer settings**.
  - **Language** to set the language used when entering text by speaking.
  - **SafeSearch** to filter explicit text and images from the search results. Select from **Off**, **Moderate**, or **Strict**.

- **Block offensive words** to replace recognized offensive words in transcriptions with [#] when entering text by speaking.
- **Personalized recognition** to improve speech recognition accuracy.
- **Google Account dashboard** to manage your collected data.


## Text-to-speech Settings

Your device can convert text into speech in some downloaded applications. You may select the language you hear or adjust its speed.


1. Press **Home**  > **Menu** , and touch **Settings > Voice input & output > Text-to-speech settings**.
2. Touch **Speech rate** and select a speed.
3. Touch **Language** and select a language.
4. Touch **Listen to an example** to play a short demonstration of the set speech synthesis.
5. Select the **Always use my settings** check box to keep your settings.

## Voice Search



Voice Search allows you to find information on the web as well as items and information on your device by speaking your search terms.

1. Touch  on the Google Search Bar.
 

- or -



Press and hold the **Search**  key.

- or -

Press **Home** , and touch  > **Voice Search**.
2. Speak clearly into the device's microphone. If an error occurs, touch **Speak again**.
3. Touch a matching item from the onscreen list.

## Eco Mode

The Eco Mode allows you to save battery life while using your device.

1. Press **Home** , and touch  > **Eco Mode**.
2. Drag the onscreen slider to select when you use the Eco Mode.

- **Never:** Disables the Eco Mode.
  - **10-90%:** Selects the remaining battery power when the Eco Mode activates. For example, 40% means the Eco Mode activates when the remaining battery power reaches 40%.
  - **Always:** Sets your device to always use the Eco Mode.
3. Touch **Eco settings** to select the Eco level.
  4. Touch the leaf of the following items to select.
    - **Screen timeout** to set the screen timeout to 15 seconds.
    - **Display brightness** to decrease the display brightness.
    - **Wallpaper** to select the Eco wallpaper.
    - **Auto-sync** to disable automatic synchronization with applications.
    - **Haptic feedback** to turn off Haptic feedback feature.
    - **Auto-rotate screen** to disable the Auto-rotate screen feature.
  5. Touch **Close**.

When Eco Mode is on, the Eco Mode icon  appears on the status bar.

Configured settings in the Eco Mode are automatically reflected in the respective **Settings** menu, and vice versa.

# Bluetooth

---

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

[Turn Bluetooth On or Off](#)

[The Bluetooth Settings Menu](#)

[Change the Device Name](#)



[Connect a Bluetooth Headset or Car Kit](#)

[Reconnect a Headset or Car Kit](#)

[Disconnect or Unpair From a Bluetooth Device](#)



[Send and Receive Information Using Bluetooth](#)

## *Turn Bluetooth On or Off*


1. Press **Home**  > **Menu** , and touch **Settings** > **Wireless & networks**.
2. Select the Bluetooth check box to turn Bluetooth on. Clear the check box to turn Bluetooth off.

**Note:** Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals.

## *The Bluetooth Settings Menu*



- ▶ Press **Home**  > **Menu** , and touch **Settings** > **Wireless & networks** > **Bluetooth settings**.

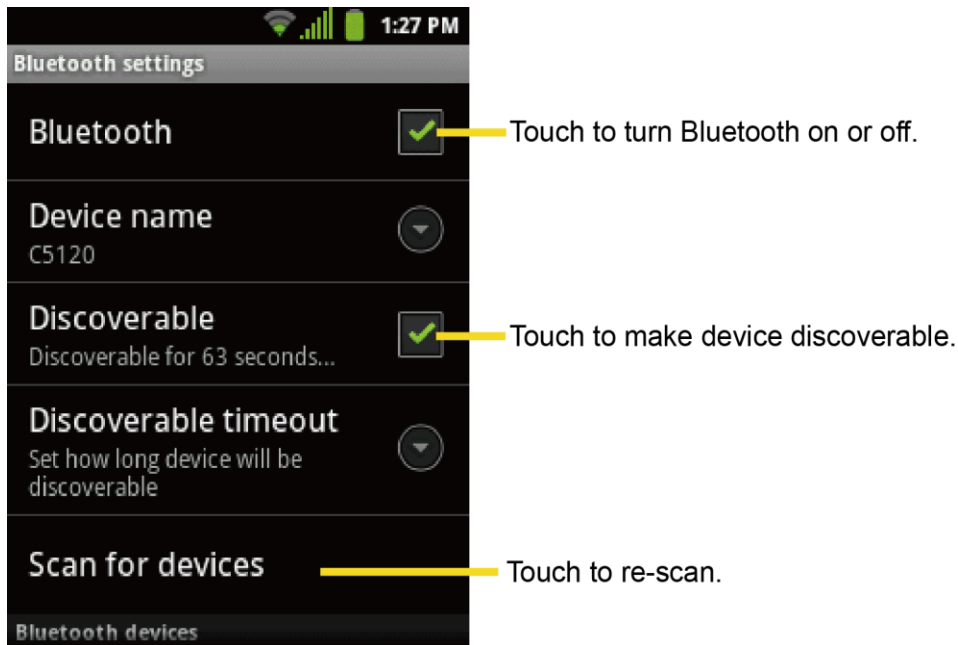



## Change the Device Name



The device name identifies your device to other devices.

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks**.
2. If the Bluetooth check box is not selected, select it to turn Bluetooth on.
3. Touch **Bluetooth settings > Device name**.
4. Enter the name for your device in the dialog box, and then touch **OK**.


## Connect a Bluetooth Headset or Car Kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

To listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks > Bluetooth settings**.
2. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
3. Make sure that the headset is discoverable, so that your device can find the headset. Refer to the instructions that came with the headset to find out how to set it to discoverable mode.



4. Touch **Scan for devices**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of your headset displayed in the Bluetooth devices section, touch the name. Your device then automatically tries to pair with the headset.
6. If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth devices section. When the Bluetooth headset or car kit is connected to your device, the Bluetooth connected icon  is displayed in the status bar. Depending on the type of headset or car kit you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

**Note:** Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.



## *Reconnect a Headset or Car Kit*

When you have paired a headset with your device, you should be able to reconnect it automatically by turning on Bluetooth on your device and then turning on the headset. However, sometimes you will need to reconnect manually, for example if you have been using your headset with another Bluetooth device.

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks > Bluetooth settings**.
2. If the Bluetooth check box is not selected, select it to turn Bluetooth on.
3. Make sure that the headset is discoverable.
4. Touch the headset's name in the Bluetooth devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the headset or car kit documentation to find the passcode.
6. If you still cannot reconnect to the headset or car kit, follow the instructions in [Disconnect or Unpair From a Bluetooth Device](#), and then follow the instructions in [Connect a Bluetooth Headset or Car Kit](#).

## *Disconnect or Unpair From a Bluetooth Device*



To disconnect a Bluetooth device:

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks > Bluetooth settings**.

2. In the Bluetooth devices section, touch and hold the device to disconnect.
3. Touch **Disconnect**.

To unpair from a Bluetooth device:

You can make your device forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks > Bluetooth settings**.
2. In the Bluetooth devices section, touch and hold the device to unpair.
3. Touch **Unpair** or **Disconnect & unpair** (when connected).

## *Send and Receive Information Using Bluetooth*




You can use Bluetooth to transfer information between your device and another Bluetooth-enabled device such as a phone or notebook computer. The first time you transfer information between your device and another device, you need to enter or confirm a security passcode. After that, your device and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.



### [Send Information From Your Device to Another Device](#)

### [Receive Information From Another Device](#)

## *Send Information From Your Device to Another Device*

You can send the following types of information, depending on the device you are sending to:

- Images and videos
  - Contacts
1. Set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files.” Refer to the device’s documentation for instructions on receiving information over Bluetooth.
  2. On the device, open the application that contains the information or file you want to send. For example, if you want to send a photo, press **Home** , and touch  > **Gallery**.
  3. Follow the steps for the type of item you want to send:
    - **Photo or video** (in Camera): After capturing a photo, on the preview screen, touch the **Share** button , and then touch **Bluetooth**.

- **Photos and videos** (in Gallery): On the **Albums** tab, touch an album, and select the items you want to share. Touch the **Share** button , and then touch **Bluetooth**.
  - **Contacts**: Touch the entry, and then press **Menu** , and touch **Share > Bluetooth**.
4. If you are prompted to turn on Bluetooth, touch **Yes**.
  5. Touch the name of the receiving device.
  6. If prompted, accept the connection on the receiving device, and enter the same passcode on both your device and the other device, or confirm the auto-generated passcode.
  7. On the receiving device, accept the file.



The location where the information is saved depends on the type of information and the receiving device:

- If you send a contact, it is normally added directly to the Contacts application on the receiving device.
- If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.
  - On Windows XP, the path may be: C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange.
  - On Windows Vista, the path may be: C:\Users\[your username]\Documents.
- If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another wireless phone, it may be saved in a folder named “Images.”

## *Receive Information From Another Device*

Your device is capable of receiving a wide variety of file types with Bluetooth, including photos, videos, or Contacts.

To receive files from another device, you need to have a microSD card installed in your device.

1. Press **Home**  > **Menu** , and touch **Settings > Wireless & networks > Bluetooth settings**.
2. If the **Bluetooth** check box is not selected, select it to turn Bluetooth on.
3. Touch the **Discoverable** check box to make your device visible from other devices.

4. Touch **Discoverable timeout** and select the time duration your device is visible to others.
5. On the sending device, send one or more files to your device. Refer to the device's documentation for instructions on sending information over Bluetooth.
6. If prompted, enter the same passcode on both your device and the other device, or confirm the auto-generated passcode. A Bluetooth authorization request is displayed on your device.
7. Touch **OK**.
8. When your device receives a file transfer request notification, slide down the notifications panel, and then touch **Accept**.
9. When a file is transferred, a notification is displayed. To open the file immediately, slide down the notifications panel, and then touch the relevant notification.

When you open a received file, what happens next depends on the file type:

- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

# *microSD Card*

---

Your device is equipped with a 2 GB microSD™ (Secure Digital) memory card that allows you to store images, videos, music, documents, and voice data on your device.

**Important:** Your device comes with the microSD card preinstalled.

[Remove the microSD Card](#)

[Install a microSD Card](#)

[View the microSD Card Memory](#)

[Unmount the microSD Card](#)

[Format the microSD Card](#)


[Use the Device's microSD Card as a USB Drive](#)

## *Remove the microSD Card*


1. Remove the battery cover. See [Set Up Your Device](#).
2. Grasp the white pull-tab extending from the battery pack and pull the battery out of its compartment.

**WARNING:** Do not handle a damaged or leaking Li-Ion battery as you can be burned.

3. Slide the SD card holder in the direction of the arrow to unlock it (①).
4. Raise the card and card holder with your fingers (②).
5. Gently pull out the card from the holder (③).

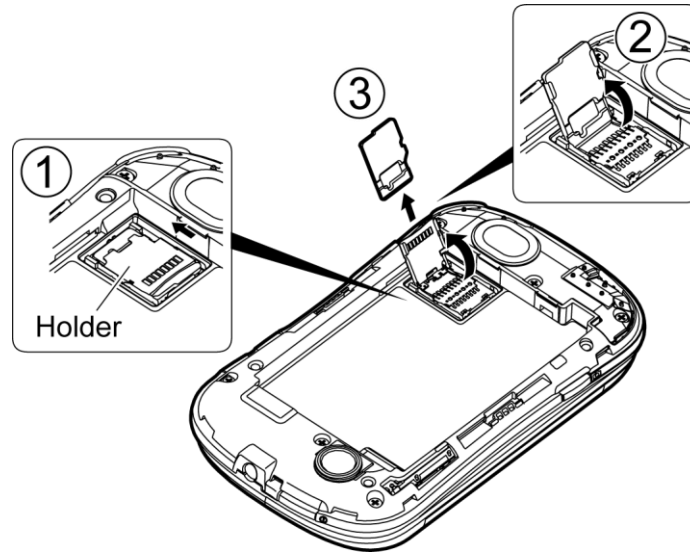

6. Replace and lock the card holder (④).

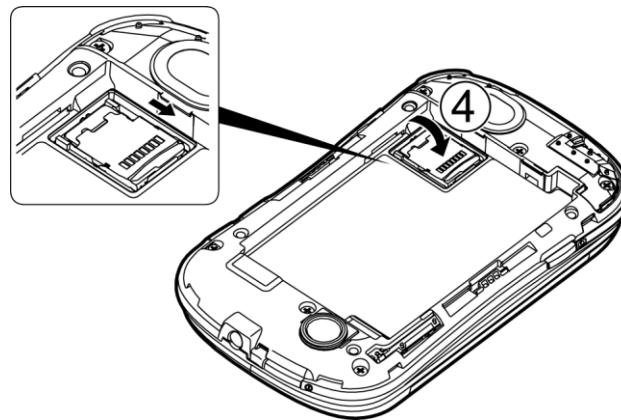

7. Place the battery back into its compartment and replace the battery cover.


**Note:** You can easily damage the microSD card by improper operation. Please be careful when inserting, removing, or handling the microSD card.

**Note:** Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.


## *Install a microSD Card*

1. Remove the battery cover and battery.
2. Slide the card holder in the direction of arrow to unlock it (①).
3. Raise the card holder with your finger (②).

4. Insert a microSD card into the holder. Make sure to check the position of the gold terminals (③).

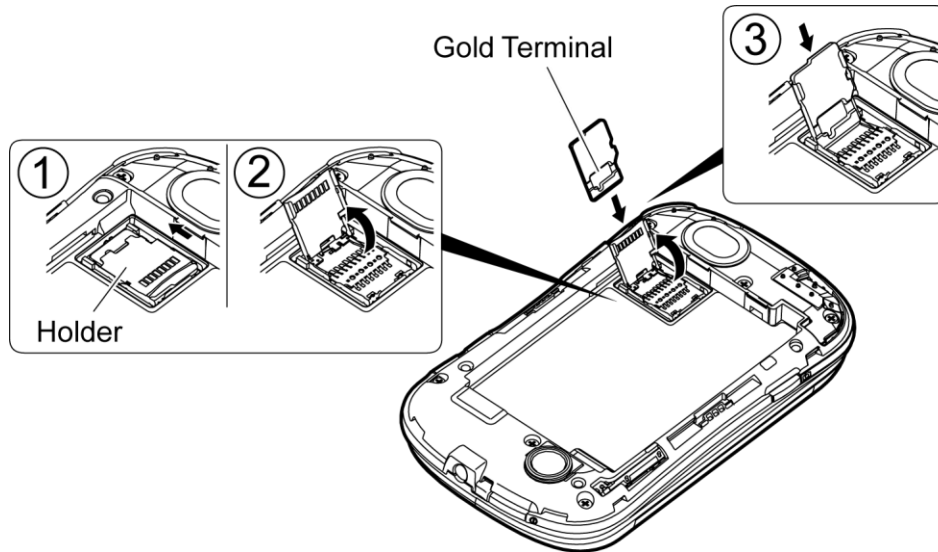

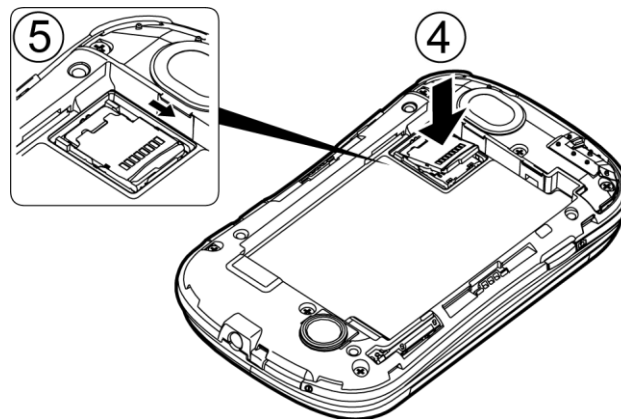

5. Gently press the card and card holder (④), and then slide the holder in the direction of arrow to lock it (⑤).



6. Place the battery back into its compartment and replace the battery cover.



## View the microSD Card Memory

- ▶ With the microSD card inserted, press **Home**  > **Menu** , and touch **Settings** > **Storage**. (The total and available memory space will be displayed.)

## Unmount the microSD Card



When you need to remove the microSD card, you must unmount the microSD card first to prevent corrupting the data stored on it or damaging the microSD card. Since you will remove the battery first before you can remove the microSD card, close all running applications on your device and save any data first.



1. Press **Home**  > **Menu** , and touch **Settings > Storage**.
2. Touch **Unmount SD card > OK**.
3. Remove the microSD card. See [Remove the microSD Card](#).

## *Format the microSD Card*


Formatting a microSD card permanently removes all files stored on the card.

1. Press **Home**  > **Menu** , and touch **Settings > Storage**.
2. Scroll down the screen, touch **Erase SD card > Erase SD card > Erase everything**.

**Note:** The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## *Use the Device's microSD Card as a USB Drive*

To transfer music, pictures, and other files from your computer to your device's microSD card, you need to set the device's microSD card as a USB drive.

1. Connect the device to your computer using the supplied USB cable.
2. If you see  on the status bar, slide it down to open the Notifications panel and touch the USB connection notification.
3. Touch **Mass Storage > Done**. See [PC Connection](#).
4. On your computer, the connected device is recognized as a removable disk. Navigate to this removable disk and open it.
5. Do one of the following:
  - Copy files from the computer to the root folder on the device's storage card.
  - Copy files from the device's storage card to a folder on your computer or computer desktop.
6. After copying the files, unmount the removable disk (that is, the connected device) as required by your computer's operating system to safely remove your device, and disconnect the device from the computer.

**Note:** The device will not recognize the microSD card when it is connected to a computer as a disk drive. You will not be able to use some of the device's applications such as the camera or Music.

# *Important Safety Information*

---

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

## *General Precautions*

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the portions of your phone where the internal antennas are located while using the phone.
- Speak directly into the mouthpiece. Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.
- Authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

## *Maintaining Safe Use of and Access to Your Phone*

### *Do Not Rely on Your Phone for Emergency Calls*

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all wireless networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

### *Using Your Phone While Driving*

Using your phone while driving (or operating the phone without a hands-free device) is prohibited in certain jurisdictions. Laws vary as to specific restrictions. Remember to focus on driving first.

## *Following Safety Guidelines*

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

## *Using Your Phone Near Other Electronic Devices*

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

## *Personal Implantable Medical Devices*

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

**Note:** Always request permission before using the phone in healthcare facilities or near medical equipment.

## *Turning Off Your Phone Before Flying*

To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To help prevent the risk of interference, regulations prohibit using your phone while the plane is in the air.

## *Turning Off Your Phone in Dangerous Areas*

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They may include:

- Fueling areas, such as gas stations.
- Below deck on ships and boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.

- Any other area where you would normally be advised to turn off your vehicle's engine, for example.

**Note:** Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

## *Restricting Children's Access to Your Phone*

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone, make inadvertent emergency calls, or make other calls that may impact your Boost account.

## *Using Your Phone With a Hearing Aid Device*

A number of Boost phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users to find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your Milano has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise, even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

**Note:** This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the

manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “excellent use.” This is synonymous for T ratings.

Boost further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store. More information about hearing aid compatibility may be found at: <http://www.fcc.gov>, <http://www.fda.gov>, and <http://www.accesswireless.org>.

## *Getting the Best Hearing Device Experience With Your Phone*

To further minimize interference, move the phone around to find the point with least interference.

## *Caring for the Battery*

### *Protecting Your Battery*

The guidelines listed below help you get the most out of your battery’s performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Boost is not aware of similar problems with Boost phones resulting from the proper use of batteries and accessories approved by the manufacturer of your phone. Use only manufacturer-approved batteries and accessories found through your phone’s manufacturer. Buying the right batteries and accessories is the best way to ensure they’re genuine and safe.
- Do not disassemble or open crush, bend or deform, puncture or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Keep the metal contacts on top of the battery clean.
- Battery usage by children should be supervised.

## *Charging*

- In order to avoid damage, charge the battery only in temperatures that range from 32°F to 113°F (0°C to 45°C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

## *Storing*

- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4°F to 140°F (-20°C to 60°C)

More than one month:

-4°F to 113°F (-20°C to 45°C)

## *Disposal of Lithium Ion (Li-Ion) Batteries*

- Promptly dispose of used batteries in accordance with local regulations.
- Never dispose of the battery by incineration.
- Do not handle a damaged or leaking Li-Ion battery as you can be burned.
- For safe disposal options of your Li-Ion batteries, contact your nearest Boost authorized service center.

**Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

# *Radio Frequency (RF) Energy*

## Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

## Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

## Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Boost-supplied or Boost-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antennas are at least **0.591 inches (1.5 centimeters)** from your body when transmitting. Use of non-Boost-approved accessories may violate FCC RF exposure guidelines.

Other accessories used with this phone for body-worn operations must not contain any metallic components and must provide at least **0.591 inches (1.5 centimeters)** separation distance between the antennas and the user's body.

For more information about RF exposure, visit the FCC website at <http://www.fcc.gov>.

## *Specific Absorption Rates (SAR) for Wireless Phones*

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public. The highest reported SAR values of the Milano are:

**Cellular CDMA mode (Part 22):**

Head: 0.51 W/kg; Body-worn: 0.55 W/kg

**PCS mode (Part 24):**

Head: 0.56 W/kg; Body-worn: 0.73 W/kg

**BC10 CDMA mode (Part 90):**

Head: 0.75 W/kg; Body-worn: 0.76 W/kg

**FCC Radio Frequency Emission**

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: V65C5120.

More information on the phone's SAR can be found from the following FCC website:

<http://www.fcc.gov/oet/ea/>.

***FCC Notice***

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antennas.
- Increase the separation between the equipment and receiver.



- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## *Owner's Record*

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Milano

Serial No.:

# Manufacturer's Warranty

---

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

## Manufacturer's Warranty

Kyocera Communications, Inc. ("KYOCERA") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

**A. ONE (1) YEAR LIMITED WARRANTY:** For a period of one (1) year from the date of original purchase, KYOCERA will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

**B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS:** For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, KYOCERA will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address must be presented to obtain warranty service.

This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by KYOCERA for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the Kyocera device for which it is specified.

This limited warranty covers the Product only as originally supplied and does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KYOCERA for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure

to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); (xi) third party software or applications, data and equipment not originally supplied with the Product; (xii) any Product in which the software has not been updated to the current version; (xiii) any Product in which the operating system has been unlocked (allowing installation of a third party operating system); or (xiv) any Products which have been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center. Before returning any Product for service, be sure to back up data and remove any confidential, proprietary, or personal information from the Product. KYOCERA is not responsible for damage to or loss of any software, applications, data or removable storage media.

This warranty is valid only in the United States.

**REPAIR OR REPLACEMENT, AS HEREIN ABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. KYOCERA SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT OR LOST APPLICATIONS). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS." KYOCERA MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State. To obtain warranty service, contact Kyocera Communications, Inc.

Attention : Customer Services for Wireless Products

Phone : 1-800-349-4478

Web : <http://www.kyocera-wireless.com>

# *End Users License Agreement*

---

## *Kyocera Communications, Inc. ( “Kyocera” ) End User License Agreement*

CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS (“AGREEMENT”) BEFORE USING OR OTHERWISE ACCESSING THE SOFTWARE OR SERVICES PROVIDED WITH YOUR KYOCERA DEVICE. THE SOFTWARE AND SERVICES PROVIDED WITH YOUR KYOCERA DEVICE ARE SOLELY FOR PERSONAL USE BY YOU, THE ORIGINAL END USER, AS SET FORTH BELOW. BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS KYOCERA DEVICE AND/OR THE SOFTWARE PROVIDED WITH IT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE, DOWNLOAD OR OTHERWISE ACCESS THE SOFTWARE OR SERVICES AND (I) PROMPTLY RETURN THE SOFTWARE OR SERVICE TO KYOCERA OR DELETE IT; OR (II) IF YOU HAVE PURCHASED THE KYOCERA DEVICE ON WHICH THE SOFTWARE OR SERVICE IS PRE-INSTALLED, PROMPTLY RETURN THE DEVICE AND THE ACCOMPANYING SOFTWARE (INCLUDING DOCUMENTATION AND PACKAGING) TO KYOCERA OR THE KYOCERA AUTHORIZED DISTRIBUTOR FROM WHICH YOU PURCHASED THE KYOCERA DEVICE.

**License:** Subject to the terms and conditions of this Agreement and any other terms that may be incorporated by reference or otherwise presented to you prior to your use of the Software, Kyocera grants you a limited, non-exclusive, license to use Kyocera and third party proprietary software and services found in your Kyocera device and/or packaged with your Kyocera device, including any updates to such material by whatever means provided, and any related documentation (“Software”). You may use the Software only as expressly authorized by this Agreement.

**Limitations:** This Software is licensed for use only on the single Kyocera device you originally purchased. You acknowledge and agree that ownership of the Software and all other rights associated with the Software not expressly granted in this Agreement are retained by Kyocera or its suppliers or licensors. You are not permitted to, in any way, distribute the Software or make it available over a network for use on more than the single Kyocera device for which it was originally supplied. The Software may be copied only as permitted by applicable law and as necessary for backup purposes. You may not remove any proprietary notices or labels on the Software or any copies thereof. You may not in any way, modify, reverse engineer, decompile, disassemble or create derivative works based on the Software (except to the extent that this restriction is expressly prohibited by law). You agree that you will not attempt to circumvent, disable or modify any security technology associated with the Software. You may use the Software only in a manner that complies with all applicable laws in the jurisdictions in

which you use it, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights and/or the export control regulations.

Some of the Software packaged with your Kyocera device may be provided by third parties (“Third Party Software”). Third Party Software may also be available from third party content distributors such as application stores. Third Party content may be subject to different or additional terms and conditions as determined by the Third Party Software provider. **THIRD PARTY SOFTWARE IS NOT A KYOCERA PRODUCT. KYOCERA IS NOT RESPONSIBLE FOR AND HAS NO LIABILITY WITH REGARD TO THIRD PARTY SOFTWARE.**

**Open Source Software:** The Software contains certain open source software which may be subject to the GNU General Public License (“GPL”), GNU Library/Lesser General Public License (“LGPL”) and/or other copyright licenses, disclaimers and notices (“Open Source License Terms”). The applicable Open Source License Terms for the corresponding Open Source Software are reproduced and available at <http://www.opensource.org/licenses>. Please refer to the Open Source License Terms regarding your rights under such licenses to the Open Source Software. To the extent any such agreement requires that Kyocera provide you the rights to copy, modify, distribute or otherwise use any Open Source Software that are inconsistent with the limited rights granted to you in this Agreement, then such rights in the applicable Open Source License shall take precedence over the rights and restrictions granted in this Agreement, but solely with respect to such Open Source Software.

**Disclaimer of Warranty and Liability: THE SOFTWARE IS PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND. KYOCERA FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, TITLE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION AND SATISFACTORY QUALITY. TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW, THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE REMAINS WITH YOU. IN NO EVENT WILL KYOCERA, ITS EMPLOYEES, OFFICERS, SHAREHOLDERS, LICENSORS, SUPPLIERS, CARRIER OR DISTRIBUTOR CUSTOMERS OR AFFILIATES BE HELD LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF KYOCERA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY IS DEEMED TO HAVE FAILED ITS ESSENTIAL PURPOSE. KYOCERA’S TOTAL LIABILITY FOR ANY DAMAGES UNDER THIS AGREEMENT SHALL NEVER EXCEED THE PURCHASE PRICE YOU PAID FOR THE KYOCERA DEVICE.**

No software is fault free. The Software is designed for use in systems that do not require fail-safe performance. You may not use the software in any device or system in which a malfunction

of the software would result in foreseeable risk of loss, injury or death to any person. This includes operation of nuclear or infrastructure facilities, medical equipment, aircraft navigation or communication systems or use in risky or dangerous situations or environments.

**Consent to Use of Data:** You agree that Kyocera, its affiliates and its designated agents may collect and use technical and related information, gathered in any manner, as part of its product support services. Kyocera, its affiliates and designated agents may use this information solely to improve its products or to provide customized services or technologies to you. Kyocera will collect and use this information in accordance with its privacy policy and accordance with applicable data protection laws. Kyocera, its affiliates and designated agents may disclose this information to others, but not in a form that personally identifies you.

**Modification of Software and Terms of Use:** Kyocera reserves the right to from time to time modify any portion of the Software. Kyocera may be required to take these actions due to restrictions from third party licensors or due to safety or security concerns or government restrictions or court orders.

Kyocera reserves the right to modify the terms of this Agreement at its sole discretion. Any such modification will be effective upon Kyocera or a Kyocera affiliate or agent sending notice to you by email, text message, other electronic communication or postal mail. Your continued use of the Software after such notice will constitute your binding acceptance of the Agreement as revised. Additionally, some Software may be subject to different or additional terms presented to you through a separate click-through or other type of agreement or notice prior to your use of such Software.

**Termination:** This License Agreement will automatically terminate without notice from or action by Kyocera if you fail to comply with any term hereof.

**Governing Law:** This Agreement is governed by the laws of State of California except any conflict of law provisions. The U.N. Convention on Contracts for the International Sales of Goods is hereby excluded in its entirety from this Agreement.

**Severability:** If any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality or enforceability of the remaining provisions will not in any way be impacted or impaired.

**Entire Agreement:** By using or otherwise accessing the Software, you agree that this Agreement sets forth the entire agreement between you and Kyocera with regard to the Software and supersedes all prior agreements, notwithstanding the terms of any such agreements.

# Notes

---

- Instructions to perform tasks in this guide may change depending on the software version on your phone.
- All screens in this guide are simulated. Actual displays may vary.
- Certain mobile phone features are dependent on the capabilities and settings of Boost Mobile's network. Additionally certain features may not be activated by Boost Mobile, and/or Boost Mobile's network settings may limit the feature's functionality. Always contact Boost Mobile about feature availability and functionality. All features, functionality and other specifications, as well as the information contained in this user guide are based upon the latest available information and are believed to be accurate at the time of issuing. Kyocera Communications, Inc. reserves the right to change or modify any information or specifications without notice or obligation.

# Copyrights

---

© 2013 Kyocera Corporation. All Rights Reserved. Boost, the Logo, Re-Boost and Boost Mobile are trademarks of Boost Worldwide, Inc. Other marks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

Android, Google Play, Google Maps, Gmail, and Google Talk are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.



microSD and microSDHC Logos are trademarks of SD-3C, LLC.

Swype and the Swype logos are registered trademarks or trademarks of Nuance Communications, Inc. © 2013 Nuance Communications, Inc. All rights reserved.





# Index

---

- 3-Way Calling, 42
- Accessibility, 62
- Accessory Jack, 9
- Account
  - Google Account, 27
  - Manage, 5
- Airplane Mode, 48
- Alarm, 135
- Animation, 53
- Answer a Call, 35
- Applications, 91
  - Settings, 58
- Auto-rotate Screen, 52
- Back Key, 8
- Battery
  - Charge, 3
  - Install, 2
- Bluetooth, 141
- Boost Zone, 104
- Brightness, 52
- Calculator, 137
- Calendar, 129
- Call Forwarding, 43
- Call Log, 45
  - Clear, 45
- Call Waiting, 42
- Caller ID, 42
- Camcorder, 120
- Camera, 116
  - Lens, 9
- Charge Battery, 3
- Charger/Accessory Jack, 9
- Clock, 135
- Contacts, 65
  - Make call from, 32
- Copyrights, 165
- Credential Storage, 57
- Data Services, 107
- Date & Time, 62
- Device Administration, 57

- Device Layout (illustration), 8
- Directory Assistance 411, 5
- Drag, 11
- Eco Mode, 139
- Emergency Numbers, 33
- Enhanced 911 (E911), 33
- Enter Text, 16
- Entertainment, 91
- Extended Screen, 14
- Factory Data Reset, 61
- Folder, 13
- Gestures, 11
- Google Account, 27
  - Add new, 29
  - Manage, 30
  - Settings, 29
- Home Key, 8
- Home Screen, 12
  - Add Items, 13
  - Customize, 13
  - Extended, 14
  - Move or remove items, 13
- In-Call Options, 43
- Incoming Calls
  - Answer, 35
  - Reject, 36
  - Ringtones, 51
- Internet Call, 34
- Keyboard
  - Android, 22
  - QWERTY, 16
  - Slide-Out, 16
  - Swype, 18
- Location
  - Settings, 54
- Menu Key, 8
- Messaging, 72
- microSD Card, 147
- Mobile ID, 4
  - Installing, 4
  - Switching, 5
- My Location, 54
- Notification Icons, 16
- Notifications, 15, 16

- Phone, 31
- Phone Calls
  - Emergency numbers, 33
  - From text messages, 33
  - Make calls, 31
  - Receive, 35
  - Using contacts, 32
  - Using phone dialpad, 31
  - Using recent calls, 32
- Power Button, 9
- Power Off, 10
- Power On, 10
- Proximity Sensor, 8
- QWERTY Keyboard, 16
- Recent Calls
  - Make call from, 32
  - Options, 45
  - View, 45
- Reject Incoming Call, 36
- Reset Phone, 61
- Rotate, 11
- Screen Timeout, 53
- Screen Unlock Password, 56
- Screen Unlock Pattern, 54
- Screen Unlock PIN, 55
- Search Key, 9
- Set Up
  - Visual Voicemail, 3
  - Voicemail (Traditional), 3
- Settings, 47
- Shortcut, 13
- Silent Mode, 50
- Slide or Flick, 11
- Slide-Out Keyboard, 16
- Social Networking Accounts, 85
- Sound Feedback, 51
- Speaker, 9
- Status Bar, 15
- Status Icons, 15
- Storage
  - Settings, 61
- Text Entry, 16
- Text Message
  - Make call from, 33

- Tools, 129
- Touch, 11
- Touch and Hold, 11
- Touchscreen
  - Navigation, 11
  - Turn off, 10
  - Turn on, 10
- Trademarks, 165
- TTY mode, 49
- Turn Device Off, 10
- Turn Device On, 10
- Vibrate, 50
- Video, 120
- Visual Voicemail, 36
  - Change Greeting, 39
  - Compose a Message, 38
  - Edit the Display Name, 40
  - Listen to Multiple Messages, 38
  - Password, 3
  - Review, 37
  - Set Up, 3, 36
  - Settings, 39
- Voice Dial, 137
- Voice Search, 139
- Voicemail, 40
  - Notification, 40
  - Retrieve messages, 41
  - Setup, 40
- Voicemail (Traditional)
  - Password, 3
  - Set Up, 3
- Volume, 51
  - Button, 9
- Wallpaper, 13
- Web, 105
- Widget, 13
- Wi-Fi
  - Settings, 48