



Display Icons

Service Icons

- Signal Strength – Your phone's current signal strength. (More bars = stronger signal.)
- No Service – Your phone cannot find a usable signal.
- Data service is available. When active the phone is animated.
- Data Service Dormant – Data service is currently dormant.
- Data Service Unavailable – Data Service is currently unavailable.

Status Icons

- Battery – Your phone's current battery charge level. (The icon to the left shows the battery is fully charged.) The icon is animated while the battery is charging.
- Location On – Your phone's location feature is on and available for location-based services such as Navigation.
- Location Off – Your phone's location feature is off. Your location is available only for 911.
- Silence All – Your phone's sound is turned off.
- Vibrate All – Your phone's sound is turned off but vibrate is turned on.
- Ringer Off – Your phone's ringer is turned off.
- 1 Beep – A beep sounds when you receive an incoming call, a message, etc.
- 1 Beep and Vibrate – 1 beep and vibrate are set.
- Ringer and Vibrate – The volume level is set to between 1 and 8 and vibrate is turned on.
- Speaker Mode – Your phone is in speaker mode.

Messaging Icons

- Email – You have new email message(s) waiting.
- Media Mail – You have new picture message(s) waiting.
- Text Messages – You have new text message(s) waiting.
- Voicemail – You have new voicemail message(s) waiting.
- Urgent Messages – You have new urgent message(s) waiting.
- Multiple Messages – You have two or more different types of new messages waiting.

Bluetooth Icons

- Visible – Your phone is discoverable by (visible to) other Bluetooth devices.*
- Connected – Your phone is connected to a Bluetooth device.*
- Enable – Your phone's Bluetooth feature is enabled.*

Voice Call Icons

- Missed Call – You have missed voice calls.
- Bluetooth Device – A call is in progress using a Bluetooth device.
- Headset – A call is in progress using an optional wired headset.
- Car Kit – A call is in progress using an optional car kit device.

Others

- TTY – Your phone is connected to a TTY device.
- Alarm Clock – Alarm clock or countdown is set.
- Notification – You have events, alarms or countdown notifications.
- HAC Enabled – Your phone's HAC setting is enabled.

* Icon will blink while your phone is communicating with a Bluetooth device.

Technical Specifications

Talk Time

Up to 5.8 hours

Screen Resolution

Main display: 2.4", QVGA (240 x 320 pixels) TFT LCD, 65K-color
Sub-display: 0.9" glow-thru sub OLED

Chipset

QSC6055

Banding

1xRTT, dual-band digital only (800, 1900 MHz)

Size

3.8 x 2.0 x 0.7 in (97 x 51 x 18.1 mm)

Weight

4.0 ounces (112.5 grams)

Battery Type

SANYO 1000 mAh Lithium Ion battery

Bluetooth® (version 2.0)

Profiles:

- SPP, GOEP (General)
- HSP (Headsets)
- HFP 1.5 (Hands-free car kits)
- OPP (vCard transfer)
- BPP (Bluetooth Printing)
- PBAP (Phone Book Access)

Product Training

www.kyocera-wireless.com/iteachu

Product Information

www.sanyowireless.com

Consumer Support

1-866-726-9692
phone-help@kyocera-wireless.com

Kyocera Communications, Inc.

10300 Campus Point Drive, San Diego, CA 92121
USA 1-800-349-4188, Outside USA +1-858-882-1400



©2009 Kyocera Communications, Inc. (KCI), San Diego, CA, USA. All rights reserved. KYOCERA is a registered trademark of Kyocera Corporation. "SANYO" is a registered trademark of SANYO Electric Co., Ltd. and is used under license. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners. Because its products are subject to continuous improvements, KCI reserves the right to modify design, features and specifications without notice. Certain features may require optional services and may involve additional charges. Screen Images are simulated. Not all products may be available in your area.

Use only Kyocera Communications, Inc. approved accessories with Kyocera Communications, Inc. phones. Use of unauthorized accessories may be dangerous and may invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Printed in USA 12/09
TMM001956-0

Mirro™ SCP3810



SANYO



Kyocera manufactures and markets the SANYO line of wireless products.

www.kyocera-wireless.com/iteachu

Uncomplicated by Design.

Make life simpler with Mirro, featuring an easy-to-read 2.4-inch display, a user-friendly keypad and a large menu font option.

User-friendly

Big, bright 2.4" QVGA LCD display

Large keypad buttons with easy-to-read numbers

Normal or large font option for menus

Long battery life (up to 5.8 hours)

Speaker-independent voice dialing

Speakerphone with dedicated access key

Camera

Threaded text messaging

1.3 megapixel camera with digital zoom

Media Mail

Messaging

Email capable

Instant messaging

Web & Tools

Mobile web (WAP 2.0)

Download ringtones, games and screen savers

Bluetooth® wireless technology

Navigation capable

Voice memo recorder

Alarm clock, calendar, to-do list, calculator, stopwatch, countdown timer, world clock

Additional Features

Caller ID capable (Number/Picture/Ringer)

Vibrating alerts (4 types)

Micro USB connector

Bilingual user interface – English and Spanish supported

TTY capable

Hearing aid compatible (M4/T4 rating)

Highlights

- 1 Earpiece**
Lets you hear the caller and automated prompts.
- 2 Main screen**
Displays all the information needed to operate your phone.
- 3 MENU/OK key**
Lets you access the phone's menus and select the highlighted choice when navigating through a menu.
- 4 Web key**
Lets you launch the Web browser.
- 5 TALK key**
Allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Automatic Speech Recognition (ASR).
- 6 Side Camera Button**
Lets you open the Photos menu when the phone is open. This key also allows you to mute the ringer when receiving incoming calls.
- 7 Microphone**
- 8 Softkeys**
Let you select softkey actions or menu items corresponding to the bottom left and right lines on the main screen.
- 9 Headset Jack**
Allows you to plug in an optional headset for convenient, hands-free conversations.
- 10 Navigation key**
Scrolls through the phone's menu options and acts as a shortcut key from standby mode. These keys can be reassigned to create customized shortcuts.
- 11 BACK key**
Deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- 12 END/POWER key**
Lets you turn the phone on or off, end a call, or cancel your input and return to idle mode.
- 13 SPEAKER key**
Lets you place or receive voice calls, activate ASR in speakerphone mode, or turn the speakerphone mode on or off during a call.
- 14 Outer Screen**
- 15 Speaker**
Lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing BACK or the side camera button.
- 16 Camera Lens**
As part of the built-in 1.3 MP camera, lets you take pictures.
- 17 Micro-USB Connector**
Allows you to connect a compatible charging cable or USB data cable (not included).
- 18 Volume Button**
Allows you to adjust the ringer volume or adjust the voice volume during a call.




Make It Large

In addition to the large, easy-to-use keypad with big numbers, Mirro allows you to quickly change the size of the font in most of the menus. Default font size is set to Normal, but it's very easy to switch to Large.

Note: Not all applications support the large font option.

How to quickly change the font size


1. Press [menu/ok] > Options (right soft key).
2. Select Large Font and press [menu/ok].
3. Same procedure to return to normal font size.

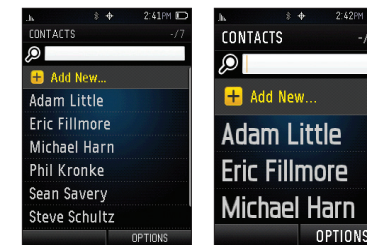

Navigation Capable

Mirro offers easy access to Navigation right from the main menu.

Navigation, an optional GPS application, provides audio and visual turn-by-turn directions with full color moving maps.

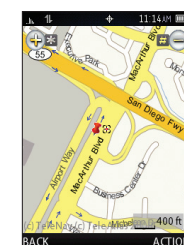

Bluetooth


Supports wireless headsets, hands-free car kits, wireless printing, and vCard transfer.

How to Pair a Bluetooth Device

1. Press [menu/ok] > Tools > Bluetooth
2. Select Add New
3. Select the device you wish to pair with and press [menu/ok].
4. Enter the passkey of your device or the other's and press [menu/ok].
5. (optional) Edit the device name and press [menu/ok].

Mobile Email

Mirro supports "push" email from popular sites such as Yahoo!, Google, AOL, MSN as well as IMAP/POP3 accounts.

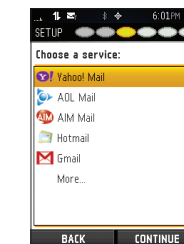

Media Mail

Sending Media Mail

You can send pictures to up to 25 people at a time using their email addresses or their phone numbers.

Sending Pictures From the My Album Folder

1. Press > My Album.
2. Highlight a picture to send and press.
3. Press OPTIONS (right softkey) > Send Media.
4. Select the recipient from the list or MULTIPLE for more than one recipient.
5. If you wish to include a text message, scroll to the Text field, and then enter your message.
6. If you wish to include an audio message, scroll to the Audio field, and then press RECORD (right softkey) > to record. (Maximum recording time is 10 seconds.)
7. To set the priority, scroll to the Priority field, and then select High, Normal, or Low.
8. Confirm the recipients, message, audio memo, and pictures.
9. Press SEND (left softkey) to send the pictures.

Menu & Submenu Items

Missed Alerts	History	Contacts	Messaging
			1. Voicemail 2. Send Message 3. Text Messages 4. Media Mail 5. Email 6. IM 7. Settings
Re-Boost	Get Stuff	Web	My Stuff
			1. Games 2. Ringtones 3. Applications 4. Wallpapers 5. Chat Flirt Fun
Navigation	Pictures	Bluetooth	Settings/Tools
	1. Camera 2. Media Mail 3. My Album 4. Settings & Info	1. On/Off 2. Visibility 3. Add New 4. Trusted Devices 5. My Bluetooth Info	1. Settings 2. Tools

