

PRO-700

User Guide

Table of Contents

1. The Basics	1
Your Phone	1
Viewing the Display Screen	5
Turning Your Phone On and Off	8
Using the Battery	9
Using the Holster	11
Navigating Through the Menus	13
Displaying Your Phone Number	14
Making and Answering Calls	14
Entering Text	24
Using GPS Navigation	28
2. Your Phone's Settings	29
Sound Settings	29
Display Settings	35
Location Settings	40
Messaging Settings	41
Airplane Mode	44
TTY Use	45
Phone Setup Options	46
Browser Settings	51
Phone Information Management	52
3. Security	53
Accessing the Security Menu	53
Using Your Phone's Lock Feature	53
Restricting Calls	55
Using Special Numbers	55
Deleting Phone Content	56
Resetting the Browser	57
Resetting Favourites	57
Resetting All Settings	57
Resetting Your Phone	58
4. Roaming	59
Understanding Roaming	59
Setting Your Phone's Roam Mode	59
5. Menu Navigation	60
Viewing the Menus	60
6. History	62
Viewing History	62
History Thread	63

History Details	63
Making a Call from History	63
History Menu Options	64
Saving a Phone Number from History	65
Making a New Group Entry from History	66
Prepending a Phone Number from History	67
Deleting History	67
7. Contacts	68
About Contacts	68
Displaying the Contacts List	68
Viewing History from Contacts	68
Creating a New Contacts Entry	69
Finding Contacts Entries	70
Displaying the Details Screen	71
Editing a Contacts Entry	72
Contacts Menu Descriptions	76
Secret Contacts Entries	78
Dialing Services	79
8. Personal Organizer	80
Using Your Phone's Calendar	80
Using Your Phone's Tools	87
9. Voice Services	91
Using Automatic Speech Recognition (ASR)	91
Managing Voice/Call Memos	95
Setting Up Screen Call	98
10. 10-4	101
Starting 10-4	101
Making and Receiving a 10-4 Call	102
Adding and Editing 10-4 List Entry	108
Deleting 10-4 List Entries	113
Updating the Personal List and Personal Groups	114
Managing 10-4 Settings	115
11. Messaging	118
New Messages	118
Displaying Messages	119
Sending a Text Message	120
Creating Folders for Messages	121
Changing All Messages to Read	122
Deleting Text Messages	123

12. Bluetooth®	124
Accessing the Bluetooth Settings Menu	124
Turning Bluetooth On and Off	124
Using the Bluetooth Settings Menu	125
Bluetooth Profiles	126
Pairing Bluetooth Devices	127
Using the Trusted Devices Options	128
Sending Data via Bluetooth	129
Printing Data via Bluetooth	129
13. Service Features	131
Using Voicemail	131
Responding to Call Waiting	132
Making a Three-Way Call	133
Web	134
Downloading through the Wireless Web	137
14. Safety Guidelines	138
Maintaining Your Phone's Peak Performance	138
Using Your Phone While Driving	138
Following Safety Guidelines	139
Using Your Phone Near Other Electronic Devices	139
Turning Off Your Phone Before Flying	139
Turning Off Your Phone in Dangerous Areas	140
Restricting Children's Access to Your Phone	141
Protecting Your Battery	141
Disposal of Lithium Ion (Li-Ion) Batteries	142
Cautions	142
Index	144


1. The Basics

Your Phone



Key Features





















1. **Earpiece** lets you hear the caller and automated prompts.
2. **Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3. **Softkeys** let you select softkey actions or menu items corresponding to the bottom right/left line on the main screen.
4. **Navigation Key** lets you navigate quickly and easily through the menu options. These keys can also be reassigned to create customized shortcuts. Default settings are:
Right: Contacts, **Left:** My Favourites, **Up:** Send Text, and **Down:** My Downloads.
5. **MENU/OK Key** lets you access the phone's menus and select menu options.
6. **Web (or WEB) Key** lets you launch the Web browser.
7. **TALK Key** lets you place or receive calls, answer Call Waiting, use Three-Way Calling, or activate ASR (see page 91).
8. **SPEAKER Key** lets you place or receive calls in speakerphone mode, turn the speakerphone on and off during a call, or activate ASR (see page 91).
9. **Microphone** allows other callers to hear you clearly when you are speaking to them.
10. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
11. **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input.




















12. **Side End Key** ends a call while the phone is closed. This key can also be used to display the recent call history.
13. **Back (or BACK) Key** lets you display the previous page or clear characters from the screen.
14. **Side Call Key** lets you place calls without opening the phone. Press and hold this key to activate ASR. The side call key also lets you turn the speakerphone mode on or off when 10-4 mode is set to Enable.
15. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
16. **TEXT Key** gives you quick access to the Send Text screen for sending messages.
17. **Speakerphone Microphone** receives your voice input while in speakerphone mode.
18. **Outer Screen** lets you monitor the phone's status and see who's calling without opening the phone.
19. **LED Indicator** shows your phone's connection status at a glance.
20. **Speaker** lets you hear different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing  or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.
21. **Volume Key** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.












- 22. 10-4 Key** allows you to access 10-4 List. (See “10-4” on page 101.)
- 23. Micro-USB Connector** allows you to connect a phone charger or other accessories to your phone. **CAUTION!** Inserting an accessory into the incorrect connector may damage the phone.
- 24. Internal Antenna** facilitates reception and transmission. To maximize call performance, do not obstruct the internal antenna area (see page 14).

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

-  indicates your current signal strength. The more lines you have, the stronger your signal.
-  indicates your phone cannot find a signal.
-  indicates the call is on hold.
-  indicates a call is in progress.
-  indicates the 10-4 service is enabled and the speakerphone mode is turned on.
-  indicates the 10-4 service is available.
-  indicates the 10-4 service is unavailable and the speakerphone mode is turned on.
-  indicates the 10-4 service is unavailable.
-  indicates you have missed 10-4 calls.
-  indicates 1X Data/10-4 access is active.
-  indicates 1X Data/10-4 access is dormant. (Voice calls can still be made or received.)
-  indicates 1X Data/10-4 access is disabled.
-  indicates 1X Service is available.
-  indicates EVDO service is active.
-  indicates EVDO service is dormant.
-  indicates EVDO service is available.
-  indicates you are off the home network.
-  indicates you have missed voice calls.
-  indicates you have scheduled events or call alarms.
-  indicates you have alarm clock or countdown notifications.

-  indicates you have new text messages or Web Alerts waiting.
-  indicates you have new picture messages waiting.
-  indicates you have new voicemail messages waiting. (Voicemail service is optional.)
-  indicates you have alert messages from Java applications activated in the background.
-  indicates you have urgent messages waiting.
-  indicates you have two or more different types of missed alerts (missed voice calls and other missed alarm clocks, call alarms, or scheduled events).
-  indicates the Bluetooth feature is enabled (blue icon).
-  indicates your phone is connected to a Bluetooth device (green icon).
-  indicates your phone is discoverable by another Bluetooth device.
-  indicates your phone is communicating with a Bluetooth device.
-  indicates your access to a secure site.
-  indicates the level of your battery charge (icon shown is full). The more black you see, the more power you have left. (The icon is animated while the battery is charging.)
-  indicates your battery is charging in "Power Off" state.
-  indicates all the sound settings (except for applications) are off and the vibrate feature is set.
-  indicates volume level 1 to 8 and vibrate feature are set.
-  indicates a beep sounds once when you receive a phone call or message, etc.
-  indicates a beep sounds once when you receive a phone call or message, etc. and vibrate feature is set.
-  indicates all ringer settings are off.
-  indicates all ringer settings are off and the vibrate feature is set.

-  indicates all the sound settings are off.
-  indicates the Location feature of your phone is enabled.
-  indicates the Location feature of your phone is disabled.
-  indicates you have a new voice message when Screen Call is activated.
-  indicates the Screen Call Auto setting is enabled.
-  indicates the alarm clock or countdown is set to on.
-  indicates your phone is in TTY mode.
-  indicates the speakerphone mode is set to on.
-  indicates a call is in progress using the Bluetooth device.
-  indicates a call is in progress using the car kit device.
-  indicates a call is in progress using the wired headset device.

Turning Your Phone On and Off

Turning Your Phone On

- ▶ Press .


Once your phone is on, it displays “Looking for service...” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned on).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off


- ▶ Press and hold  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using the Battery

Installing the Battery


1. Insert the battery into the opening on the back of the phone, making sure the connectors align. Gently press down to secure the battery.
2. Replace the battery cover into position (see below), and slide it upward until you hear a click.
3. Lock the battery cover by sliding the latch into its locked position.

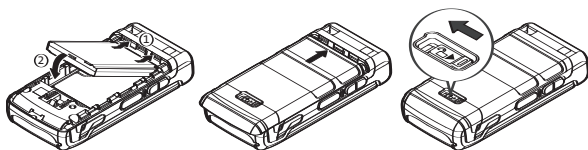

Removing the Battery


Warning! Do not handle a damaged or leaking Li-Ion battery as you can be burned.

1. Make sure the power is off so that you do not lose any stored numbers or messages.
2. Slide the battery cover latch into its unlock position, and slide the battery cover downward to remove it.
3. Lift up the battery and remove it from the phone.

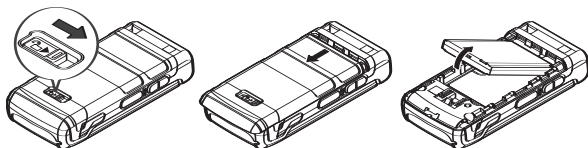

Charging Your Battery

Your phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon  appears and the phone displays a warning message.

Always use a manufacturer-approved charger to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.


Using the Phone Charger

1. Plug the phone charger into a wall outlet.
2. Open the micro USB connector cover located on the lower left side of your phone.
3. Plug the other end of the phone charger into the micro USB connector (with the battery installed).
 - A red indicator light means the battery is charging.
 - A green indicator light means the battery charging is completed.


Using the Holster

Attaching the phone to the holster

1. With the front of the phone facing the holster, insert the bottom of the phone into the holster.

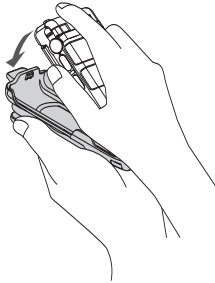


2. Press the phone down into the holster until it snaps into place.

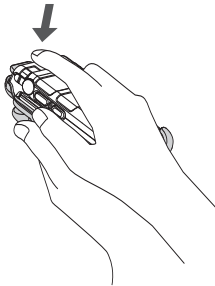


Removing the phone from the holster

1. With your forefinger, push against the holster's top plate while gripping the phone at the sides.

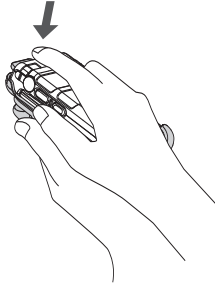

2. The phone can now be easily removed from the holster.

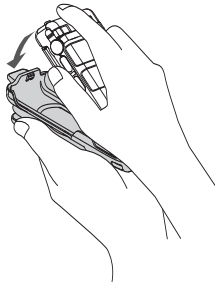


Navigating Through the Menu

The navigation key on your phone allows you to scroll through menus quickly and easily.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu such as Settings, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Menu Navigation" on page 60.









Selecting Menu Items


As you navigate through the menu, menu options are highlighted. In list view, select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to display your volume settings:

1. Press  to access the main menu.

Note: You can select **List View** or **Grid View** for your phone's menu style. (See "Changing the Phone's Menu Style" on page 35.)

2. Select **Settings** by pressing  (in List view) or by highlighting it and pressing .
3. Select **Ringers** by pressing  or by highlighting it and pressing .
4. Select **Volume** by pressing  or by highlighting it and pressing .
5. Select **Ringer** by pressing  or by highlighting it and pressing .

Note: For the purposes of this guide, the above steps condense into "Select  > **Settings** > **Ringers** > **Volume** > **Ringer**."

Displaying Your Phone Number


- ▶ Select **MENU** **OK** > **Settings** > **Phone Info** > **My Phone#**. (Your phone number and other information about your phone will be displayed.)

Tip: You can also display your phone number through the Contacts menu. Select **MENU** **OK** > **Settings** > **More...** > **Contacts** > **My Name Card**. To send your contact information using Bluetooth, press **Options** (right softkey) > **Send Card**.

Making and Answering Calls

Holding Your Phone

To maximize performance, do not obstruct the internal antenna area. Also make sure you do not cover the microphone with your hand while talking.

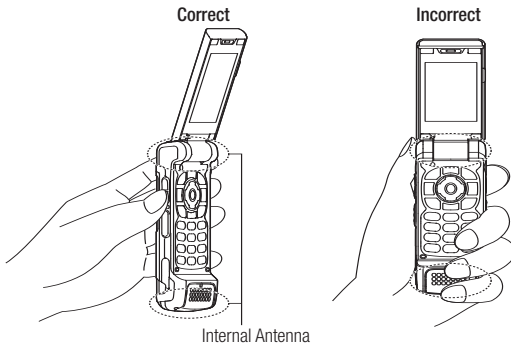

Making Calls

To place a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while entering, press **BACK** to delete one digit at a time. Press and hold **BACK** to delete the entire number.)
3. Press **TALK** or **SPEAKER**.
4. When you are finished, press **END**.

Tip: You can also place calls from your phone by using speed dialing (page 22), your History listings (page 63), and by using Automatic Speech Recognition (ASR, page 92).

To redial your most recent call, press **TALK** twice.

To place a call with the phone closed:

1. Make sure your phone is on and the Side Key Guard feature is disabled. (See “Setting Side Key Guard” on page 50.)
2. Press and hold the side call key (**☎**) on the right side of the phone.
3. Follow the system prompts. (See “Using Automatic Speech Recognition (ASR)” on page 91.)

To redial with the phone closed:

1. Press the side end key (**⏏**). Recent call history appears on the outer screen.
2. Use the side volume key (**⏮** **⏭**) to highlight a recent call entry you would like to redial.
3. Press **☎**.

Dialing Options

Dialing options are displayed when you press **Options** (right softkey) after entering numbers in standby mode.

- **Abbrev. Dial** to use the Abbreviated Dialing feature. (See “Setting Abbreviated Dialing” on page 48 and “Using Abbreviated Dialing” on page 23.)
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save** to save the phone number in your Contacts. (See “Saving a Phone Number” on page 20.)
- **P Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers with Pauses” on page 21.)
- **T 2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers with Pauses” on page 21.)

Answering Calls

To answer an incoming call with the phone open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail [optional service].)
2. Press **TALK** or **SPEAKER** to answer an incoming call. (Depending on your settings, you may also answer incoming calls by pressing any number key. See “Call Answer Mode” on page 48.)

To answer an incoming call with the phone closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail [optional service].)
2. When your phone rings or vibrates, press **END CALL** on the right side of the phone. (The call will be answered in speakerphone mode.)
– or –
Open the phone to use the earpiece.

Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.
- If the incoming call is from a number stored in your Contacts, the entry’s name is displayed. The caller’s phone number may also be displayed, if available.

The following options are also displayed by pressing **Options** (right softkey).

- **Answer** to answer the call.
- **Answer:Speaker** to answer the call in speakerphone mode.
- **SelectAudio** to switch the call to your desired device (if available).
- **Answer on Hold** to put the call on hold. (See “Setting Answer on Hold” on page 17.)
- **Screen Call** to answer the call by using pre-recorded announcement. (See “Setting Up Screen Call” on page 98.)


- **Quiet Ringer** to mute the ringer. (This feature appears unless the ringer is set to **1 Beep**, **Ringer Off**, or **Silence All**.)
- **Ignore with Text** to ignore the call and send a text message to the caller (if available).

Tip: Your phone offers additional ways to answer calls. (See page 48 for “Call Answer Mode” and 47 for “Auto Answer Mode”.)

Setting Answer on Hold

This feature allows you to hold an incoming call when you cannot answer immediately.

To set Answer on Hold:

- ▶ When you receive an incoming call, press **Options** (right softkey) > **Answer on Hold**.
(The caller hears a message while waiting for you to answer.  will be displayed on the screen while the call is on hold.)

To resume the call:

- ▶ Press **Answer** (left softkey) or **TALK**.

Ending a Call

- ▶ Press **END**. When the phone is closed, press **■**.

Missed Call Notification

When an incoming call is not answered, the missed call log is displayed on your screen.

To display the missed call entry from the notification screen:

- ▶ Select the entry and press **MENU OK**. (Select an option to continue.)

Tip: If you have two or more notifications, the Missed Alerts list will appear.

To display the Missed Alerts list from standby mode:

1. Select **MENU OK** > **Missed Alerts**.
2. Select the entry you wish to view and press **MENU OK**.

Calling Emergency Numbers

You can place calls to 911 (press **9** **WVVT** **1** **TALK**), even if your phone is locked or your account is restricted. Once the connection is established, press **Options** (right softkey) to display 911 options:

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- **Unlock My Phone** to unlock your phone (appears only if the phone is locked).
- **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Press **My Phone** (left softkey) to display your phone number during an emergency call.

Emergency mode options:

If you end the emergency call by pressing **END**, your phone enters the Emergency mode. Press **Options** (right softkey) to display the Emergency mode options:

- **Call 911** to call 911 again.
- **Call 911:Speaker** to call 911 in speakerphone mode.
- **Exit Emergency** to exit Emergency mode.

Note: Emergency mode automatically times out after 5 minutes.

In-Call Options

During a call, your phone displays menu options by pressing **Options** (right softkey).

- **Three-Way Call** to call a third party.
- **Main Menu** to display the phone's main menu.
- **Save** to save the currently used phone number in your Contacts.
 - **Contact Details** appears if the number is already in your Contacts.
- **Contacts** to display your Contacts list.
- **Call Memo Rec.** to record the conversation during a call.
- **Phone Info** to access the Phone Info menu.
- **Transfer Audio** to switch the call to an external device (if applicable).

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

During a call, use the volume key or press the navigation key up or down to adjust the receiver volume.

End-of-Call Options

Once you have finished your call, the phone will display the Recent History. From the Recent History, you can view the date and time of the call, the phone number (if available), the entry name (if the number is already in your Contacts), and the duration of the call.

- ▶ Press **Options** (right softkey) to display the Recent History options. (See “History Menu Options” on page 64 for details.)
- ▶ Press **Send Text** (left softkey) to send a text message to the entry in the Recent History.

Note: Some options may not be displayed for calls identified as No Caller ID, Restricted ID (Private), or Unavailable ID.

Saving a Phone Number

Your phone can store up to 600 Contacts entries with up to 4200 total numbers. Each entry’s name can contain 64 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see “Contacts” on page 68.)

1. Enter a phone number and press **Options** (right softkey) > **Save**.
2. Select **New Entry** or **Existing Entry**.
 - **New Entry** to create a new Contacts entry for the number.
 - **Existing Entry** to save the number to an existing entry. (This step is not necessary on the very first entry in your Contacts.)
3. If **New Entry** was selected, select a phone type, and then use the keypad to enter the new entry name and press **MENU OK**.
– or –
If **Existing Entry** was selected, select an existing entry to which you want to save the number, and then select a phone type and press **MENU OK**.
4. Press **Done** (left softkey).

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

1. Enter the last three or more digits of the number in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. All Contacts entries matching the entered numbers will be displayed. Highlight the entry and press **TALK** to dial the number.

Dialing and Saving Phone Numbers with Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail (optional) or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** to send the next set of numbers when you press **TALK**.
- **2-Sec. Pause** to automatically send the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

1. Enter the phone number and press **Options** (right softkey).
2. Select either **Hard Pause** or **2-Sec. Pause**.
3. Enter additional numbers.
4. To dial the number, press **TALK** or **SPEAKER**. (When dialing a number with a hard pause, press **TALK** to send the next set of numbers.)
– or –
To save the number in your Contacts, press **Options** (right softkey) > **Save**.

Plus (+) Code Dialing

When placing international calls, use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from Canada).

1. Press and hold **[0+next]** until a “+” is displayed on your phone screen.
2. Dial the country code and phone number you are calling, and press **[TALK]**. (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Note: This feature is subject to network availability, therefore the “+” sign may not appear on your phone’s display when pressed.

Dialing from the Contacts List

1. Press **[Contacts]** (right softkey).
– or –
Select **[MENU OK] > Contacts**.
2. Select the entry you want to call and press **[MENU OK]**.
3. Highlight the number you want to call and press **[TALK]** or **[SPEAKER]**.

Note: The icon next to each entry represents the labels (for example, Mobile, Home, Work, etc.) of the entry’s default phone number. Triangles appears on the list if there are other phone numbers for the entry. Press the navigation key right or left to select other number.

Using Speed Dialing

You can store up to 98 numbers in your phone’s speed dial memory to make contacting friends and family as easy as pressing a key or two.

With this feature, you can dial your favourite entries using one key press for locations 2-9 or two key presses for locations 10-99. (See “Assigning Speed Dial Numbers” on page 73.)

To use speed dial:

- ▶ From standby mode, press and hold the appropriate key for approximately two seconds.

The display confirms that the number has been dialed when it shows “Connecting...”. To use Two-Touch Dialing (10–99), press the first digit, then press and hold the second digit.

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** to retrieve any desired number saved in your Contacts by entering only the last three to six digits of the number. (See “To activate Contacts Match feature” on page 48.)
- **Prepend** to prepend the first five- or six-digit prefix you want to use for abbreviated dialing, so that you can dial a number by entering only the last four or five digits of the number.

Above features become available when you enable Abbreviated Dialing feature. (See “To set your prepend number” on page 48.)

To place a call using abbreviated dialing:

1. Enter the last 3-6 digits of a Contacts entry’s phone number saved in your Contacts.
– or –
Enter the last four or five digits of your desired number to use the prepend feature.
2. Press **TALK** or **SPEAKER**.

Note: If the **Abbrev. Dial** list is displayed, select the name or the number you want to call from the list, and then press **TALK** to place a call.

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when sending text messages).

1. When you display a screen where you can enter text, press **Mode** (right softkey) to change the character input mode.
2. Select one of the following options and press **MENU OK**.

Note: The menus displayed vary according to the entry field. If you see triangles on the right of the menu, you can press the right and left navigation keys to switch between related menus.



- **Alphabet** to enter characters by using the keypad (see page 26).
- **T9 Word** to enter characters using T9 Text Input (see page 25).
- **SYMBOL** to enter symbols.
- **SMILEYS** to enter smiley pictures.
- **Emoticons** to enter an emotion icon.
- **Web Shortcuts** to enter web shortcuts (for example, www., http://, or .com).
- **Canned Messages** to enter canned messages (see page 42 and 121).
- **Recent Messages** to enter messages used recently (if applicable).
- **Paste List** to paste copied or cut text (if applicable).
- **Fr. Schedule List** to extract the schedule items you have added to your Calendar (see page 81).
- **From To Do List** to extract the To Do items you have added to your Calendar (see page 83).
- **NUMBER** to enter numbers.
- **Signature** to enter your signature (see page 43).

- **Select Language** to select the language (English or French).
- **Delete All** to delete all text (if applicable).
- **Select Text** to select stored text for copying or cutting.
- **Add Word** to store words that you use frequently.
- **Text Options** to display the Text Entry settings menu (see page 47).

Tip: Before entering text, press  to change letter capitalization style
: **Abc** > **ABC** > **abc** (Alphabet Mode)
: **T9w** > **T9W** > **t9w** (T9 Text Input Mode).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone with just one keypress per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 24.)

T9 Text Input analyses the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) To accept a word and insert a space, press  or .



Tip: In order to insert a space by pressing , **Auto-Space** must be on (see page 47).

If you make a mistake, press  to delete a single character. Press and hold  to delete an entire entry.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Press  (right softkey) > **Add Word**.
2. Enter the word using Alphabet Mode and press  (left softkey).

To edit or delete the words you have added:

1. Press  (right softkey) > **Text Options** > **My Words**.

2. Highlight your desired word and press **Options** (right softkey).
3. Select an option and press **MENU OK**.
 - **Edit** to edit a word in My Words.
 - **Delete** to delete a word in My Words.

Note: You can add, edit, or delete a word from standby mode. Select **MENU OK** > **Settings** > **Text Entry** > **My Words**.

Customizing the T9 Settings

1. Press **Mode** (right softkey) > **Text Options** > **T9 Settings**.
– or –
From standby mode, select **MENU OK** > **Settings** > **Text Entry** > **T9 Settings**.
2. Select an option and press **MENU OK**.
 - **Next Word Prediction** to automatically display the word that may follow the current text input.
 - **Word Completion** to show the completed words that match the keys you have entered without entering the whole word.
 - **Word Scan** to allow T9 text input to recognize words by searching Contacts and messages.
 - **Word Choice List** to display word choice list.
 - **Show after enter** to select digits number (1-3 digits) to display the words choice list. The word choice list will be displayed based on the number of digits you selected.
 - **Show after wait** to select how many seconds the phone should wait to display the word choice list.

For more information about T9 Text Input, visit the Nuance Web site at www.nuance.com/t9/textinput/

Entering Characters Using Alphabet Mode

To enter characters using Alphabet mode, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 24). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercased.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1 []	. , @ 1 ? ! * # /	
2 [ABC]	A B C 2	a b c 2
3 [DEF]	D E F 3	d e f 3
4 [GHI]	G H I 4	g h i 4
5 [JKL]	J K L 5	j k l 5
6 [MNO]	M N O 6	m n o 6
7 [PQRS]	P Q R S 7	p q r s 7
8 [TUV]	T U V 8	t u v 8
9 [WXYZ]	W X Y Z 9	w x y z 9
0 [+NEXT]	0	
# [SPACE]	Space	
* [SHIFT]	One-character-shifted Caps Lock Unshifted	



In French mode, characters scroll in the following order:

Key	French Sequence	
	Upper Case	Lower Case
1 []	. , @ 1 ? ! * # /	
2 [ABC]	A B C Â Ã Ç 2	a b c à â ç 2
3 [DEF]	D E F É Ê Ë 3	d e f é è ë 3
4 [GHI]	G H I Î Ï 4	g h i î ï 4
5 [JKL]	J K L 5	j k l 5
6 [MNO]	M N O Ô 6	m n o ô 6
7 [PQRS]	P Q R S 7	p q r s 7
8 [TUV]	T U V Ù Û Ü 8	t u v ù û ü 8
9 [WXYZ]	W X Y Z 9	w x y z 9
0 [+NEXT]	0	
# [SPACE]	Space	
* [SHIFT]	One-character-shifted Caps Lock Unshifted	

See pages 25, 47 for changing French entry mode.

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

Setting the Default Input Mode

1. Select  > **Settings** > **Text Entry** > **Default Input**.
2. Select an option and press .
 - **T9 Word** to select the T9 word mode for the initial entry mode.
 - **Alphabet** to select the Alphabet mode for the initial entry mode.
 - **Retain Mode** to set the retain mode on to retain the previous entry mode.


Using GPS Navigation

Your phone comes with built-in GPS navigation. This feature provides audible and visual driving directions with full-color moving maps, including voice entry of destinations, traffic alerts in major cities, and more. You can view your approximate location and use available applications to navigate roadways throughout the country.

Activating GPS Navigation

You can access GPS Nav right from your phone's main menu, anywhere on the home network.

To activate GPS Nav application:

1. Select  > **GPS Navigation**. (The GPS Nav application launches and displays the main menu.)
2. Follow the onscreen instructions.

Note: GPS Nav is an optional service. For more details, please check with your service provider on availability.

2. Your Phone's Settings

Sound Settings

Ringer Types

Selecting Ringer Types for Incoming Calls

Select a ringer type for incoming calls so that you can recognize when a certain type of call is coming in:

1. Select **[MENU OK]** > **Settings** > **Ringers** > **Ringer Type** > **Incoming Calls**.
2. Select **With Caller ID** or **Without Caller ID**, and press **[MENU OK]**.
3. Select **Downloads** or **Other Ringers**. (The list of available ringers is displayed.)
4. Use your navigation key to scroll through the available ringers.
5. Press **[MENU OK]** to assign a ringer.

Selecting Ringer Types for 10-4 Calls

1. Select **[MENU OK]** > **Settings** > **Ringers** > **Ringer Type** > **10-4**.
2. Select **10-4 Calls**, **10-4 Missed**, or **10-4 Floor Tone**, and press **[MENU OK]**.
 - If you select **10-4 Calls** or **10-4 Missed**, select **Downloads** or **Other Ringers**. (The list of available ringers is displayed.)
3. Use your navigation key to scroll through the available ringers.

Note: You can also set the ringer type for 10-4 calls, 10-4 missed calls, or 10-4 Floor Tone by selecting **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Ringer Type** (see page 116).

Selecting Ringer Types for Messages

1. Select **MENU OK** > **Settings** > **Ringers** > **Ringer Type** > **Messaging**.
2. Select **Text Message**, **Pic Messaging**, **Voice mail**, or **Web Alerts**.
3. Select **Downloads** or **Other Ringers**. (The list of available ringers is displayed.)
4. Use your navigation key to scroll through the available ringers.
5. Press **MENU OK** to assign a ringer.

Selecting Ringer Types for Alarms or Scheduled Events

1. Select **MENU OK** > **Settings** > **Ringers** > **Ringer Type**.
2. Select **Alarm** or **Schedule** and press **MENU OK**.
3. Select **Downloads** or **Other Ringers**. (The list of available ringers is displayed.)
4. Use your navigation key to scroll through the available ringers.
5. Press **MENU OK** to assign a ringer.

Selecting Ringer Types for Power On or Power Off Tone

1. Select **MENU OK** > **Settings** > **Ringers** > **Ringer Type**.
2. Select **Power On** or **Power Off** and press **MENU OK**.
3. Select **Downloads**, **Tones**, or **Off**. (The list of available ringers is displayed.)
4. Use your navigation key to scroll through the available ringers.
5. Press **MENU OK** to assign a ringer.

Adjusting the Phone's Volume Settings

1. Select **MENU OK** > **Settings** > **Ringers** > **Volume**.
2. Select **Ringer, Earpiece, Headset, Speakerphone, Applications,** or **Start-up/Pw-off**.
3. Use your navigation key to choose a volume level and press **Done** (left softkey).

Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume key.

Adjusting the Alert Volume

You can set the alert volume separately from the ringer volume setting.



1. Select **MENU OK** > **Settings** > **Ringers** > **Volume** > **Advanced...**
2. Select **Alarms, Text Message, Pic Messaging, Voicemail, Web Alerts,** or **10-4**.
3. Using the navigation key, select **Separate Vol**.
4. Press the navigation key right or left to choose a volume level, and press **Done** (left softkey).

Note: You can also set the ringer volume for 10-4 calls by selecting **MENU OK** > **Settings** > **10-4** > **Ringers** > **Ringer Volume** (see page 116).

Tip: You can make the ringer vibrate at any volume level by checking the box next to **Always Vibrate**.

Selecting Vibrate Types



With this feature, you can select vibrate types for incoming calls, messages, alarms, and scheduled events.

1. Select  > **Settings > Ringers > Vibrate Type**.
2. Select **Incoming Calls, 10-4, Messaging, Alarm, or Schedule**.
The following items require an additional step:
 - **Incoming Calls:** select **With Caller ID** or **Without Caller ID**.
 - **10-4:** select **10-4 Calls** or **10-4 Missed**.
 - **Messaging:** select **Text Message, Pic Messaging, Voicemail, or Web Alerts**.
3. Select a vibrate type and press .

Note: You can also set the vibrate type of ringers for 10-4 calls and 10-4 missed calls by selecting  > **Settings > 10-4 > Ringers > Vibrate Type** (see page 116).

Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a keypress.

1. Select  > **Settings > Ringers > Keytones**.
2. Select an option and press 
 - **Tone Length** to select a key tone length. (Longer tone lengths may be better for tone recognition when dialing voicemail [optional] or other automated systems.)
 - **Tone Volume** to select a keypress volume level.

Setting Up Voice Guide

Voice Guide activates both voice prompt and keypress echo functions. This feature allows you to hear voice prompts and spoken numbers as you press the keypad.

1. Select  > **Settings** > **Ringers** > **Voice Guide**.
2. Select **On** or **Off**.



Note: The default setting is **Off**.

When the ringer volume is set to **Silence All** or **Vibrate All**, Voice Guide does not work.

Alert Notification


Your phone comes with several different options to keep you aware of what is going on by sounding the alert or ringer.

To set the alerts:

1. Select  > **Settings** > **Ringers** > **Alerts**.
 2. Select an option and press .
- **Beep Each Minute** to set a minute reminder that beeps ten seconds before the end of each minute during a call.
 - **Out of Service** to set alert on or off for network services parameter changes.
 - **Connect** to set an alert to notify you when your call has been connected.
 - **Signal Fade/Call Drop** to set alert to notify you when your phone loses a signal during a call.
 - **Messaging** to set an alert to notify you of text, picture message, voicemail or Web Alert. Select **Ringer Length** to set the ringer length of Messaging notification.

- **10-4** to set an alert to notify you of 10-4 calls.
 - **10-4 Calls** to notify of incoming 10-4 calls.
 - **10-4 Missed** to notify of missed 10-4 calls.
 - **Headset Alert** to tell if you have the floor using a headset.
 - **Floor Tone Vol.** to set the floor tone volume in a call for your earpiece or speaker. The tone volume for your headset may be the same as set to for your earpiece.

3. Select a setting and press .

Note: You can also set the alert notification for 10-4 calls by selecting  > **Settings > 10-4 > Ringers > Alerts** (see page 116).

Silence All

The Silence All option allows you to mute all sounds without turning your phone off.

- ▶ Press the volume key down repeatedly in standby mode with the phone open. (The screen will display “Silence All.”)
 - To deactivate, press the volume key up repeatedly with the phone open to select a volume level.


Tip: When Ringer Volume is set as **Silence All**, you are not able to change the settings of **Applications, Start-up/Pw-off, Advanced..., Tone Volume, or Voice Guide**. See “Adjusting the Phone’s Volume Settings” on page 31, as well as the turning on or off the 10-4 speakerphone mode. See “Turning On or Off the Speakerphone for 10-4 Calls” on page 117.

You can also select **Vibrate All** to set your phone to vibrate only.

Display Settings


Changing the Phone's Menu Style

Your phone allows you to choose how the main menu appears on your display screen.


1. Select  > **Options** (right softkey) > **Change View**.
2. Select **Grid View** or **List View**.
 - **Grid View** to view each main menu item as an animated single-screen icon. You can select a menu by pressing a number key. Allocation of menu options corresponds to that of number keys on the keypad.
 - **List View** to view main menu as a list. Menu option is numbered and you can select it by pressing the corresponding number key on the key pad.

Changing the Backlight Time Length

To change the backlight setting:

1. Select  > **Settings** > **Display** > **Main Screen** > **Backlight**.
2. Select **Always On**, **Dim Only**, or a preset length of time.

To change the keypad backlight setting:

1. Select  > **Settings** > **Display** > **Keypad Light**.
2. Select **Always Off** or a preset length of time.

Note: Long backlight settings affect the phone's talk and standby times.

Power Save Mode

This feature helps conserve your battery power.

1. Select  > **Settings** > **Display** > **Power Save Mode**.
2. A message appears. Press  (left softkey) to continue.
3. Select **On**. (Select **Off** to deactivate this feature.)

Changing the Greeting

To display or change your custom greeting:

1. Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Foreground** > **Greeting** > **Custom**.
2. Enter a custom greeting using your keypad and press **MENU OK**.
(See “Entering Text” on page 24.)

To select the default greeting:

- ▶ Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Foreground** > **Greeting** > **Default**.

Changing the Font Size

To change the input font size:

1. Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Input Font**.
– or –
Select **MENU OK** > **Settings** > **More...** > **Accessibility** > **Input Font**.
2. Select **Phone#s**, **Messaging**, or **Others**.
3. Select an input font size and press **MENU OK**.

To change the display font size:

1. Select **MENU OK** > **Settings** > **Display** > **Font Size**.
– or –
Select **MENU OK** > **Settings** > **More...** > **Accessibility** > **Font Size**.
2. Select an option and press **MENU OK**.
 - **Main Screen** to select **Messaging** or **Browser**.
 - **Outer Screen** to select **Names**.
3. Select a font size and press **MENU OK**.

Tip: You can see the preview of the display by pressing **Preview** (right softkey).
(For **Font Size** menu only.)

From the preview display, you can select a font size by pressing the navigation key right or left and press **MENU OK**.

Changing the Background

1. Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Background**.
2. Select background option and press **MENU OK**.

Changing the Contrast

You can adjust your screen's contrast (brightness) to suit your surroundings.

To adjust the display's contrast:

1. Select **MENU OK** > **Settings** > **Display** > **Contrast**.
2. Select an option and press **MENU OK**.

Changing the Display Screen Animation

Your new phone offers animation for what you see on the display screen during various phone functions.

1. Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Animation**.
2. Select **Outgoing Calls** or **Service Search**.
3. Select an option and press **MENU OK**.
4. Select an animation display and press **MENU OK**.

Changing the Screen Saver

Your new phone offers you the option of displaying a screen saver while in standby mode.

To change the screen saver:

1. Select **MENU OK** > **Settings** > **Display** > **Main Screen** > **Screensaver**.
2. Select an option and press **MENU OK**.
3. Select a screen saver and press **MENU OK** twice.

Changing the Standby Mode Display

Select from among a variety of items to be displayed in standby mode.

To set the clock/calendar display for standby mode:

1. Select **MENU** **OK** > **Settings** > **Display** > **Main Screen** or **Outer Screen**.
2. Select **Foreground** > **Clock/Calendar**.
3. Select a display option and press **MENU** **OK**.
4. Press **OK** (left softkey) to apply the display setting.



Setting Return to Idle Mode

1. Select **MENU** **OK** > **Settings** > **Display** > **Return to Idle**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **Automatically** or **End Key**.
 - **Automatically** to return to Idle mode (which indicates standby mode or signal search mode) automatically when no key is pressed in 30 seconds.
 - **End Key** to return to Idle mode by pressing **END**.

Note: **End Key** setting affects the phone's talk and standby times.

Sleep Mode



This feature helps conserve your battery power by restricting the display.



1. Select  > **Settings** > **Display**.
2. Select **Main Screen** or **Outer Screen** > **Sleep Mode**.
3. Select a time interval before the phone goes into sleep mode and press . (Select **Off** to deactivate this feature.)

Location Settings

The settings allow you to turn the Assisted GPS chipset in the cell phone to “On” or “Off.” Setting location to **On** lets the network detect the cell phone’s geographic location using Assisted GPS, making some features easier to use. Setting location to **Off** disables Assisted GPS, but some features may still detect the cell phone’s whereabouts using cell tower technology. Assisted GPS is automatically set to **On** when an emergency call is placed, then set back to **Off** when the call is completed. Except for basic cellular and 911 services, your location will only be used with your consent.


To set the Location Menu to On or Off:

1. Select  > **Settings** > **More...** > **Location** > **On/Off**.
2. Read the disclaimer and press  (left softkey).
3. Select **On** or **Off**.

Tip: When the Location feature is on, your phone’s standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

You can send the log received from the GPS applications to other devices via Bluetooth or a USB cable.

To send the GPS log to other devices:


1. Select  > **Settings** > **More...** > **Location** > **NMEA Output**.
2. Select **Bluetooth**, **USB**, or **Off**.

Note: This is an optional service. For more details, please check with your service provider on availability.


Messaging Settings

Setting Message Notification Display

You can set your phone to display an icon and message notification or just display an icon notification when you receive a text message, picture message, voicemail (optional), or Web Alert.

1. Select  > **Settings > Messaging > Notification.**
2. Select **Msgs and Icon** or **Icon Only.**

Note: Receiving messages will not interrupt current operations. If you receive messages during operations, only an icon is displayed even if you select **Msgs and Icon.**

Tip: To access Messaging settings menu, you can also select  > **Messaging > Settings.**



Setting Push Options

Turning this feature on allows you to connect to a Web Alerts page automatically (if possible) when you receive a Web Alert. See page 119 for Web Alerts.

1. Select  > **Settings > Messaging > Push Options.**
2. Select **Yes** or **No.**

Setting Message Reminders

When new messages arrive, you can choose to have your phone notify you by playing an audible alert.

1. Select  > **Settings > Messaging > Message Reminder.**
2. Select **Text Message**, **Pic Messaging**, **Voicemail**, or **Web Alerts.**
3. Select **Repeat** or **Ringer Length.**
4. Select a setting and press .

Editing Canned Messages

Your phone can store canned messages for use with text messaging. You can edit your phone's default canned messages through the Settings menu.

To edit a canned message:

1. Select **MENU** **OK** > **Settings** > **Messaging** > **Canned Messages**. (The list of canned messages will be displayed.)
2. Select the message you want to edit and press **Options** (right softkey) > **Edit**.
3. Use your keypad to edit the message and press **MENU** **OK** to save your changes.

Note: To reset all messages, press **Options** (right softkey) > **Reset All Msgs** > **Yes** (left softkey) after step 1 above.

To delete a canned message:

1. Select **MENU** **OK** > **Settings** > **Messaging** > **Canned Messages**.
2. Select the message you want to delete and select **Options** (right softkey).
3. Select **Delete** > **Yes** (left softkey).

To change the language of the canned messages:

1. Select **MENU** **OK** > **Settings** > **Messaging** > **Canned Messages**.
2. Press **Options** (right softkey) > **Select Language**.
3. Select **English** or **French**.

Note: For information on editing text, see "Entering Text" on page 24.

Setting Your Callback Number

With this feature, you can send a callback number with your text message.

1. Select **MENU OK** > **Settings** > **Messaging** > **Callback Number**, and then press **MENU OK** again.
2. Select an option and press **MENU OK**.
 - **None** to send no callback number.
 - **My Phone#** to send your phone number.
 - **Other** to send a defined number. To set a number, enter a phone number in the Enter Callback# field, and then press **MENU OK** > **Done** (left softkey).

Setting Your Signature

This feature allows you to send a text message with your signature.

1. Select **MENU OK** > **Settings** > **Messaging** > **Signature**.
2. Select **On** in the Signature field. (If you do not wish to attach a signature to your outgoing messages, select **Off**.)
3. Enter your signature in the Text field.
4. Press **MENU OK** > **Save** (left softkey).

Note: You can insert your signature even when your signature setting is off. Press **Mode** (right softkey) and select **Signature** while composing your message.



Setting Drafts Alert

Drafts Alert sends you a reminder when you have unsent messages waiting in the drafts folder.

1. Select **MENU OK** > **Settings** > **Messaging** > **Drafts Alert**.
2. Select **On** or **Off**.

Airplane Mode

When your phone is in Airplane mode, it cannot send or receive any calls (except for 911 dialing) or access online information. You may still use the phone's other features, such as voice memo, calculator, calendar, etc., while you are in Airplane mode.

1. Select  > **Settings** > **More...** > **Airplane Mode**.
2. Read the disclaimer and press  (left softkey).
3. Select **On** or **Off**.




Note: While in Airplane mode, your phone's screen will display "Phone Off."




TTY Use

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

1. Select  > **Settings** > **More...** > **Accessibility** > **TTY**.
(An informational message will be displayed.)
2. Press  or  (left softkey) to continue.
3. Select **On** or **Off**.

Note: When you connect TTY devices, your phone will display  in TTY mode. If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling

It is recommended that TTY users make emergency calls by other means including cellular and landline communications.

Phone Setup Options



My Favourites

Your phone offers you the option of assigning a shortcut to a favourite or often-used function. Pressing the navigation key left (by default) will launch your user-defined shortcut.

1. Press the navigation key left.
2. Select **<Add Favourite>**.
3. Select an item to be assigned to My Favourites list and press **MENU OK**.
 - **Contact** to display stored Contacts entries.
 - **My Downloads** to display downloaded items stored in your phone.
 - **Web Bookmark** to display your bookmarked sites.
 - **Menu Item** to assign an often-used menu item.
4. Using the navigation key or your keypad, select an item to be assigned to the My Favourites list.
5. Press **Assign** (left softkey) to save if you select options other than Contact.


Tip: While My Favourites list is displayed, press **Options** (right softkey) to customize the list according to your needs.

Setting the Text Entry Options

1. Select  > **Settings** > **Text Entry**.
2. Select an option and press .
 - **Auto-Capital** to set the auto-capital on or off.
 - **Auto-Space** to set the auto-space on or off after T9 words you enter.
 - **Input Language** to select the language (English or French).
 - **My Words** to add a word to or edit a word in the T9 database (see page 25).
 - **T9 Settings** to customize the T9 settings (see page 26).
 - **Default Input** to select **T9 word**, **Alphabet**, or **Retain Mode** for the initial entry mode. Set **Retain Mode** to retain the previous entry mode (see page 28).
 - **Add Word** to store words that you use frequently (see page 25).
 - **Auto-Complete** to automatically display words that may follow the current text input.
 - **Help** to see the T9 instructions page.

Auto Answer Mode

This feature sets the phone to automatically pick up incoming calls in speakerphone mode or hands-free mode (when connected).

1. Select  > **Settings** > **More...** > **Call Setup** > **Auto-Answer**.
2. Select **Hands-free** or **Speakerphone**.
3. Select **5 Seconds**, **10 Seconds**, or **Off**.

Call Answer Mode

This feature allows you to select how to answer incoming calls on your phone: whether you want to be required to press **TALK**, to press any number key, or simply to open the phone.

1. Select **MENU OK** > **Settings** > **More...** > **Call Setup** > **Call Answer**.
2. Select **Talk Key**, **Any Key**, or **Flip Open**.

Setting Abbreviated Dialing

To activate Contacts Match feature:

1. Select **MENU OK** > **Settings** > **More...** > **Call Setup**.
2. Select **Contacts Match** > **On**.
 - To deactivate this feature, select **Off**.

Note: Contacts Match does not apply when entering 411 or 911.

To set your prepend number:

1. Follow step 1 above.
2. Select **Abbrev. Dial** > **Prepend** > **On**.
 - To deactivate this feature, select **Off**.
3. Enter the first five- or six- digit prefix in the Prepend# field, (for example, an area code and prefix) and press **OK** (left softkey).

Tip: To make an Abbreviated Dial call, see “Using Abbreviated Dialing” on page 23.

Headset Mode



This feature allows you hands-free phone use. Press the Turbo Button (the operation button) on the headset to activate useful functions.

Note: Set TTY to Off to change Headset Mode settings.


To connect the headset:

- ▶ Simply plug the headset into your phone's headset jack.

To set headset mode:

1. Select  > **Settings** > **More...** > **Headset Mode**.
2. Select **Headset Button**.
3. Select an option and press :
 - **Voice Calls** to use the Turbo Button for voice calls. In standby mode, press twice to redial the last call, and press and hold to activate ASR.
 - **10-4** to use the Turbo Button for 10-4 calls. In standby mode, press and hold to redial the last 10-4 call. (10-4 mode should be set to Enable.)
 - **Off** to disable a Turbo Button.





To set the ringer sound:

1. Select  > **Settings** > **More...** > **Headset Mode**.
2. Select **Ringer Sound** > **Normal** or **Headset Only**.


Setting Navigation Key Shortcuts

You can use the navigation keys as shortcuts to access specific menu items directly from standby mode. With this feature, you can reassign the default shortcuts to the menu items you choose.

To set the navigation key shortcut:

1. Select  > **Settings** > **More...** > **Navigation Keys**.
2. Select the navigation key you want to reassign and press .
3. Using the navigation key or your keypad, select a function.
4. Press  (left softkey) to save. (If there are additional levels available, press  before selecting your shortcut.)

Changing the Menu Language

1. Select  > **Settings** > **Display** > **Language**.
2. Select **English** or **Français**.

Setting Side Key Guard

This feature enables you to lock the external keys while the phone is closed in order to prevent accidental key presses.

1. Select  > **Settings** > **More...** > **Side Key Guard**.
2. Select **On** or **Off**.

Note: This feature does not apply when the phone is open.

Tip: You can deactivate this feature temporarily by pressing and holding  while the phone is closed.

Browser Settings

Customize your phone's Web browser settings.

Editing Bookmarks

Edit, sort, and delete Web browser bookmarks.

1. Select **MENU** > **Settings** > **More...** > **Browser** > **Bookmarks**.
2. Scroll to highlight a bookmark and press **Options** (right softkey).
3. Select an option and press **MENU**.
 - **Show Page** displays the Web page of the selected bookmark.
 - **Edit** to edit the title or address of a selected bookmark.
 - **Delete** to delete a selected bookmark.
 - **Delete All** to delete all bookmarks saved in the phone.
 - **Reorder** to change the order of the bookmarks.

Deleting Browser Cache Files

With this feature, you can delete the browser cache (temporary files) saved in the phone.



1. Select **MENU** > **Settings** > **More...** > **Browser**.
2. Select **Delete Web Cache**.
3. If you are certain you would like to delete, press **OK** (left softkey) > **Yes** (left softkey).

Phone Information Management


Displaying Phone Information

- ▶ Select  > Settings > Phone Info > My Phone#.


Finding Icon Definition

1. Select  > Settings > Phone Info > Icon Glossary.
2. Select the item for which you want to see the explanation and press .

Displaying the Version Information

- ▶ Select  > Settings > Phone Info > Version.


Displaying Advanced Information

- ▶ Select  > Settings > Phone Info > Advanced.

3. Security

Accessing the Security Menu

You must enter your lock code to view the Security menu.

1. Select  > **Settings** > **More...** > **Security**.
2. Enter your lock code to display the Security menu.

Tip: If you never changed the lock code number and you can not recall your lock code, try using the last four digits of your phone number.

Using Your Phone's Lock Feature

Locking Phone

Locking phone automatically locks the keys. If you select **Lock My Phone**, you must enter the lock code beforehand to make a call. In this way you can prevent other people from using your phone.

1. From the Security Menu (see “Accessing the Security Menu” above), select **Lock My Phone**.
2. Select **Lock Now** or **On Power-up**.
 - **Lock Now** to lock your phone now.
 - **On Power-up** to lock your phone the next time it is turned on.
3. Select either **Full Lock** or **Exp. IncomingCalls**.
 - **Full Lock** to restrict both outgoing and incoming calls.
 - **Exp. IncomingCalls** to restrict outgoing calls while allowing incoming calls.

Unlocking Your Phone

1. From standby mode, press **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

1. From the Security Menu (see “Accessing the Security Menu” on page 53), select **Change LockCode**.
2. Enter and re-enter a new lock code.

Calling in Lock Mode

Even when your phone is locked, you can make calls to 911, Customer Service, and to special numbers without entering the lock code. (For information on special numbers, see “Using Special Numbers” on page 55.)

Note: You can call only emergency numbers while **Voice** is set to **Locked** in **Restrict and Lock** (see “Locking Voice Calls” shown below).

Locking Voice Calls, Internet and 10-4 Services



With this feature, you can block access to the Internet, incoming and outgoing voice calls (except 911), or 10-4 calls.

1. Select **MENU** > **Settings** > **More...** > **Restrict and Lock**.
2. Select **Voice**, **Internet**, or **10-4**.
 - **Voice:** Enter your lock code, and then select **Lock**.
 - **Internet:** Enter your lock code.
 - **10-4:** Select **Off and Lock**, and then enter your lock code.
3. Select **Locked**. (Select **Unlocked** to deactivate this feature.)

Tip: To avoid accidental Internet connections, you can use the Net Guard feature (see page 134).

Restricting Calls

You can restrict phone numbers your phone dials or receives. (This setting does not apply to 911 or Customer Service.)



1. Select  > **Settings** > **More...** > **Restrict and Lock**.
2. Select **Voice**, and then enter your lock code.
3. Select **Restrict** > **Incoming Calls** or **Outgoing Calls**.
4. Select an option and press .
 - **Allow All** to make or receive all calls.
 - **Contacts Only** to make or receive calls to or from Contacts entries, voicemail (optional), or special numbers only.
 - **Special #s Only** to make or receive calls to or from three special numbers only. (You must register the numbers beforehand. See “Using Special Numbers” below.)

Note: Restricted incoming calls are forwarded to voicemail. (Voicemail service is optional and may require subscription fee.)

Using Special Numbers

You can save three special numbers on your phone in addition to your Contacts entries (the same number may be in both directories). You can make or receive calls to or from special numbers even when your phone is locked.

To add or edit a special number:

1. From the Security Menu (see “Accessing the Security Menu” on page 53), select **Special Numbers**.
2. Select a field to enter or edit the number and press .
3. Enter or edit the number and press .

Note: There are no speed dial options associated with special numbers.

You cannot make calls to or receive calls from special numbers if **Voice** is set to **Locked** in **Restrict and Lock**.

Deleting Phone Content

1. From the Security Menu (see “Accessing the Security Menu” on page 53), select **Delete/Reset**.
2. Select an option and press **MENU OK**.
 - **Delete Web History** to delete all Web history saved in the phone.
 - **Delete Web Cache** to delete all Web cache memory saved in the phone.
 - **Delete Contacts** to delete all of your Contacts entries.
 - **Delete My Downloads** to delete all items you have downloaded to your phone.
 - **Delete Voice Data** to delete all voice data and call memos you have saved in the phone.
 - **Delete Message** to delete all messages (including locked ones) in the Inbox, Sent Mail, Pending, Drafts folders, your defined folders, and Recent List, and reset all user-created canned messages.
 - **Delete Cal. Events** to delete all scheduled events (including secret ones).
3. Press **OK** (left softkey) to continue.
4. If you are certain you would like to delete, press **Yes** (left softkey).

Resetting the Browser

This option resets your Web browser's history, bookmarks, cookies, auto-complete text, and URLs.

1. From the Security Menu (see "Accessing the Security Menu" on page 53), select **Delete/Reset > Reset Browser**.
2. Press **OK** (left softkey) to continue.
3. If you are certain you would like to reset, press **Yes** (left softkey).

Resetting Favourites

1. From the Security Menu (see "Accessing the Security Menu" on page 53), select **Delete/Reset > Reset Favourites**.
2. Press **OK** (left softkey) to continue.
3. If you are certain you would like to reset, press **Yes** (left softkey).

Resetting All Settings

Reset All Settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

1. From the Security Menu (see "Accessing the Security Menu" on page 53), select **Delete/Reset > Reset All Settings**.
2. Press **OK** (left softkey) to continue.
3. If you are certain you would like to restore all the factory settings, press **Yes** (left softkey).

Resetting Your Phone


Resetting the phone resets all settings and delete all data on your phone.

1. From the Security Menu (see “Accessing the Security Menu” on page 53), select **Delete/Reset > Reset Phone**. (A disclaimer is displayed.)
2. Press **OK** (left softkey) to continue.
3. If you are certain you would like to reset your phone, press **Yes** (left softkey).

4. Roaming

Understanding Roaming

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you are off the home network. Any time you are roaming, the phone displays the roaming icon (.



Roaming on Other Networks

When you are roaming, your call quality and security will be similar to the quality you receive when making calls on the home network. You may not be able to access certain features.

Note: If you are on a call when you leave the home network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think service is available, turn your phone off and on again to reconnect to the home network.

Setting Your Phone's Roam Mode

Your phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

1. Select  > **Settings** > **More...** > **Roaming**.
 2. Select an option and press .
- **Automatic** to seek Service. When service is unavailable, the phone searches for an alternate system.
 - **Home Only** to access the home network only and prevent roaming on other networks.
 - **1X Only** to prevent EVDO service and access 1X service only.

5. Menu Navigation

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Missed Alerts

2. History

3. Contacts

4. Messaging

1. Send Text

2. Text

3. Picture Msg

4. Web Alerts

5. Voicemail

6. Settings

5. My Downloads

Application Mgr.

Games

Ringers

Screen Savers

Applications

Dynamic (If applicable)

Others (If applicable)

6. Web

7. GPS Navigation

8. Tools

1. Voice Memo

2. Bluetooth

3. Calendar

4. Alarm Clock

5. Stopwatch

6. Countdown

7. World Clock

8. Calculator

9. Settings

1. Display

2. Ringers

3. 10-4

4. Bluetooth

5. Messaging

6. Text Entry

7. Phone Info

8. More...

IN USE MENU

Press **Options** (right softkey) to display the following options:




1. Three-Way Call
2. Main Menu
3. Save (or Contact Details)
4. Contacts
5. Call Memo Rec.
6. Phone Info

6. History

Viewing History

History shows up to the 60 most recent phone calls you have placed, received, or missed. Each history entry contains the phone number (if available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To display History details:

- ▶ From standby mode, press  or .
- or –
- Select  > **History**.

The current day's history appears under **Today**, and the previous day's history appears under **Yesterday**. Other history includes date information.

To display the Recent 10-4:

- ▶ Select  > **History** >  (left softkey).




Note: History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's History.

You can access your Contacts list by selecting **Go to Contacts**.

Recent 10-4 appears only when 10-4 mode is set to Enable.

History Icon Indication

You can determine the type of phone call that was placed, accepted, or missed from the icons shown below.

-  – Incoming Call
-  – Outgoing Call
-  – Missed Call

History Thread

The History thread screen shows all history of a selected history entry.

To display a History thread:

- ▶ From the History list display, select an entry and press **MENU OK**.

Tip: Text messages are included in the History thread.

History Details

To display History details:

- ▶ From a History thread display, select an entry and press **MENU OK**.

The History details screen shows the call type, phone number, and date and time of the call. An onscreen menu is also displayed according to the type of call. See “History Menu Options” shown below. To make a call from History details screen, press **TALK** or **SPEAKER**.

Making a Call from History

To place a call from History:

1. Press **TALK** or **[]** to display your recent call history log, and then highlight a listing.
2. Press **TALK** or **SPEAKER**.

Note: You cannot make calls from History to entries identified as No Caller ID, Restricted ID (Private), or Unavailable ID.

Tip: You can also send a message when the left softkey displays the **Send Text** option.

History Menu Options

You may see several menu items on the onscreen menu or by pressing **Options** (right softkey).

- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Text** to send a text message. See page 120 for details.
- **New Group** to access a group entry menu to create a new group entry. See “Making a New Group Entry from History” on page 66.
- **Save Contact** to save a phone number. See “Saving a Phone Number from History” on page 65.
 - **Contact Details** is displayed when the name and number are already in your Contacts.
- **Delete** to delete the entry.
 - **Delete All** to delete all entries in the History. See “Deleting History” on page 67.
- **Rename** to change an entry’s current name to Caller ID name.
- **Prepend** to add numbers to the beginning of the phone number. See “Prepending a Phone Number from History” on page 67.
- **Copy to Personal** to copy the phone number to the 10-4 Personal List (see page 76).

Saving a Phone Number from History

Your phone can store up to 600 Contacts entries. Contacts can store up to a total of 4200 phone numbers.

1. From the History list display, highlight the entry you want to save and press **Options** (right softkey) > **Save Contact**.
2. Select **New Entry** or **Existing Entry**.
 - **New Entry** to create a new Contacts entry for the number.
 - **Existing Entry** to save the number to an existing entry.(This step is not necessary on the very first entry in your Contacts.)
3. If **New Entry** was selected, select a phone type, and then use the keypad to enter the new entry name and press **MENU OK**.
– or –
If **Existing Entry** was selected, select an existing entry to which you want to save the number, and then select a phone type and press **MENU OK**.
4. Press **Done** (left softkey).

Note: You cannot save phone numbers from calls identified as No Caller ID, Restricted ID (Private), or Unavailable ID.

Making a New Group Entry from History

1. From the History list display, press **Options** (right softkey) > **New Group**.
2. Read the message and press **Start** (left softkey).
3. Scroll through the list and press **MENU OK** after each selection.
(A check mark will appear in the box next to the selected entry.)

Tip: Press **Options** (right softkey) > **Enter New Address** or **Contacts** to enter a new address or to select an entry from your Contacts.

4. When you have marked all the entries you want to add, press **Continue** (left softkey).
5. Enter a name for the new group and press **MENU OK**.
6. Press **Save** (left softkey) to save the group entry.

Prepending a Phone Number from History

If you need to make a call from History and you happen to be outside your local area code, you can add the appropriate prepending by following these steps:

1. From the History list display, highlight your desired entry and press **Options** (right softkey) > **Prepend**.
2. Enter the prefix you want to add to the number.
3. Press **TALK** or **SPEAKER** to place a call.

Deleting History

1. From the History list display, highlight an entry you wish to delete and press **Options** (right softkey) > **Delete**.
 - Select **Delete All** if you wish to delete all entries in your History.
2. If you are certain you would like to delete the History, press **Delete** (left softkey).
 - or –
 - Press **Cancel** (right softkey) to return to the previous menu.

7. Contacts

About Contacts

Your phone can store up to 600 Contacts entries.

You can create two types of Contacts entries:

- **Personal Contacts Entries** (for individual contacts) – An entry for an individual. Each entry can contain up to seven phone numbers, three email addresses, and one Web address.
- **Group Entries** – Your phone can store up to 25 group entries. Each entry can contain up to 40 members.

Displaying the Contacts List

- ▶ Press **Contacts** (right softkey).
– or –
Select  > **Contacts**.

If you highlight a name, the main (default) phone number is displayed. If a group entry is highlighted, a group icon and number of group members will also be displayed.

Viewing History from Contacts

You can view the history of the selected Contacts entry from the Contacts list.

- ▶ Highlight the entry and press **Options** (right softkey) > **Contact History**.

Creating a New Contacts Entry

Creating a Personal Contacts Entry

Shortcut: Enter the phone number in standby mode and press **MENU OK**. Proceed with steps 2-4 in “Saving a Phone Number” on page 20.

1. From the Contacts list display, select **Add New > New Contact**.
2. Enter a name for the new entry and press the navigation key down.
3. Enter the phone number for the entry and press **MENU OK**.
4. Select a phone type for the entry (**Mobile, Home, Work, Pager, Fax, or Other**) and press **MENU OK**.
5. Press **Done** (left softkey).

After you have saved the number, the new Contacts entry is displayed.

Creating a Group Entry

You can create a group entry by giving it a name and assigning members to it.

1. From the Contacts list display, select **Add New > New Group**.
2. Read the message and press **Start** (left softkey).
3. Scroll through the list and press **MENU OK** after each selection. (A check mark will appear in the box next to the selected entry.)

Tip: Press **Options** (right softkey) > **Enter New Address** or **Recent History** to enter a new address or to select an entry from your Recent History.

4. When you have marked all the entries you want to add, press **Continue** (left softkey).
5. Enter a name for the new group and press **MENU OK**.
6. Press **Save** (left softkey) to save the group entry.

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by Automatic Speech Recognition (ASR), by speed dial number, and by group. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Names

To find Contacts entries by name:

1. From the Contacts list display, scroll through all the entries using your navigation key.
– or –
Enter the first letter or the first few letters of the name. (The more letters you enter, the more your search narrows.)
2. To display an entry, highlight your desired entry and press **MENU OK**.
3. To make the call, highlight an entry, and select a phone number using the navigation key right or left (if there are multiple saved phone numbers), and then press **TALK** or **SPEAKER**.

To find Contacts entries by Automatic Speech Recognition (ASR):

1. Press and hold **TALK** or **SPEAKER**.
2. Say “Call” and then the name you would like to find. If the software finds multiple matches, a list of the most likely names is displayed. You will hear the voice prompt “Did you say...” followed by the matched name.
3. Say “Yes” to confirm the name, or “No” to change the selection.

Note: Your phone will automatically place a call if the name is completely recognized.

Finding Speed Dial Numbers

1. Select **MENU OK** > **Settings** > **More...** > **Contacts** > **Speed Dial #'s**.
– or –
Press **Contacts** (right softkey) > **Options** (right softkey) > **Settings** > **Speed Numbers**.
 - See “Using Speed Dialing” on page 22 for how to use speed dialing.
2. Scroll through speed dial entries. Speed dial numbers are displayed in numeric order.
3. To dial the phone number assigned to a speed dial number, press **TALK** or **SPEAKER**.

Finding Group Entries

To find entries designated as part of a group:

1. Press **Contacts** (right softkey).
– or –
Select **MENU OK** > **Contacts**.
2. Scroll through the group entries using your navigation key.
To display Contacts entries belonging to a group, highlight the group and press **MENU OK**.
3. To dial the entry’s default phone number, select the entry and press **TALK** or **SPEAKER**.

Displaying the Details Screen

To display the details screen:

1. From the Contacts list display, select a Contacts entry for which you would like to see the details and press **MENU OK**.
2. Highlight any information and press **MENU OK**. You will see onscreen menu options for the information displayed.

Note: If you select a group entry on step 1, entries belonging to the group entry are displayed. Highlight an entry and press **Options** (right softkey) to display the menu options.

For details of each menu, see “Contacts Menu Descriptions” on page 76.

Editing a Contacts Entry

Adding a Phone Number to a Personal Contacts Entry

1. From the Contacts list display, highlight the Contacts entry to which you want to add a phone number and press **Options** (right softkey) > **Edit Contact**.
2. Scroll down to highlight <Add Number> and enter the new phone number and press **MENU OK**.
3. Select a phone type for the number and press **MENU OK**.
4. Press **Done** (left softkey).

Adding Group Members to the Group Entry

You can add group members to an existing group entry. Each group can include up to 40 members. You can enter a group member directly or select the member from your Contacts.

1. From the Contacts list display, scroll to the group you want to add members to, and press **MENU OK**.
2. Press **Options** (right softkey) > **Edit Group** > **Add More**.
3. Read the message and press **Start** (left softkey).
4. Highlight each member you want to add and press **MENU OK** after each selection. (A check mark will appear in the box next to the selected member.)
5. Press **Continue** (left softkey) > **Save** (left softkey).

Assigning Speed Dial Numbers

Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 22.)

To assign a speed dial number:

1. From the Contacts list display, select a Contacts entry that has a phone number to which you would like to assign a speed dial and press **MENU OK**.
2. Highlight the number and press **Options** (right softkey) > **Set Speed Dial**.
3. Select an available speed dial location and press **MENU OK**.
– or –
 1. Select **MENU OK** > **Settings** > **More...** > **Contacts** > **Speed Dial #'s**.
 2. Select an available speed dial location and press **MENU OK**.
 3. Select an entry from the list and press **MENU OK**.
The entry's default phone number is assigned.
 - To select another phone number in the entry, press the navigation key right or left.

Note: If you attempt to assign a new number to an already used location, you will be asked whether to overwrite it. Select **Replace** option to overwrite.

Editing a Contacts Entry's Information

1. From the Contacts list display, highlight the entry you want to edit.
2. Press **Options** (right softkey) > **Edit Contact**.
3. Select the field you want to edit, and then add or edit the information and press **MENU OK**.
4. Press **Done** (left softkey).

To edit a group entry:


You can change the group name, the assigned image, or add new members to the group.

1. From the Contacts list display, highlight the group you want to edit.
2. Press **Options** (right softkey) > **Edit Group**.
3. Change the group name or the image.
 - See “Adding Group Members to the Group Entry” on page 72 to add a member.
4. Press **Save** (left softkey) to save your changes.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

To assign an image for an entry:

1. From the Contacts list display, select the entry to which you want to assign an image and press **MENU OK**.
2. Press the navigation key up to highlight the  icon and press **MENU OK**.
3. Select **Select Photo**.
4. Select an option and press **MENU OK**.
5. If you select **Downloads**, select an image and press **MENU OK**, and then press **OK** (left softkey) to assign.

Deleting a Contacts Entry

To delete a personal Contacts or a group entry:

1. From the Contacts list display, highlight an entry you want to delete.
2. Press **Options** (right softkey) > **Delete Contact** > **Delete** (left softkey).
– or –
Press **Options** (right softkey) > **Delete Group** > **Yes** (left softkey).

To remove a group member from a group entry:

1. From the Contacts list display, scroll to the group from which you want to delete a member, and press **MENU OK**.
2. Press **Options** (right softkey) > **Edit Group**.
3. Highlight the member you want to delete and press **Options** (right softkey) > **Remove from Group** > **Yes** (left softkey).
4. Press **Save** (left softkey).

Selecting a Ringer Type for a Personal Contacts Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 29.)

1. From the Contacts list display, select a Contacts entry to which you would like to assign a ringer and press **MENU OK**.
2. Select the current ringer type and press **MENU OK** to display the Ringer menu.
3. Select **Change**.
4. Select an option and press **MENU OK**.
5. Select a ringer and press **MENU OK**.

Contacts Menu Descriptions

You may see several menu items on the onscreen menu or by pressing **Options** (right softkey).

In the Contacts List:

- **New Contact** to create a new Contacts entry. See “Creating a Personal Contacts Entry” on page 69.
- **New Group** to create a new group entry. See “Creating a Group Entry” on page 69.
- **Edit Contact** to edit the selected Contacts entry. **Edit Group** appears if a group entry is selected. See “Editing a Contacts Entry” on page 72.
- **Delete Contact** to delete the selected Contacts entry. **Delete Group** appears if a group entry is selected. See “To delete a personal Contacts or a group entry” on page 75.
- **Send Text** to send a text message to the selected Contacts entry.
- **Contact History** to display the selected Contacts entry’s history. See “Viewing History from Contacts” on page 68.
- **Send Contact** to send the selected Contacts entry via Bluetooth.
- **Set as Secret** to make the selected entry secret. See “Secret Contacts Entries” on page 78.
- **Settings** to display the Settings menu.
- **Print** to print the selected Contacts entry’s information.
- **Copy to Personal** to copy the phone number to the 10-4 Personal List (appears only when 10-4 mode is set to Enable, and the name or the number does not match any stored entry in your Personal List).

On the Details screen:

- **Edit** to edit the selected Contacts information.
- **Prepend** to alter a phone number by adding numbers to the beginning of the entry. See “Prepending a Phone Number from History” on page 67.
- **Delete #** to delete the selected phone number.

- **Call Alarm** to set a Call Alarm for the selected phone number.
- **Set Speed Dial** to assign a Speed Dial number to the selected phone number.
- **Set as Main #** to set the selected number as the main (default) number for the Contacts entry.

On the Group Details screen only:

- **Contact Details** appears if the entry is already saved in your Contacts.

Onscreen menu only:

- **Call** to call the selected phone number.
- **Set # Type** to select a number type (mobile, home, etc.)
- **Launch** to connect to a selected URL.
- **Set as Favourite** to set a selected URL as My Favourites.
- **Edit** to edit the selected information.
- **Clear** to delete a current memo or address.

Secret Contacts Entries

You can hide an entry by making it secret. The entry is not displayed in your Contacts. In History, a telephone number is displayed but the Contacts entry's name is not.

To make an entry secret:

1. From the Contacts list display, select the Contacts entry you want to tag as secret and press **Options** (right softkey).
2. Select **Set as Secret**.
3. Select **On**. (Select **Off** if you do not want to tag as secret.)
4. From the Contacts list, press **Options** (right softkey) > **Settings** > **Hide Secret**.
5. Enter your four-digit lock code.

To make an entry public:

1. From the Contacts list, press **Options** (right softkey) > **Settings** > **Show Secret**.
2. Enter your four-digit lock code.

Note: If you make an entry secret, calls cannot be made to or received from that entry if **Contacts Only** is selected in **Settings** > **More...** > **Restrict and Lock** > **Voice** > **Restrict** > **Incoming Calls** or **Outgoing Calls** (see page 55).

Tip: If you never changed the lock code number and you can not recall your lock code, try using the last four digits of your phone number.

Dialing Services

Your Contacts is pre-programmed with contact numbers for various services.

1. Select **MENU** **OK** > **Settings** > **More...** > **Contacts** > **Services**.
2. Select **Customer Service** or **Dir Assistance**.
3. Press **TALK** or **SPEAKER**.

8. Personal Organizer

Using Your Phone's Calendar

Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 200 events, 15 Call Alarms and 40 To Do Items.

Displaying Your Calendar

- ▶ Select **MENU OK** > **Tools** > **Calendar**.

Tip: The current day is framed by a rectangle.

To change the calendar display views, press the left softkey (**Monthly** or **Weekly**). In the weekly view, you can easily add or edit your own schedule.

Changing the Calendar Settings

This setting allows you to change the default settings for your phone's calendar. You can customize the calendar display according to your needs.

To change the calendar settings:

1. From the calendar display, press **Options** (right softkey) > **Settings**.
2. Select one of the following options and press **MENU OK**:
 - **Holiday** to add or reset a holiday on the calendar (**Set Date**, **Set Weekly**, **Reset Date**, **Reset Weekly**, or **Reset All**).
 - **Display** to change the display settings of the calendar (**Calendar View**, **Monthly View**, or **Time Starts at**).
 - **Alarm** to change the alarm settings of the calendar (**Ringer Length**, **Snooze Interval**, or **Snooze Times**).
3. Change the settings and press **MENU OK**.

Adding a Schedule to the Calendar

1. From the Calendar display, highlight the day to which you want to add a schedule.
2. Press **Options** (right softkey) > **Add Schedule**.
3. Enter the description and press **MENU OK**.

Tip: You can retrieve a description from the To Do List or the Schedule List by pressing **Mode** (right softkey) > **From To Do List** or **Fr. Schedule List** once you have stored them on the list.

4. Enter other fields if necessary:
 - **Description** to change the description for the schedule.
 - **Category** to select a category (**Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous**).
 - **Priority** to select a priority (**None, High, or Low**).
 - **Start** to set a start time for the schedule.
 - **End** to set an end time for the schedule.
 - **Location** to edit the location of your schedule (up to 64 characters).
 - **Alarm** to select the ringer for the alarm.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes.
 - **Repeat** to set the schedule's repeating status.
5. Press **Save** (left softkey) to save the event.

Tip: Press the navigation key up or down to scroll by week through the calendar, and the volume key to scroll by month.

In the monthly view, days with events scheduled are indicated by a small ► just to the left of the date. In the weekly view, times for which you have scheduled events are displayed as colored blocks.

Adding a Call Alarm to the Calendar

1. From the Calendar display, highlight the day to which you want to add a call alarm and press **Options** (right softkey).
2. Press the navigation key left or right to select **Add Call Alarm**.
3. Enter the phone number directly or press **Options** (right softkey) for the following options:
 - **From Contacts** to select a number from your Contacts.
 - **Voicemail** to select a number for voicemail access. (Voicemail service is optional.)
4. Select the following items you want to edit and press **MENU OK**.
 - **Category** to select a category for the call alarm (**Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous**).
 - **Time/Date** to edit the start time/date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to set the Call Alarm's repeating status.
5. Press **Save** (left softkey).

Tip: You can also add a call alarm from the Contacts menu. (See "Contacts Menu Descriptions" on page 76.)

You can set up to 15 call alarms.

To respond to a call alarm:

- ▶ Press any key to stop the alarm. (The alarm will stop and then sound again after the selected snooze interval.)
 - Press and hold **[Mute]** to cancel snoozing.
 - Press **Dismiss** (right softkey) to dismiss the event.

Tip: To change the alarm settings, from the calendar view, press **Options** (right softkey) > **Settings** > **Alarm** to set the ringer length and snooze options.

To call the phone number at the time of a call alarm notification:

- ▶ Press **TALK** or **SPEAKER** to dial the phone number (if applicable).
- ▶ Press **[+]** to make a 10-4 call (if applicable).

Adding To Do Items

Your phone can store and manage 40 To Do List items.

1. From the Calendar display, press **Options** (right softkey).
2. Press the navigation key left or right to select **Add To Do**.
3. Enter a description and press **MENU OK**.

Tip: You can retrieve a description from the To Do List or the Schedule List by pressing **Mode** (right softkey) > **From To Do List** or **Fr. Schedule List** once you have stored them on the list.

4. Select an option you want to edit and press **MENU OK**.
 - **Category** to select an event category (**Appointment, Business, Meeting, Personal, Vacation, Travel, or Miscellaneous**).
 - **Priority** to select an event priority (**None, High, or Low**).
 - **Due Time/Date** to schedule a due time and date.
 - **Status** to select a status for the To Do items (**Needs Action or Completed**).
5. Press **Save** (left softkey).

Adding a To Do List Item to the Schedule


1. From the Calendar display, press **Options** (right softkey).
2. Highlight **Schedule List** and press the navigation key left or right and select **To Do List**.
3. Select the item you want to add to the schedule, and press **Options** (right softkey) > **Add to Schedule**.
4. Modify the description field (if desired), and set the other fields using your keypad and press **MENU OK**. (See “Adding a Schedule to the Calendar” on page 81.)

Tip: You can retrieve a description from the To Do List or the Schedule List by pressing **Mode** (right softkey) > **From To Do List** or **Fr. Schedule List** once you have stored them on the list.

5. Press **Save** (left softkey).

Event Alerts

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events.

- By playing the alert tone (depending on the ringer type and ringer volume setting).
- By blinking the LED.
- By lighting the LCD backlight (depending on the backlight setting).
- ▶ Press any key to stop the alert. (The alert will stop and then sound again after the selected snooze interval.)
- ▶ Press and hold  to cancel snoozing.
- ▶ Press **Dismiss** (right softkey) to dismiss the event.

Note: To change the alert settings, from the calendar view, press **Options** (right softkey) > **Settings** > **Alarm** to set the ringer length and snooze options.

Viewing Day's Events

1. From the Calendar display, highlight the day for which you would like to view events and press **MENU OK**. (If you have events scheduled for the selected day, they will be listed in chronological order.)
2. To display the details of an event listed in the schedule, highlight the event and press **MENU OK**.

Event List Options

While you are displaying the day's events list, press **Options** (right softkey) to display the following options:

- **Add Schedule** to add a schedule to the calendar.
- **Add Call Alarm** to add a call alarm to the calendar.
- **Add To Do** to add a To Do item to the calendar.
- **Schedule List** to display the Schedule List on the calendar.
- **Call Alarm List** to display the Call Alarm List on the calendar.
- **To Do List** to display the To Do List on the calendar.
- **Edit** to edit the event.
- **Set Cal. Secret** to make an event secret.
- **Send Event** to send the event via Bluetooth.
- **Delete** to delete the event.
- **Go to Date** to jump to another date on the calendar.
- **View Memory** to view the memory status for events saved in the phone.
- **Delete Memory** to delete memory for events saved in the phone.
- **Print** to print the calendar events.

Deleting Events

To delete a day's scheduled events:

1. From the calendar display, select the day for which you would like to delete events and press **MENU OK**.
2. Highlight one of the events and press **Options** (right softkey) > **Delete**.
3. Select an option and press **MENU OK**.
 - **This** to delete a single event.
 - **Select** to delete events selected with check marks at one time. Press **Delete** (left softkey) to continue.
 - **All on This List** to delete all events on the list.
4. Press **Yes** (left softkey) to delete the event(s).

To delete old scheduled events:

- ▶ From the calendar display, press **Options** (right softkey) > **Delete Memory** > **Delete Old** > **Yes** (left softkey).

To delete all scheduled events:

1. From the calendar display, press **Options** (right softkey) > **Delete Memory** > **Delete All** > **Yes** (left softkey). (An alert will be displayed asking you to confirm the deletion.)
2. Press **Yes** (left softkey) to delete all events.

Note: All events are deleted including Call Alarms (see page 82) and To Do List items (see page 83).

Going to a Given Date

1. From the Calendar display, press **Options** (right softkey) > **Go to Date**.
2. Enter a date by using the navigation key and/or the keypad and press **MENU OK**.

Using Your Phone's Tools

Using the Alarm Clock

To set the alarm clock:

1. Select **MENU OK** > **Tools** > **Alarm Clock**.
2. Select an alarm number and press **MENU OK**.
3. Select the items you want to edit and press **MENU OK**.
 - **Description** to enter a description of the alarm.
 - **Time** to enter the alarm time. Enter the desired alarm time and press **MENU OK**.
 - **Repeat** to select the alarm frequency.
 - **Alarm** to set the alarm on or off.
4. Press **Save** (left softkey) to save the alarm settings.

Tip: Press the left softkey (**On** or **Off**) to toggle the alarm on and off.

To change the alarm settings, select **Settings** (right softkey) to set the ringer length and snooze options.

To stop the alarm:

- ▶ Press any key to stop the alarm. (The alarm will stop and then sound again after the selected snooze interval.)
- ▶ Press and hold **■** to cancel snoozing.
- ▶ Press **Dismiss** (right softkey) to dismiss the alarm.

Using the Countdown Timer

This feature allows you to use the countdown timer with alarm capabilities. You can set up to five timers.

1. Select **MENU OK** > **Tools** > **Countdown**.
2. Select a countdown timer number and press **MENU OK**.
3. Select items to edit and press **MENU OK**.
 - **Description** to enter a description of the countdown.
 - **Time** to enter the countdown time.
 - **Alarm** to set the countdown alarm on or off.
4. Press **Save** (left softkey) to save the countdown settings.

To stop the alarm:

- ▶ Press any key. (The alarm will stop and then sound again after the selected snooze interval.)
- ▶ Press and hold **□** to cancel snoozing.
- ▶ Press **Dismiss** (right softkey) to dismiss the timer.

Tip: Press the left softkey (**On** or **Off**) to toggle the countdown alarm on and off.
To change the alert settings, press **Settings** (right softkey) to set the ringer length and snooze options.

Using the Stopwatch

To start the stopwatch:

- ▶ Select **MENU OK** > **Tools** > **Stopwatch**.
 - Press **Start** (left softkey) to start the stopwatch.
 - Press **Stop** (left softkey) to stop the stopwatch.
 - Press **Resume** (left softkey) to start the stopwatch again.

To record a lap time while the stopwatch is running:


- Press **Lap** (right softkey) to record time of the first lap.
- Press **Lap** (right softkey) again to record the next lap. (Up to 5 lap times can be saved. If you continue recording, lap times will be deleted from the oldest.)

To display the stopwatch options:

1. From the stopwatch display, press **Options** (right softkey).
2. Select an option and press **MENU OK**.
 - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the lap list details.
 - **Save to Lap List** to save the recorded lap times. (Available when you stop the lap in stopwatch operation.)
 - **Reset** to reset the time to zero and clear any recorded lap times.

Using the World Clock

1. Select **MENU** **OK** > **Tools** > **World Clock**.
2. Press the navigation key right or left to scroll through different time zones.

Tip: Press **Summer** (left softkey) or **Standard** (right softkey) for changing between summer and standard time, if applicable. The  icon is shown while summer time is displayed.

Using the Calculator

1. Select **MENU** **OK** > **Tools** > **Calculator**.
2. Enter numbers using your keypad. Press the left softkey to insert a decimal point.
3. Press the appropriate navigation key for an arithmetic option. (**Up** for addition, **Down** for subtraction, **Left** for multiplication, **Right** for division.)
4. Enter numbers and press **MENU** **OK** for the result.
 - To clear the numbers, press **CLR** (right softkey).

9. Voice Services

Using Automatic Speech Recognition (ASR)

Your phone is equipped with an Automatic Speech Recognition (ASR) that allows you to make calls or launch phone functions using your voice. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

Activating ASR

With the phone open:

- ▶ From standby mode, press and hold **TALK**, **SPEAKER** or *******.

With the phone closed:

- ▶ Press and hold *******.

– or –

When **Headset Button** is set to **Voice Calls** in headset mode (see page 49), press and hold the Turbo Button (the operation button) on your optional headset.

The phone displays “Say a command” screen and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

Available ASR commands are:




- **Call** <Name or #> to call an entry in your Contacts list or to the phone number you say. (See page 92 for details.)
- **Go To** <Menu> to jump directly to the menu items or applications. (See page 92 for details.)
- **Check** <Item> to check your phone’s status. (See page 93 for details.)

Note: Use ASR in a quiet environment so it can accurately identify your voice.

Tip: During ASR operation, press **Help** (left softkey) to get instructions for using the software.

Making a Voice Call Using ASR

With ASR, you can make a voice call by reciting a name or phone number.




1. Press and hold ,  or .
2. If you hear “Say a command,” say “**Call.**”
3. If you hear “Say the name or number,” say a name or a phone number.
4. If you hear “Which Location?,” say a phone type (for example, “Mobile”).

Shortcut: To execute several commands at a time, you can say several commands in sequence (for example, “Call, John Jones, Mobile”).

Note: If ASR does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying “**Yes.**” Say “**No**” to change the selection.

Opening Menus Using ASR

You can jump directly to 15 menu items or applications by saying “**Go to**” followed by a menu option.

1. Press and hold ,  or .
2. If you hear “Say a command,” say “**Go to.**”
3. If you hear “Which shortcut?,” say a menu option name (for example, “Messaging”). (To display additional menu options, say “**More options.**”)

Shortcut: To execute several commands at a time, you can say several commands in sequence (for example, “Go to Messaging”).

Checking Phone Status Using ASR

You can use ASR to obtain information about your phone:

- My Phone Number
- Network
- Signal Strength
- Battery
- Status (all of the above except phone number)

1. Press and hold **TALK**, **SPEAKER** or **⋮**.
2. If you hear “Say a command,” say “**Check.**”
3. If you hear “Which status item?,” say a command.

ASR Options

To change ASR confirmation:

1. Press and hold **TALK**, **SPEAKER** or **⋮**.
2. Press **Settings** (right softkey) > **Confirmation** and select an option.
 - **Automatic** to display the list and ask for your confirmation if the system is not sure what you said.
 - **Always Confirm** to always display the list and ask for your confirmation.
 - **Never Confirm** to never display the list and ask for your confirmation.

To adapt the system to your voice:

1. Press and hold **TALK**, **SPEAKER** or **⋮**.
2. Press **Settings** (right softkey) > **Adaptation** > **Adapt Voice**.
3. Press **Start** (left softkey) and repeat each word, phrase, or telephone number you hear.

To reset the adaptation:

1. Press and hold **TALK**, **SPEAKER** or **⋮**.
2. Press **Settings** (right softkey) > **Adaptation** > **Reset Voice**.
3. Read the message and press **Yes** (left softkey) if you are certain you would like to reset.

To change ASR mode:

1. Press and hold **TALK**, **SPEAKER** or **☰**.
2. Press **Settings** (right softkey) > **Modes** and select an option.
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.
 - **Readout Mode** to prompt for required information and to read aloud the content displayed on the main screen.

To change ASR dialing region:

1. Press and hold **TALK**, **SPEAKER** or **☰**.
2. Press **Settings** (right softkey) > **Dialing region** and select an option.
 - **North America** to recognize only numbers valid in North America.
 - **Other** to recognize any number regardless of location.

To display ASR software version:

1. Press and hold **TALK**, **SPEAKER** or **☰**.
2. Press **Settings** (right softkey) > **About**.

Managing Voice/Call Memos

You can use your phone's voice recording to record brief memos to remind you of important events, phone numbers, or grocery list items.

Tip: If 10-4 is set to Disable and the 10-4 service is locked, you can use **Memo** (left softkey) as a key to access Voice/Call Memo menu in standby mode. You can also use it to record memos.

Recording Voice Memos

1. Select **MENU OK** > **Tools** > **Voice Memo** > **Record**.
– or –
Press **Memo** (left softkey) > **Record**.
2. Start recording after the beep.
3. To finish recording, press **MENU OK**, **BACK**, or **END**.

Note: The total recording time depends on the available memory space on your phone.

Recording Call Memos

1. During a call, press **Options** (right softkey) > **Call Memo Rec**.
2. Start recording after the beep.
3. To finish recording, press **MENU OK** or **BACK**.
 - Recording also stops when the call is disconnected.

Note: Only the other party's voice is recorded during this process.

Voice and Call Memo Options

1. Select **MENU OK** > **Tools** > **Voice Memo** > **List**.
– or –
Press **Memo** (left softkey) > **List**.
2. Highlight a voice memo and press **Options** (right softkey).
3. Select an option and press **MENU OK**.
 - **Play** to play selected voice memos or all voice memos.
 - **This** to play the selected memo.
 - **Multiple** to play selected memos.
 - **All** to play all memos.

Note: Press **Speed** (left softkey) to adjust the playing speed among three speeds (1x, 2x, and 3x) which will be displayed on the lower part of the screen.

- **Speaker On** or **Speaker Off** to activate or deactivate the speakerphone mode.
- **Edit Title** to edit the title of a voice memo.
- **Properties** to display information about a voice memo.
- **Type Filter** to display only voice memos or only call memos.
- **Sort by** to sort voice memos by time recorded, name, or file size.
- **Go to Time** to set the starting point of the playing.
- **Delete** to delete either selected memos or all memos.

Deleting Voice and Call Memo

To delete an individual memo:

1. Select **MENU OK** > **Tools** > **Voice Memo** > **List**.
– or –
Press **Memo** (left softkey) > **List**.
2. Highlight the memo you want to delete and press **Options** (right softkey) > **Delete** > **This** > **Yes** (left softkey).

To delete all memos:

1. Select **MENU OK** > **Tools** > **Voice Memo** > **List**.
– or –
Press **Memo** (left softkey) > **List**.
2. Press **Options** (right softkey) > **Delete** > **All** > **Yes** (left softkey).

To delete multiple selected recordings:

1. Select **MENU OK** > **Tools** > **Voice Memo** > **List**.
– or –
Press **Memo** (left softkey) > **List**.
2. Press **Options** (right softkey) > **Delete** > **Multiple**.
3. Select the memos you want to delete and press **Delete** (left softkey) > **Yes** (left softkey).

Setting the Recording Guard

With this feature, you can record voice memos without interruption from incoming calls.

1. Press **MENU** **OK** > **Tools** > **Voice Memo**.
– or –
Press **Memo** (left softkey).
2. Press **Settings** (right softkey) > **Recording Guard**.
3. Select **On** or **Off**.

Setting the Recording Mode

This feature allows you to match the sensitivity of the microphone to the type of recording you are making.

1. Select **MENU** **OK** > **Tools** > **Voice Memo**.
– or –
Press **Memo** (left softkey).
2. Press **Settings** (right softkey) > **Recording Mode**.
3. Select an option and press **MENU** **OK**:
 - **Dictation** to record a single voice.
 - **Conference** to record multiple voices.

Setting the Audio Quality

This feature enables you to set the quality of your recording.

1. Select **MENU** **OK** > **Tools** > **Voice Memo**.
– or –
Press **Memo** (left softkey).
2. Press **Settings** (right softkey) > **Audio Quality**.
3. Select **High** or **Low** and press **MENU** **OK**.

Setting Up Screen Call


You can screen incoming calls by using a recorded announcement, either a pre-recorded one or one that you record. You can also record the caller's message.

Activating Screen Call

To start Screen Call when you have incoming calls:

- ▶ When the phone rings or vibrates, press **Options** (right softkey) > **Screen Call**.

To set Auto Screen Call:

1. Select **MENU OK** > **Tools** > **Voice Memo** > **Screen Call** > **Auto** > **On**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Auto** > **On**.
2. Set the answer delay by using numeric keys or by pressing the navigation key up or down.
3. Press **MENU OK** or **OK** (left softkey). The  icon is displayed on the screen.

Tip: While the caller's message is being recorded, press **TALK** to answer the call, or press **END** to stop recording and disconnect the call.

Selecting an Announcement for Screen Call

1. Select **MENU OK** > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Announcement**.
2. Depending on your preference, select **Pre-Recorded** or **Custom**.

Recording Name for a Pre-Recorded Announcement

1. Select **MENU OK** > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Announcement**.
2. Highlight **Pre-Recorded** and press **Edit** (right softkey) > **Record Name**.
 - If your name has already been recorded, select **Yes** or **No** for overwriting.
3. Press **MENU OK** to start the 1st recording. (The maximum recording time is 12 seconds.)
4. Press **MENU OK** to stop recording.
5. After the 1st recording, press **MENU OK** again to start the 2nd recording.
6. Press **MENU OK** to stop recording.

Recording a Customized Announcement

1. Select **MENU OK** > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Announcement**.
2. Highlight **Custom** and press **Edit** (right softkey) > **Record**.
 - If your announcement has already been recorded, select **Yes** or **No** for overwriting.
3. Press **MENU OK** to start the 1st recording. (The maximum recording time is 12 seconds.)
4. Press **MENU OK** to stop recording.
5. After the 1st recording, press **MENU OK** again to start the 2nd recording.
6. Press **MENU OK** to stop recording.

Reviewing an Announcement



1. Select **MENU** **OK** > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Announcement**.
2. Highlight **Pre-Recorded** or **Custom** and press **Edit** (right softkey) > **Play** or **Play:Speaker**.

Deleting an Announcement

1. Select **MENU** **OK** > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
– or –
Press **Memo** (left softkey) > **Screen Call** > **Announcement**.
2. Highlight **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
3. Select **Delete Name** or **Delete**. (A confirmation will be displayed.)
4. Press **Yes** (left softkey).

10. 10-4


10-4 allows you to enjoy quick, two-way, “walkie-talkie-style” communication with your friends, family, and co-workers. You can make 1-to-1 or 1-to-many calls (up to 5 others on the same call) to any other 10-4 user, anywhere on the home network.

You can make and receive 10-4 calls when your phone displays  or .

Warning! Please be sure that enabling 10-4 affects the phone’s talk and standby times to a large degree.

Starting 10-4

Setting 10-4 Mode

- ▶ Select  > **Settings** > **10-4** > **Enable/Disable** > **Enable** or **Disable**. (The default setting is **Disable**.)
 - **Enable** to make or receive 10-4 calls any time except during a phone call or communication.
 - **Disable** to disable your phone’s 10-4 service; you will not be able to make or receive 10-4 calls or access your 10-4 List.

Tip: You can also set the 10-4 mode by selecting  > **Settings** > **More... > Restrict and Lock** > **10-4** > **Enable/Disable** > **Enable** or **Disable**.

10-4 Call Alerts

There are several ways your phone alerts you during 10-4 calls.

When you make or receive a 10-4 call:

- The phone beeps (depending on the Ringer Type).
- The backlight illuminates.
- The screen displays a 10-4 call message.
- The other party’s 10-4 number and name (if available) are displayed.
- The screen displays who has the floor.

The status of a 10-4 call:

- The Green LED On indicates you have the floor and may speak.
- The Red LED On indicates other party has the floor.
- The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding the 10-4 key on the left side of your phone (---).)

Making and Receiving a 10-4 Call

Displaying the 10-4 List

- ▶ From standby mode, press **10-4** (left softkey) or (---) to access the 10-4 List.

To display the Recent 10-4:

- ▶ Select **MENU OK** > **History** > **10-4** (left softkey).

Note: Recent 10-4 appears only when 10-4 mode is set to Enable.

Tip: The first time you access the list, the 10-4 Help message will appear. Press **Yes** (left softkey) and **Next** (left softkey) to read a brief introduction of 10-4.

Selecting a 10-4 List

When your phone displays a 10-4 List, the left softkey is labeled **Go to**. To switch to another 10-4 list, press **Go to** (left softkey) and select your desired list and press **MENU OK**.

- **Company List/Company Grps.** contain company-provided contacts (up to 200 entries). Your company list can only be created and modified by an authorized administrator on the 10-4 server. When the lists are empty, Company List/ Company Grps. will not appear on the display.
- **Personal List/Personal Grps.** contain your personal 10-4 entry's names and numbers, separately or in groups. You can create and edit your own personal list. Your phone can store a total of 200 entries (you may include up to five entries per group).
- **10-4 Outgoing** shows the last 20 different 10-4 calls you placed.

- **10-4 Incoming** shows the last 20 different 10-4 calls you accepted.
- **10-4 Missed** shows the last 20 10-4 calls you missed.

Note: The  icon next to the group name indicates a group.

Making a 10-4 Call (1-to-1 Call)

You can place a 1-to-1 10-4 call by selecting an entry from the 10-4 List.

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey), and select the list from which you want to place a call (**Company List**, **Personal List**, **10-4 Outgoing**, **10-4 Incoming**, or **10-4 Missed**) and press **MENU OK**.

Tip: You can also select **Enter 10-4#** from **Go to** option to enter a 10-4 number directly. See page 105 for details.

3. Highlight the entry you want to call, and press and hold **---** to place the call and get the floor. (You will see **10-4 calling...** and **Connecting...** followed by **"You have floor."** You can now begin speaking.)
– or –
Highlight the entry you want to call and press and release **---** to place the call. (The call will connect as described above, but **"Floor is open."** will appear on the screen and either you or other party may press and hold **---** to take the floor and speak.)

Note: During a 10-4 call, the "floor" is the right to speak. When you see **"Floor is open."**, the first person to press **---** can speak (while holding the key). Only the person who has the floor can speak. The phone beeps if you press **---** when the other party has the floor.

4. Continue holding **---** as you speak. When you finish speaking, release **---** to allow the other party to speak. (When the other party takes the floor, you will see the speaker's name and phone number and the text **"has floor."**)
5. When you are finished, press **END**.

Note: When neither party has the floor during a 10-4 call, “**Floor is open.**” appears on the display. If no one takes the floor for 20 seconds, the 10-4 call ends automatically.

Tip: If you press **TALK** or **SPEAKER** during step 3 of “Making a 10-4 Call (1-to-1 Call)” on page 103, you can make a standard voice call.

Making a 10-4 Call (Group Call)

You can make a 10-4 call to all members in a group entry, which you have in your 10-4 List. You can communicate with up to five members at a time.

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey), and select the list from which you want to make a Group call (**Company Grps.** or **Personal Grps.**) and press **MENU OK**.
3. Highlight the group entry you want to call, and press and hold **---** to place the call and take the floor. (You will see **10-4 calling...** and **Connecting...** followed by “**You have floor.**” Continue with the 10-4 call as described previously.)
 - To make a 10-4 call to a group member, select your desired group, highlight your desired group member, and press and hold **---**.
 - If one of the group members takes the floor, you will see the member’s name and 10-4 number on the display.
4. When the call is finished, press **END**.

Tip: The phone beeps if you press **---** when another party has the floor.

You can also make a Group Call after checking the group member. Press **MENU OK** to display group members, highlight **Call Group** and press and hold **---** during step 3 above.

To redial your last 10-4 call, highlight **Redial** and press and hold **---** from the 10-4 List.

Making a 10-4 Call by Entering a Number

1. From standby mode, enter the 10-4 number of 10 digits (or 11 digits starting with 1).
2. Press and hold **[...]** to place the 10-4 call.
3. Continue with the 10-4 call, pressing and holding **[...]** to speak and releasing it to allow other parties to reply.
4. When the call is finished, press **[END[®]]**.
– or –
 1. Press **[10-4]** (left softkey) or **[...]** to access the 10-4 List.
 2. Press **[Go to]** (left softkey) > **Enter 10-4#**.
 3. Enter the 10-4 number you want to dial.
 4. Follow steps 2-4 above.

Missed Call Notification for 10-4 Calls

When an incoming 10-4 Call is not answered, the Missed Call Notification is displayed on your screen.

To call the last missed 10-4 Call:

- ▶ Simply press and hold **[...]** while the Missed Call Notification is displayed. (Continue with the 10-4 call as described previously.)





To delete the missed 10-4 Call Log:



- ▶ Press **[Dismiss]** (right softkey).



To display the missed 10-4 call:

- ▶ Press **[View]** (left softkey) while the Missed Call Notification is displayed. To call the entry, highlight the entry you want to call, and press and hold **[...]**. (Continue with the 10-4 call as described previously.)

Receiving a 10-4 Call

1. Make sure your phone's 10-4 mode is enabled (see "Setting 10-4 Mode" on page 101).
2. When you receive a 10-4 call from a Contacts entry, "10-4 Call," the entry's name, and the 10-4 number appear on the display.
 - When you receive a group call, "Group Call", group member's name (if available), and the 10-4 number appear.
3. When the person placing the call keeps the floor holding , you will see the entry name and 10-4 number along with "has floor.," and you will hear the caller speaking.
4. When the caller finishes speaking and releases , you will see "Floor is open." on the display screen. Press and hold  to take the floor and reply to the caller. (You will see "You have floor." and hear a tone confirming that you may speak.)
5. When the conversation is finished, press .

Note: You can change the volume and the speaker setting while a 10-4 call is activated. **Volume:** Adjust the voice volume by using  or by pressing the navigation key up or down (except when you are pressing and holding ).

Speaker: Switch the speaker on or off by pressing  or .

10-4 Options

When you use 10-4, several user options are available by pressing **Options** (right softkey).

- **Edit** to edit a 10-4 number and/or name. (See page 111.)
- **Send Text** to send a text message. (See page 120 for details.)
- **Copy to Personal** to copy a 10-4 last call or a 10-4 entry in the Personal Grps., Company List or Company Grps. to the Personal List. (This option does not appear if the entry is already in the Personal List.)
Copy Group to copy a Company Group to the Personal Group List. (This option does not appear if the entry is already in the Personal Group List.)
- **Copy to Contacts** to copy a 10-4 entry to the Contacts.
- **Delete** to delete an entry. **Delete Group** appears when you highlight a group entry.
- **Add Contact** to add a new entry. (See page 109 for details.)
Add Group appears when you highlight a group entry. (See page 110 for details.)
- **Delete 10-4 List** to delete lists saved in the 10-4 (except Company List/Company Grps.).
- **Help** to see the 10-4 instructions page.

Adding and Editing 10-4 List Entry

Copying an Entry to your Personal List, Personal Group List, or Contacts

You can copy a 10-4 entry to your Personal or Personal Group List, or Contacts from several different sources.

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey), and select the list from which you want to copy an entry (**Company List, Company Grps., Personal List, Personal Grps., 10-4 Outgoing, 10-4 Incoming, or 10-4 Missed**) and press **MENU OK**.
3. Highlight the entry you want to copy (or scroll to highlight the **Redial** entry at the top of your screen) and press **Options** (right softkey). Select an option and press **MENU OK**.
 - **Copy to Personal** to copy the entry to the Personal List. (See page 107.)
 - **Copy Group** to copy the group entry to the Personal Group List. (See page 107.)
 - **Copy to Contacts** to copy the entry to the Contacts. (See page 107.)
4. Press **Yes** (left softkey) to copy and save the entry to your Personal or Personal Group List, or Contacts.

Note: Your Company Lists can be set up and edited only by an administrator on the 10-4 server. You cannot add or edit 10-4 Contacts/group entries to your Company Lists.

Saving a 10-4 Number

You can save a 10-4 number from the ending display to your Personal List.

1. From the ending display, press **Options** (right softkey) > **Save**.
2. Enter a name and press **MENU OK**.
3. Press **Save** (left softkey) > **Yes** (left softkey).

Finding an Entry in the 10-4 List

You can find your desired entry by entering a few letters.

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey), and select your desired list (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**) and press **MENU OK**.
3. Enter the first letter or the first few letters of the name.
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press **MENU OK** to select your desired entry.

Adding a New Entry to Your Personal List

You can store the total of 200 entries in the Personal List.

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey) > **Personal List** > **Add Contact**.
3. Enter a name for the new entry and press **MENU OK**. (This is the name you will see when calling or receiving a call from the entry.)
4. Select the **10-4 Number** field, enter the entry's 10-digit 10-4 number (their phone number) and press **MENU OK**.
5. Press **Save** (left softkey) to save the new entry to your Personal List.

Tip: You are not allowed to use the following symbols during step 3: @ ; / *) (.

Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly, or select the member from the Company List or Personal List.

1. Press **10-4** (left softkey) or **...** to access the 10-4 List.
2. Press **Go to** (left softkey) > **Personal Grps.** > **Add Group**.
3. Enter a Group Name, and press **OK** (left softkey) > **Next** (left softkey).
4. Press **Add** (right softkey).
5. Select an option and press **MENU OK**.
 - **New** to add a new entry. Follow steps 3-4 in “Adding a New Entry to Your Personal List” on page 109, and then press **Save** (left softkey).
 - **from Company** to add an entry from your Company List (if applicable).
 - **from Personal** to add an entry from your Personal List.
 - If you select **from Company** or **from Personal**, highlight each entry you want to add, and then press **MENU OK** or **Pick** (right softkey) to select the entry with a check mark. Then press **Done** (left softkey).
6. Press **Update** (left softkey) to update your Personal Group List with the new group entry.

Tip: You can also add members directly. From step 4 above, highlight **Add Members** and press **MENU OK**. Enter the new member’s name and 10-4 number and press **Save** (left softkey) to save the entry.

Editing an Entry in Your Personal List

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey) > **Personal List**.
3. Highlight the entry you want to edit and press **Options** (right softkey) > **Edit**.
4. Select the field you want to edit (**Name** or **10-4 Number**) and press **MENU OK**.
5. Edit the entry, and press **OK** (left softkey) > **Save** (left softkey) to save your changes.

Editing a Group in Your Personal Group List

1. Press **10-4** (left softkey) or **---** to access the 10-4 List.
2. Press **Go to** (left softkey) > **Personal Grps.**
3. Highlight the group entry you want to edit and press **Options** (right softkey) > **Edit**.
4. Edit the group name and press **OK** (left softkey).
 - If you do not need to edit the group name, press **Next** (left softkey) and skip step 5.
5. Press **Save** (left softkey) to save your changes.
6. To edit a group member, highlight the entry you want to edit and press **Options** (right softkey) > **Edit**.
7. Select the field you want to edit (**Name** or **10-4 Number**) and press **MENU OK**.
8. Edit the entry, and press **OK** (left softkey) > **Save** (left softkey) > **Update** (left softkey).

Deleting 10-4 List Entries

Deleting an Entry in Your Personal List or Personal Group List

To delete an entry or a group entry:

1. From the 10-4 List, press **Go to** (left softkey) > **Personal List** or **Personal Grps.**
2. Highlight the entry you want to delete and press **Options** (right softkey).
3. Select **Delete** > **Yes** (left softkey) to delete the entry in **Personal List**.
– or –
Select **Delete Group** > **Yes** (left softkey) to delete the group entry in **Personal Grps.**

To delete a group member:

1. From the 10-4 List, press **Go to** (left softkey) > **Personal Grps.**
2. Select your desired group and press **MENU OK** to display the group members.
3. Highlight the entry you want to delete and press **Options** (right softkey).
4. Select **Delete** > **Yes** (left softkey) > **Update** (left softkey).

Deleting a 10-4 List

You can delete all lists saved in the 10-4 (except Company List/Company Grp. List).

1. From the 10-4 List, press **Options** (right softkey) > **Delete 10-4 List**.
2. Select an option and press **MENU OK**.
 - **Outgoing** to delete all outgoing 10-4 calls.
 - **Incoming** to delete all incoming 10-4 calls.
 - **Missed** to delete all missed 10-4 calls.
 - **All Calls** to delete all 10-4 calls history, as well as Recent 10-4.
 - **All Personal Ent.** to delete all entries in Personal Lists and Personal Grps. You are prompted to enter your 4-digit lock code.
3. Press **Yes** (left softkey).

Tip: The Redial information will not be deleted.

To delete the Recent 10-4 entries:

1. Select **MENU OK** > **History** > **10-4** (left softkey).
2. Highlight the entry you want to delete and press **Options** (right softkey).
3. Select an option and press **MENU OK**.
 - **Delete** to delete a Recent 10-4 entry.
 - **Delete All** to delete all Recent 10-4 entries.
4. Press **Delete** (left softkey).

Note: Recent 10-4 appears only when 10-4 mode is set to Enable.

Updating the Personal List and Personal Groups

To update your Personal List and Personal Groups manually through 10-4 server:

- ▶ Select **MENU OK** > **Settings** > **10-4** > **List Update**.

Managing 10-4 Settings

Setting Speed Dialing for 10-4 Entries

1. Select **MENU OK** > **Settings** > **More...** > **Contacts** > **Speed Dial #'s**.
– or –
Press **Contacts** (right softkey) > **Options** (right softkey) > **Settings** > **Speed Numbers**.
 - See “Using Speed Dialing” on page 22 for how to use speed dialing.
2. Select an unassigned number and press **MENU OK**.
3. Press **Go to** (left softkey), and select the list from which you want to set a speed dial (**Company List**, **Company Grps.**, **Personal List**, or **Personal Grps.**) and press **MENU OK**.
4. Select an entry and press **MENU OK**.
– or –
Select a group and press **MENU OK**, and then select an option and press **MENU OK**.
 - **Assign** to assign the selected group as a speed dial.
 - **Details** to display the group details. You can select the group member from the group list.

To use speed dial for a 10-4 entry:

- ▶ From standby mode, press the appropriate key (locations 2-9) and press **---**.

Setting 10-4 Guard

This feature enables you to display the warning message when you cannot receive 10-4 calls. The warning message appears when you are launching the Web or Java applications.

1. Select **MENU OK** > **Settings** > **10-4** > **10-4 Guard**. (A message will be displayed.)
2. Press **OK** (left softkey) to continue.
3. Select **On** to activate 10-4 Guard. (Select **Off** to deactivate this feature.)

Setting Ringer Types for 10-4 Calls

1. Select **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Ringer Type**.
2. Select **10-4 Calls**, **10-4 Missed**, or **10-4 Floor Tone**.
3. Select your desired ringer type and press **[MENU OK]**.

Setting the Ringer Volume for 10-4 Calls

1. Select **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Ringer Volume**.
2. Select **Separate Vol.** and press the navigation key left or right to select a volume level.
3. Press **[Done]** (left softkey) to save.

Setting a Vibrate Type for 10-4 Calls

You can select your favourite vibrate type for 10-4 calls.

1. Select **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Vibrate Type**.
2. Select **10-4 Calls** or **10-4 Missed**.
3. Select a vibrate type and press **[MENU OK]**.

Setting an Alert Notification for 10-4 Calls

1. Select **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Alerts**.
2. Select **10-4 Calls**, **10-4 Missed**, or **Headset Alert**.
3. Select an option and press **[MENU OK]**.

To adjust the floor tone volume:

1. Select **[MENU OK]** > **Settings** > **10-4** > **Ringers** > **Alerts**.
2. Select **Floor Tone Vol.** > **Earpiece** or **Speaker**.
3. Use your navigation key or volume key to select a volume level and press **[Done]** (left softkey).

Tip: You can also set alerts using the Alerts settings menu. (See “Alert Notification” on page 33.)

Turning On or Off the Speakerphone for 10-4 Calls

You can turn on and off the 10-4 speakerphone mode during a 10-4 call, in standby mode, and when the Main Menu is displayed.

To turn on or off the 10-4 Speakerphone Mode:

1. Make sure your phone's 10-4 mode is enabled. (See "Setting 10-4 Mode" on page 101.)
2. Press **[SPEAKER]** or **[•••]**.

Tip: When the ringer volume is set as **Silence All**, you are not able to turn on or off the 10-4 speakerphone mode unless you change the setting. (See "Silence All" on page 34.)

Selecting the Default View of the 10-4 List

1. Select **[MENU OK]** > **Settings** > **10-4** > **Default View**. (The default setting is Personal List.)
2. Select your desired list and press **[MENU OK]**.

Setting the Floor Display of the 10-4 Calls



1. Select **[MENU OK]** > **Settings** > **10-4** > **Floor Display**.
2. Select **Text Only** or **Text & Image**.
 - To see a display preview of the **Text & Image**, press **[Preview]** (right softkey).

11. Messaging

New Messages



You can set your phone to display an icon and message notification or just display an icon notification when you receive a new text message, picture message, or Web Alert. See “Setting Message Notification Display” on page 41.

To view a new message with an icon and message notification:

- ▶ A text message or a Web Alert will automatically appear on your phone’s screen with  icon.
- ▶ A picture message will automatically appear with the information of the message and  icon. Press **Go** (left softkey) to go to the Web site to view the message.

Note: If the picture message does not include the URL address, the left softkey displays the **OK** option. You can press it to leave the message read.

To view a new message with an icon notification or during other operations:

- ▶  or  icon will appear on your phone’s screen. To view messages, see “Displaying Messages” on page 119.



Note: When there are two or more notifications, a Missed Alerts list displayed in standby mode. Highlight a text/picture message in the list and press **View** (left softkey) to display the message details.

- Press **Call** (left softkey) to dial the callback number.
- Press **Reply** (left softkey) to reply to the sender.
- Press **Go** (left softkey) to go to the Web site.
- Press **Forward** (left softkey) to forward the message (appears only if there is no sender’s phone number, email address, or callback number).
- Press **Options** (right softkey) to display options.

Displaying Messages

To display a text message from the main menu:

1. Select **MENU OK** > **Messaging**.
2. Select **Text** > **Inbox**, **Sent Mail**, **Pending**, **Drafts**, or your defined folder and press **MENU OK**.
3. Select the message you want to see and press **MENU OK**.
(To display the message options, press **Options** [right softkey].)

Note: When you have duplicated messages,  icon appears. After opening the messages,  icon will be displayed.

To display a picture message from the main menu:

1. Select **MENU OK** > **Messaging** > **Picture Msg**.
2. Select your desired picture message and press **MENU OK**.
3. Press **Go** (left softkey) to go to the Web site to view the message.

To display Web Alerts:

1. Select **MENU OK** > **Messaging** > **Web Alerts**.
2. Select the header of the message you want to see and press **MENU OK**. (To display the Web Alerts options, press **Options** [right softkey].)
3. Press **Go** (left softkey) to go to the Web site to view the message.

To read other messages:

- ▶ Press the navigation key right or left to read the next or previous message.

Note: Web Alerts include URLs etc. When you buy a ringer or image through your computer for your phone, your phone will receive Web Alerts. Press **Go** (left softkey) to go to the website and follow steps to download it to your phone.

If a picture message or a Web Alert does not include a URL address, the left softkey displays the **OK** option. You can press it to leave the message read.

Sending a Text Message

1. Select **MENU** **OK** > **Messaging** > **Send Text**.
2. Select an entry method you prefer:
 - **Go to Contacts** to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - **Phone#** to use the keypad to enter a wireless phone number directly.
 - **Email** to enter the recipient's email address.

Tip: You can also press **Others** (right softkey) to select recipients from your desired list.

3. Press **Next** (left softkey) when you have finished entering recipients (up to 50 recipients per message).
4. Compose a message. When you have finished composing, press **OK** (left softkey).
 - To enter a message, use your keypad to type your message. Press **Mode** (right softkey) to select a character input mode. (See "Selecting a Character Input Mode" on page 24.)
5. Scroll down to select the message priority and set the callback number and the signature.
6. Review your message and press **Send** (left softkey). (To change the recipients or save the message to the Draft folder, press **Options** [right softkey].)

Tip: You can also send a text message when the left softkey displays the **Send Text** option.

You can simply press the **TEXT** key to access the Send Text screen.

Sending Canned Messages

Canned messages make sending text messages to your friends, family, and coworkers easier than ever.

1. Select **MENU OK** > **Settings** > **Messaging** > **Canned Messages**.
2. Highlight a message you want to send and press **Options** (right softkey) > **Send Text**.
3. Follow steps 2-6 in “Sending a Text Message” on page 120.

Creating Folders for Messages

You can create up to ten folders to store your Messages. When 10 of your defined folders exist, the “Create Folder” option will not appear.

To create a new folder:

1. Select **MENU OK** > **Messaging** > **Text**.
2. Press **Options** (right softkey) > **Create Folder**.
3. Enter a folder name and press **MENU OK**.
4. Press **Save** (left softkey).

To set an optional feature for the added folder:

1. During step 3 above, scroll down to select other menu options.
 - **Auto Filing** to file messages into the folder automatically. The following options appear when this feature is set to on.
 - **Keyword** to set a keyword for Auto Filing. Enter a keyword and press **MENU OK**.
 - **Notify** to set the notification display to on or off when you have an unread message matching the defined folder.
 - **Envelope Icon** to set the envelope icon display to on or off when you have unread message matching the defined folder.
2. Press **Save** (left softkey).

Changing All Messages to Read

1. Select **MENU** **OK** > **Messaging** > **Text**.
2. Press **Options** (right softkey) > **Change All to Read**.
3. Press **Yes** (left softkey).

Tip: This option may not be displayed if you do not have any unread message in those folders.

Deleting Text Messages

To delete an individual message or all messages:

1. Select **MENU OK** > **Messaging** > **Text**.
2. Select **Inbox**, **Sent Mail**, **Pending**, **Drafts**, or your defined folder and press **MENU OK**.
3. Highlight a message you want to delete and press **Options** (right softkey) > **Delete**.
4. Select **This**.

Tip: This option may not be displayed if you save only one message in a folder.
To delete all messages, select **All**.

5. If you are certain you would like to delete, press **Yes** (left softkey).

To delete multiple messages:

1. Open any message folder. (By following steps 1-2 above.)
2. Press **Options** (right softkey) > **Delete** > **Multiple**.
3. Press **MENU OK** to select messages to be deleted.
4. Press **Delete** (left softkey).

To delete read messages:

1. Select **MENU OK** > **Messaging** > **Text** > **Inbox** or your defined folder and press **MENU OK**.
2. Press **Options** (right softkey) > **Delete** > **Read**.
3. Press **Yes** (left softkey).

12. Bluetooth®

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

Accessing the Bluetooth Settings Menu

- ▶ Select  > **Settings** > **Bluetooth**.

Turning Bluetooth On and Off





By default, your phone's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "available" to other in-range Bluetooth devices. To make your phone visible to other devices, you must also set your phone's visibility is not set to **Hidden**. (See page 125.)

1. From the Bluetooth Settings menu display, select **On/Off**.
2. Select **On** to enable Bluetooth. Select **Off** to disable Bluetooth.

Note: Enabling the Bluetooth settings affect the phone's talk and standby times.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

-  – Bluetooth feature is active (blue icon).
-  – Your phone is connected to a Bluetooth device (green icon).
-  – Your phone is discoverable by another Bluetooth device.
-  – Your phone is communicating with a Bluetooth device.

Using the Bluetooth Settings Menu

The Bluetooth Settings menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Setting your phone's visibility (or "discoverability") for other Bluetooth devices.
- Choosing a device for your Bluetooth calls.
- Entering or changing the name your phone uses for Bluetooth communication.
- Displaying your phone's Bluetooth device information.

1. Select  > **Settings** > **Bluetooth**.

2. Select an option and press .

- **On/Off** to enable or disable Bluetooth.
- **Visibility** > **Always Visible**, **Visible for 3 min.**, or **Hidden** to set your Bluetooth visibility.
- **Device Name** to set a Bluetooth name for your phone.
- **Device Info** to display your phone's Bluetooth name, address, class and available services.
- **Trusted Devices** to display a list of trusted Bluetooth devices.
- **Voice Priority** to choose the default device you want to use for incoming and outgoing calls.

Bluetooth Profiles

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **HSP: Headset Profile** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the phone. The call can then be received by pushing a button. While using your phone, you can use the headset instead of the phone by pushing a button on the headset, which has the same effect as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the left side of the phone.

Note: To cycle among the phone's earpiece, speakerphone and a Bluetooth headset during a call, press .

- **HFP: Hands-Free Profile** – This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the left side of the phone.
- **DUN: Dial-Up Network Profile** – This profile functions as a wireless data cable, connecting a computer or PDA to a network through your phone.
- **OPP: Object Push Profile** – This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange business cards (vCard), Contacts (vCard), and calendar (vCal).
- **BPP: Basic Printing Profile** – This profile enables simpler printing from your phone to a Bluetooth-enabled printer.
- **PBAP: Phone Book Access Profile** – This profile enables exchange of Contacts information between devices. It is typically used between a car kit and a mobile phone to allow the car kit to display the name of the incoming caller.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish a trusted connection between your phone and another Bluetooth device. When devices are paired, a passcode (PIN Code) is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select **[MENU OK]** > **Tools** > **Bluetooth** > **Add New** > **Search**.
(Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select a device and press **[MENU OK]**.
3. Select **Add to Trusted**.
4. Enter the PIN and press **[MENU OK]**. (When the owner of the other device enters the same PIN, the pairing is complete.)

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible.

Waiting for Request

If you are going to be using a Dial-Up Networking (DUN) profile to pair with a computer or PDA, you will need to allow the other device to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Select **[MENU OK]** > **Tools** > **Bluetooth** > **Add New** > **Wait for Request**.
2. Follow the onscreen prompts to enter your PIN and press **[MENU OK]**.

Using the Trusted Devices Options

Once you have created paired devices, several options are available from the trusted devices list.

1. From the Trusted List, highlight a device.
2. Press **Options** (right softkey) to display the following options:
 - **Connect** or **Disconnect** to connect to or disconnect from the Bluetooth device (if applicable).
 - **Send Item** to send an item saved in your phone to another Bluetooth device (if applicable).
 - **Print** to print the data using Basic Printing Profile or Object Push Profile (if applicable).
 - **Edit Name** to edit the name of the trusted device.
 - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices. (See "Setting Automatic Pairing" shown below.)
 - **Device Info** to display the trusted device's information.
 - **Sort by** to sort the trusted devices.
 - **Delete** to delete the selected device from the list.
 - **Delete All** to delete all devices from the list.
 - **Settings** to display the Bluetooth settings menu (see page 125).

Setting Automatic Pairing

You can configure your phone's accessibility to other Bluetooth devices.

1. From the trusted devices list, highlight a device and press **Options** (right softkey) > **Auto-Accept**.
2. Select a setting and press **MENU OK**.
 - **On** to allow the Bluetooth device to initiate a connection to the handset without any confirmation except pairing request.
 - **Off** to display a confirmation screen from which you can accept or deny a connection.

Sending Data via Bluetooth

You can send data saved in your phone to another Bluetooth device.

1. Select **MENU OK** > **Tools** > **Bluetooth**.
2. From the trusted devices list, highlight a device and then press **Options** (right softkey) > **Send Item**.
3. Select an item (**Business Card**, **Contacts**, or **Calendar Event**) and press **MENU OK**.
4. Follow the onscreen instructions to select the item(s) to send.
5. Make sure the other device is ready to receive data, and then press **Send** (left softkey).
6. If necessary, enter the PIN and press **MENU OK**.

Printing Data via Bluetooth

You can print out your Contacts entries, business cards, calendar events, and messages stored on the phone. (Some Bluetooth wireless technology enabled printers may not support this feature.)

To print data via Bluetooth:

1. Select **MENU OK** > **Tools** > **Bluetooth**.
2. Select a device from the trusted devices list and then press **Options** (right softkey) > **Print**.
3. Select a category (**Business Card**, **Contacts**, **Calendar Event**, or **Message**) and press **MENU OK**.
4. Follow the onscreen instructions to select the item(s) to print.
5. Select **Handset Default** or **Printer Default** and press **MENU OK**.
 - **Handset Default** to print items by creating a print job via the Basic Printing Profile.
 - **Printer Default** to print items using the default printer settings via the Object Push Profile.

6. Make sure the printer is ready to print data, and then select **Print** (left softkey).
7. If necessary, enter the PIN and press **MENU OK**.

Note: Before using the Bluetooth feature, make sure your phone's battery is fully charged.

13. Service Features

Using Voicemail

If your phone is subscribed to the voicemail service, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off.

Note: Voicemail service is optional and may require subscription fee.

New Voicemail Message Alerts

You can set your phone to display an icon and notification or just display an icon when you receive a new Voicemail message. See “Setting Message Notification Display” on page 41.

To view a new Voicemail details with an icon and notification:

- ▶ A voicemail notification automatically appears on your phone’s screen. Press **[TALK]** to listen to the message.

To view a new Voicemail details with an icon notification or during other operations:

- ▶ **[VM]** icon will appear on your phone’s screen. To view messages, select **[MENU OK] > Messaging > Voicemail** and press **[TALK]**.

Displaying Voicemail Details

- ▶ Select **[MENU OK] > Messaging > Voicemail > Details**.

Retrieving Your Voicemail Messages

- ▶ Press and hold **[1✉]**. (Your phone will dial your voicemail box.)
– or –
Select **[MENU OK] > Messaging > Voicemail > Call Voicemail**.

Note: You may be charged for airtime minutes when you are accessing your voicemail from your phone.

Clearing the Voicemail Icon

- ▶ Select **MENU** **OK** > **Messaging** > **Voicemail** > **Reset Indicator** > **Yes** (left softkey).

Editing Your Voicemail Number

You may need to change the number to retrieve your voicemail.

To change the number:

1. Select **MENU** **OK** > **Messaging** > **Voicemail** > **Edit Voicemail#**.
2. Edit your voicemail number and press **MENU** **OK**.

To reset your voicemail number:

1. Select **MENU** **OK** > **Messaging** > **Voicemail** > **Edit Voicemail#**.
2. Press **Options** (right softkey) > **Reset Voicemail#** > **Yes** (left softkey).

Responding to Call Waiting

When you are on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if available).

To respond to an incoming call while you are on a call:

- ▶ Press **TALK**. This puts the first caller on hold and answers the second call.

To switch back to the first caller:

- ▶ Press **TALK** again.

Note: Call Waiting may not be available while roaming off the home network.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press **TALK** or **SPEAKER**.
2. Once you have established the connection, press **TALK** to put the first caller on hold.
3. Select **Contacts**, **Recent History**, or **Enter Phone#**.
4. Choose a number from your Contacts or Recent History, or enter it directly, and press **TALK**.
5. When you are connected to the second party, press **TALK** or **Join** (right softkey) again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Web

With Web access on your phone, you will be able to browse full-color graphic versions – not just text versions – of your favourite website, making it easier than ever to stay informed while on the go. Check sports scores, trade stocks and shop, all on your phone, anywhere on the home network.

Launching the Web

- ▶ Press **WEB**.
- or –
- Select **MENU OK** > **Web**.

Net Guard

With the Net Guard feature enabled, your phone will ask for confirmation before connecting to the Internet. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

- ▶ Select **MENU OK** > **Settings** > **More...** > **Internet** > **Net Guard**.
 - **On** to enable the Net Guard.
 - **Off** to disable the Net Guard.

Tip: You can also block the Internet connection by selecting **MENU OK** > **Settings** > **More...** > **Restrict and Lock** > **Internet** (enter your lock code) > **Locked** (see page 54).

Browsing the Web


Creating a Bookmark

Bookmarks allow you to store the address of your favourite websites for easy access at a later time.




1. Launch the Web page you want to mark.
2. Press the right softkey to go to the browser menu.
3. Select **Mark this page** > **Save** (left softkey).

Note: Bookmarking a page does not store the page contents, just its address. Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.


Accessing a Bookmark

1. Launch the Web and press the right softkey to access the browser menu.
2. Select **View Bookmarks**.
3. Highlight the bookmark you wish to access and press  (or press the number corresponding to the bookmark you wish to access).


Editing a Bookmark

1. Access **View Bookmarks** menu. (See “Accessing a Bookmark” above.)
2. Highlight the bookmark you wish to edit and press the right softkey.
3. Select **Edit**.
4. Press  to edit the address or title.
5. Press  (left softkey) >  (left softkey).

Deleting a Bookmark

1. Access **View Bookmarks** menu. (See “Accessing a Bookmark” shown above.)
2. Highlight the bookmark you wish to delete and press right softkey.
3. Select **Delete**. (A confirmation screen will be displayed.)
4. Press  (right softkey) to remove the bookmark.

Going to a Specific Website

1. Launch the Web and press the right softkey to display the browser menu.
2. Select **Go to URL... > Input Address**.
3. Enter the URL of the website you wish to go to, and press .

Note: Not all websites are viewable on your phone.

Reloading a Web Page

1. Launch the Web and press the right softkey to display the browser menu.
2. Select **Refresh this page**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.


1. Launch the Web and press the right softkey to display the browser menu.
2. Select **More... > Restart Browser**.

Sending a Web Page

This feature allows you to send a URL (Web site address) you are viewing through text messaging.

1. Launch the Web and press the right softkey to display the browser menu.
2. Select **Send page**.
3. To complete and send a Web Page, follow steps 2-6 in "Sending a Text Message" on page 120.

Adjusting the Browser Sound Volume

1. Launch the Web and press the right softkey to display the browser menu.
2. Select **More... > Preferences > Sound Volume**.
3. Select your desired volume level by pressing the navigation key and press .

Downloading through the Wireless Web

Your phone allows you to download images (screen savers), ringers, games, etc., from a website.

1. Select **MENU** > **My Downloads**.
2. Select your desired data folder (for example, **Games**, **Ringers**, **Screen Savers**, or **Applications**).
3. Select **Get New** to start up the browser.
4. Select an item, and follow the system prompts.

Using Application Manager

The application manager lets you run applications in the background while accessing other items in your phone's menu.

1. Select **MENU** > **My Downloads** > **Application Mgr.**

Shortcut: You can also press **App. Mgr.** (left softkey) in standby mode while the application is running in the background.

2. Select an application or an alert and press **Options** (right softkey) to display the following options:
 - **View Alert** to display an alert screen.
 - **Ignore Alert** to ignore the alert.
 - **Bring to Front** to display the application screen in the foreground.
 - **Exit Application** to close the application.
 - **Launch New App** to launch a new application.

14. Safety Guidelines

Maintaining Your Phone's Peak Performance

- To maximize performance, do not touch the lower back portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions.

- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone or set your phone to Airplane mode before boarding any aircraft. To prevent possible interference with aircraft systems, Transport Canada regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you are in any area that has a potentially explosive atmosphere. Although it is rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fuelling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your telephone bill.

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only approved batteries and chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 0° C to 45° C (32° F to 113° F).
- Do not store the battery in a high humidity environment.
- Do not use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Do not attempt to disassemble or short-circuit the battery.
- Do not store the battery in high temperature areas for long periods of time. It is best to follow these storage rules:

Less than one month:

-20° C to 60° C (-4° F to 140° F)

More than one month:

-20° C to 45° C (-4° F to 113° F)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, please ensure that disposal of this in accordance with law and regulation.

- Do not dispose of the battery in fire; the cell may explode.
- Do not open or puncture the battery; the released electrolyte is corrosive and may cause damage to the eyes and skin.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Li-Ion battery.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

This product contains NetFront Browser of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries. This software is based in part on the work of the Independent JPEG Group.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.

Java & all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems Inc. in the U.S. and other countries.

SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.

Index

A

- Abbreviated Dialing 23, 48
- Airplane Mode 44
- Alarm Clock 87
- Alert Notification 33
- Animation 37
- Answering Calls 16
- Audio Quality 97
- Auto-Answer 47
- Automatic Speech Recognition (ASR) 91

B

- Background 37
- Backlight 35
- Battery
 - Charging 10
 - Installing 9
 - Removing 9
- Bluetooth 124
- Bookmarks 51, 134

C

- Calculator 90
- Calendar 38, 80
- Call Alarm 82
- Call Answer 48
- Call Memo 95
- Call Waiting 132
- Callback Number 43
- Canned Messages 42, 121
- Contacts 68
- Contrast 37
- Countdown Timer 88

D

- Dialing Options 15
- Display Screen Icons 5, 52
- Display Settings 35

E

- Emergency Numbers 18
- Entering Text 24

F

- Font Size 36

G

- GPS Navigation 28

H

- Headset Mode 49
- History
 - Deleting 67
 - Making a Call from 63
 - Making a Group from 66
 - Menu Options 64
 - Prepending a Phone Number from 67
 - Saving a Phone Number from 65
 - Thread 63
- Holster 11

I

- Icon Definition 5, 52
- In-Call Options 19

K

- Key Tone 32

L

- Language 25, 42, 47, 50
- Location Settings 40
- Lock Code 54
- Lock Mode 54
- Locking Internet 54
- Locking Phone 53
- Locking 10-4 54
- Locking Voice calls 54

M

- Making Calls 14
- Menu Diagram 60
- Menu Style 35
- Message Notification
 - Display 41
- Messaging 41, 118
- Missed Call Notification 18
- My Downloads
 - Accessing Menus 137
 - Deleting 56
- My Favourites 46

N

- Navigation Key 50
- Net Guard 134

P

- Phone (illus.) 1
- Phone Number
 - Dialing with Pauses 21
 - Displaying 14, 52
 - Finding 21
 - Saving 20, 21
- Plus (+) Code Dialing 22
- Power On/Power Off Tone 30
- Power Save Mode 35

R

- Recording Guard 97
- Recording Mode 97
- Resetting Your Phone 58
- Restricting Calls 55
- Ringer Types 29, 75, 116
- Roaming 59

S

- Safety 138
- Screen Call 16, 98
- Screen Saver 37, 137
- Security Menu 53
- Side Key Guard 50

- Silence All 34
- Sleep Mode 39
- Sound Settings 29
- Special Numbers 55
- Speed Dialing 22, 115
- Stopwatch 89

T

- 10-4 101
- T9 Text Input 25
- Text Greeting 36
- Text Message 118
- Three-Way Call 133
- To Do List 83
- Tone Length 32
- Tone Volume 32
- TTY 45
- Turning Your Phone On and Off 8

U

- Unlocking Your Phone 54

V

- Voice Guide 33
- Vibrate Type 32, 116
- Voice Memo 95
- Voicemail
 - Clearing Voicemail Icon 132
 - Editing Number 132
 - Message Alerts 131
 - Retrieving 131
- Volume Settings 31

W

- Web 134
- World Clock 90